


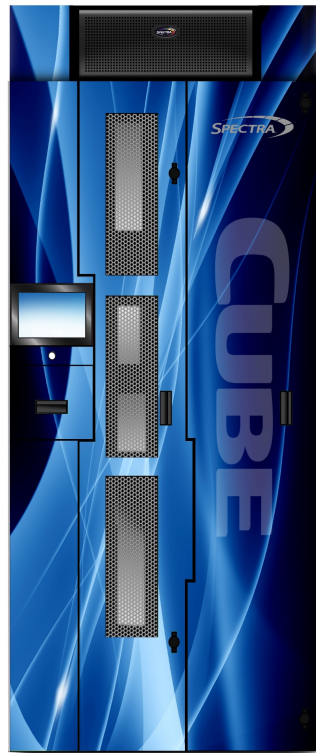

SPECTRA CUBE USER GUIDE



www.SpectraLogic.com

TABLE OF CONTENTS

Contacting Spectra Logic	9
About This Guide	14
Intended Audience	14
Product Status	14
Related Information	15
Chapter 1 - Library Overview	17
Library Features	18
LumOS software	18
Front Panel Components	21
Interior Components	23
Rear Components	25
Operator Panel Touch Screen	26
TeraPack Access Port (TAP)	27
Spectra Library Control Module	28
Exporting Controllers	30
Tape Drives	30
TeraPack Cartridge Handling	32
Overview of the LumOS User Interface	33
Access Options	33
LumOS Web Interface	33
User Interface Features	34
Logging in to the LumOS User Interface	36
Dashboard	37
Overview of the LumOS API	39
Accessing the LumOS API	39
Authentication in ReST API	40
Sample API Command	40
API Updates	40
Chapter 2 - Architecture Overview	41
Media Pools	42
Library Partitions	43
Storage Partitions	43
Cleaning Partitions and Auto Drive Clean	44

Component Identifiers	46
Full-Height Drive Library	46
Half-Height Drive Library	46
Drive Component Identifiers	47
Chamber Component Locators	47
Connectivity	49
TeraPorter Connectivity	49
Drive Connectivity	50
High-Availability Configurations	52
Redundant Connectivity	52
Redundant Power Supplies	53
Chapter 3 - Configuring Initial Settings	54
Configuring Users	55
Creating and Editing Users	56
Editing the Current User Password	57
Configuring Settings	58
Basic Settings	59
Automatic Logout Settings	60
Authentication Settings	60
Network Settings	63
Syslog and Remote Settings	64
Power Settings	65
Environment Settings	66
Dashboard Settings	67
Startup Scan Settings	68
Chapter 4 - Configuring Partitions	69
Partition Overview	70
Licensing	70
Configuring and Using Cleaning Partitions and Auto Drive Clean	70
Configuring and Using Storage Partitions	71
Storage Partition Options	71
Creating A Partition	74
Overview	74
Partition Interface	74
Creating A New Cleaning Partition	75

Creating A New Storage Partition	76
Modifying An Existing Partition	84
Deleting A Partition	86
Chapter 5 - Managing Encryption	87
BlueScale Encryption Key Management Overview	88
Understanding the Components	88
Configuring Encryption	89
Adding BlueScale Encryption	89
Exporting BlueScale Encryption Keys	92
Deleting BlueScale Encryption Keys	93
Authorization Settings	94
Chapter 6 - Using The Library	96
Controlling the Library Power	97
Power On the Library	97
Power Off the Library	98
Media Lifecycle Management	99
Navigating the MLM Screen	99
MLM Filters	100
Mount History	101
Media Details	102
Tape Mount Details	103
Drive Lifecycle Management	103
Overview	104
Drive Health Reports	104
Drive Lifecycle Management	105
Navigating the DLM Screen	105
Drive Mount History	106
Drive Details	107
Drive Actions	108
Licenses	109
Adding a License	109
Chapter 7 - Tape Media Operations	110
Move Media	111
Moving Media	111
Importing, Exporting, and Exchanging Magazines	113

Main TAP	113
Requirements	113
Restrictions	114
Performing an Import or Export	116
Importing Into a Storage or Cleaning Partition	117
Import Requirements	117
Prepare the Storage Partition or the Cleaning Partition	119
Import the Magazines	120
Exporting Magazines and Cartridges	122
Prepare for the Export	122
Export the Magazines or Cartridges in a Partition	123
Exchanging Magazines and Cartridges	124
Prepare for the Exchange	124
Exchange the Magazines or Cartridges in a Partition	124
Chapter 8 - Maintaining The Library	126
Servicing or Moving the Library	127
LumOS Package Update	128
Overview	128
Upload a Package	129
Set Active Package	130
Drive Firmware Update	131
Updating Drive Firmware in LumOS User Interface	131
Updating Drive Firmware Using ITDT	137
Managing Backups	140
Alerts	142
AutoSupport Logs	142
Configuring Alerts	144
Adding or Editing Alert Subscribers	145
Log Gathering	147
Gathering Logs	147
Robotics	148
Robot Details	148
Drive Test	149
Requirements	149
Performing a Drive Test	150

Diagnostics & Utilities	151
Chapter 10 - Technical Support	164
Accessing the Technical Support Portal	165
Create an Account	165
Log Into the Portal	166
Opening a Support Ticket	167
Search for Help Online	167
Submit an Incident Online	170
Submit an Incident by Phone	172
Returns	173
Appendix A - Best Practices	174
MLM Best Practices	175
Implementation Guidelines	175
Usage Policy Guidelines	176
Using Cartridges	177
Labeling Cartridges	177
Handling Cartridges	178
Storing Cartridges	179
Using Cartridges in the Library	180
Cartridge Rotation	181
Appendix B - Troubleshooting Drives	185
Identify the Problem	185
Interpret the Detailed Drive Information	187
Responding to the Drive Cleaning Notification	187
Interpreting the Status LED Information	188
Interpreting the SCD Codes	188
Appendix C - Specifications	195
Library Specifications	196
Data Storage Capacity	196
Size and Weight	197
Service Access Requirements	199
Shipping Size and Weight	199
Power Specifications	200
Environmental Specifications	203
Shock and Vibration Specifications	205

Interface Specifications	206
Component Interface Connectors	206
Network Interface Cable Requirements	206
Universal Serial Bus (USB) Support	208
NDMP Support	208
Tape Drive and Media Specifications	209
LTO Tape Drive Specifications	209
Drive-Based Encryption Highlights	213
Tape Media Specifications	213
Barcode Label Specifications	216
Interoperability and Software Compatibility	220
Appendix D - Regulatory & Safety Standards	221
EU Declaration of Conformity	222
Emission Standards	223
FCC Notice	223
Korean Notice	223
Safety Standards and Compliance	224
Laser Warning	224
Nemko Accreditation	225
Environmental Regulations	226
Waste of Electronic and Electrical Equipment (WEEE) Directive	226
Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)	226
Measures for the Administration of the Control of Pollution by Electronic Information Products (China)	226
Recycling Your Library	226
Conflict Minerals Policy	227

COPYRIGHT

Copyright © 2024-2026 Spectra Logic Corporation. All rights reserved. This item and the information contained herein are the property of Spectra Logic Corporation.

NOTICES

Except as expressly stated herein, Spectra Logic Corporation makes its products and associated documentation on an “AS IS” BASIS, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, BOTH OF WHICH ARE EXPRESSLY DISCLAIMED. In no event shall Spectra Logic be liable for any loss of profits, loss of business, loss of use or data, interruption of business, or for indirect, special, incidental or consequential damages of any kind, even if Spectra Logic has been advised of the possibility of such damages arising from any defect or error.

Information furnished in this manual is believed to be accurate and reliable. However, no responsibility is assumed by Spectra Logic for its use. Due to continuing research and development, Spectra Logic may revise this publication from time to time without notice, and reserves the right to change any product specification at any time without notice.

TRADEMARKS

ArcticBlue, BlackPearl, BlueScale, RioBroker, Spectra Cube, Spectra Logic, Spectra Vail, Spectra, SpectraGuard, StorCycle, TeraPack, TFinity, and TranScale are registered trademarks of Spectra Logic Corporation. All rights reserved worldwide. All other trademarks and registered trademarks are the property of their respective owners.

DOCUMENT INFORMATION

Document part number:

- 93940000

Current revision:

- H

Document revision history:

Revision	Date	Description
E	April 2025	Updated for LumOS 2.1.
F	May 2025	Updated for LumOS 2.2.
G	February 2026	Updated for LumOS 3.0.1.
H	March 2026	Updated regulatory and specifications information.

CONTACTING SPECTRA LOGIC

To Obtain General Information - Spectra Logic Website: www.spectralogic.com	
United States Headquarters	European Office
Spectra Logic Corporation 6285 Lookout Road Boulder, CO 80301 USA	Spectra Logic Europe Ltd. 329 Doncastle Road Bracknell Berks, RG12 8PE United Kingdom
Phone: 1.800.833.1132 or 1.303.449.6400 International: 1.303.449.6400 Fax: 1.303.939.8844	Phone: 44 (0) 870.112.2150 Fax: 44 (0) 870.112.2175
Spectra Logic Technical Support Technical Support Portal: support.spectralogic.com	
United States and Canada Phone: Toll free US and Canada: 1.800.227.4637 International: 1.303.449.0160	Europe, Middle East, Africa Phone: 44 (0) 870.112.2185 Deutsch Sprechende Kunden Phone: 49 (0) 6028.9796.507
Additional international numbers available at support.spectralogic.com/home If you have a Spectra Logic Portal account, please log in for country-specific numbers at support.spectralogic.com/support-contact-info	
Spectra Logic Sales Website: shop.spectralogic.com	
United States and Canada Phone: 1.800.833.1132 or 1.303.449.6400 Fax: 1.303.939.8844 Email: sales@spectralogic.com	Europe Phone: 44 (0) 870.112.2150 Fax: 44 (0) 870.112.2175 Email: eurosales@spectralogic.com
To Obtain Documents: support.spectralogic.com/documentation	

END USER LICENSE AGREEMENT

1. READ CAREFULLY

YOU SHOULD READ THE FOLLOWING TERMS AND CONDITIONS BEFORE ACCEPTING THIS END-USER LICENSE AGREEMENT ("EULA"). THIS EULA IS A LEGAL AGREEMENT BETWEEN YOUR ORGANIZATION, THE END USER, AND SPECTRA LOGIC CORPORATION ("SPECTRA") FOR THE SPECTRA SOFTWARE PRODUCT WHICH INCLUDES COMPUTER SOFTWARE AND MAY INCLUDE ASSOCIATED MEDIA, PRINTED MEDIA, AND "ONLINE" OR ELECTRONIC DOCUMENTATION (COLLECTIVELY, "SOFTWARE PRODUCT"). BY INSTALLING, COPYING, OR OTHERWISE USING THE SOFTWARE PRODUCT, YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MAY NOT INSTALL, COPY, DOWNLOAD OR USE THE SOFTWARE PRODUCT. YOU AGREE THAT YOUR USE OF THE SOFTWARE ACKNOWLEDGES THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS.

2. OWNERSHIP

It is understood and agreed that Spectra Logic Corporation, a Delaware corporation with offices at 6285 Lookout Road, Boulder, CO 80301 ("Licensor") is the owner of all right, title and interest to the Software Product, regardless of the media or form of the original download, whether by the World Wide Web, disk or otherwise. You, as licensee ("Licensee") through your downloading, installing, copying or use of this product do not acquire any ownership rights to the Software Product.

3. GENERAL

The Software Product is licensed, not sold, to you by Spectra for use only under the terms of this EULA. The Software Product is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The rights granted herein are limited to Spectra's and its licensors' intellectual property rights in the Software Product and do not include any other patents or intellectual property rights. The terms of this EULA will govern any software upgrades provided by Spectra that replace and/or supplement the original Software Product, unless such upgrade is accompanied by a separate license in which case the terms of that license will govern.

4. SOFTWARE PRODUCT

The Software Product, as used in this EULA, means, collectively and/or as applicable:

- The Software Product package;
- Any and all contents, components, attachments, software, media, and code with which this Agreement is provided and delivered;
- Any and all images, photographs, art, art work, clip art, fonts or other artistic works (the "Art Work");
- Related explanatory written materials and instructions, and any other possible documentation related thereto ("Documentation"); and
- Upgrades, modified versions, updates, additions and copies of the Software Product (the "Upgrades"), if any, licensed to by Spectra under this EULA.

5. GRANT OF LICENSE AND RESTRICTIONS

- A. Spectra grants you a non-exclusive, non-transferable End-User license right to install the Software Product solely for the purpose for which it was created.

- B.** Unless provided otherwise in the Documentation or by prior express written consent of Spectra, you shall not display, modify, reproduce and distribute any Art Work, or portion(s) thereof, included with or relating to the Software Product, if any. Any such authorized display, modification, reproduction and distribution shall be in full accord with this EULA. Under no circumstances will your use, display, modification, reproduction and distribution of the Art Work give you any Intellectual Property or Proprietary Rights of the Art Work. All rights, title, and interest belong solely to Spectra.
- C.** Except for the initial loading of the Software Product, you shall not, without Spectra's express written consent:
 - Copy or reproduce the Software Product; or
 - Modify, adapt, or create derivative works based on the Software Product or any accompanying materials.

6. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

- A.** Spectra will provide you with support services related to the Software Product ("Support"). Such Support will be provided in accordance with the Spectra Master Support Agreement, available for download and viewing on the Spectra Corporate Web site. Use of Support is governed by this EULA and Spectra's Master Support Agreement.
- B.** Any supplemental software, code, content, or media provided to you in the course of Support shall be considered part of the Software Product and subject to the terms and conditions of this EULA.
- C.** Spectra retains all right, title, and interest in and to the Software Product, and any rights not granted to you herein are reserved by Spectra. You hereby expressly agree not to extract information, reverse engineer, disassemble, decompile, or translate the Software Product, or otherwise attempt to derive the source code of the Software, except to the extent allowed under any applicable law. In the event that such activities are permitted by applicable law, any information you, or your authorized agent, discover shall be promptly disclosed to Spectra and shall be deemed the confidential information of Spectra.
- D.** You shall not modify, sublicense, assign, or transfer the Software Product or any rights under this EULA, except as expressly provided in this EULA. Any attempt to sublicense, assign, or transfer any of the rights, duties, or obligations will be void.
- E.** You may permanently transfer all of your rights under this EULA, provided you retain no copies. The other party must agree to accept the terms and conditions of the EULA.

7. ALL RESERVED

All rights not expressly granted herein are reserved by Spectra.

8. TERM

- A.** This License is effective until terminated. Licensee may terminate it at any time by destroying the Software Product with all copies, full or partial, and removing all of its component parts.
- B.** Your rights under this EULA will terminate automatically without notice from Spectra if you fail to comply with any term(s) or condition(s) of this EULA. In such event, no notice shall be required by Spectra to effect such termination.
- C.** Upon termination of this EULA, you shall cease all use of the Software Product and destroy all copies, full or partial, together with all backup copies, modifications, printed or written materials, and merged portions in any form and remove all component parts of the Software Product.

9. INTELLECTUAL PROPERTY RIGHTS

- A. Spectra shall retain all right, title, and interest in the Software Product and to any modifications or improvements made thereto, and any upgrades, updates or Documentation provided to End User. End User will not obtain any rights in the Software Product, its updates, upgrades, and Documentation, as a result of its responsibilities hereunder.
- B. End User acknowledges Spectra's exclusive rights in the Software Product and that the Software Product is unique and original to Spectra and that Spectra is owner thereof. Unless otherwise permitted by law, End User shall not, at any time during or after the effective Term of the Agreement, dispute or contest, directly or indirectly, Spectra's exclusive right and title to the Software Product or the validity thereof.

10. U.S. GOVERNMENT END USERS

The Software Product and related documentation are "Commercial Items," as that term is defined at 48 C.F.R. §2.101, consisting of "Commercial Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. §12.212 or 48 C.F.R. §§227.7202-1 through 227.7202-4, as applicable. The Commercial Computer Software and Commercial Computer Software Documentation are being licensed to U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other End Users pursuant to the terms and conditions herein. Unpublished rights reserved under the copyright laws of the United States.

11. EXPORT LAW ASSURANCES

You may not use or otherwise export or re-export the Software Product except as authorized by United States law and the laws of the jurisdiction in which the Software Product was obtained. In particular, but without limitation, the Software Product may not be exported or re-exported (a) into (or to a nation or resident of) any U.S. embargoed countries or (b) to anyone on the U.S. Treasury Department's list of Specially Designated Nationals or the U.S. Department of Commerce Denied Persons List or Entity List. By installing or using any component of the Software Product, you represent and warrant that you are not located in, under control of, or a national or resident of any such country or on any such list.

12. DISCLAIMER OF WARRANTIES

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE PRODUCT IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND EXCEPT AS MAY BE STATED IN THE SPECTRA MASTER SERVICE AGREEMENT, THE SOFTWARE PRODUCT IS PROVIDED "AS IS," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SPECTRA AND SPECTRA'S AFFILIATES (COLLECTIVELY REFERRED TO AS "SPECTRA" FOR THE PURPOSES OF SECTIONS 12 AND 13) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE PRODUCT, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. SPECTRA DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE PRODUCT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE PRODUCT WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE PRODUCT WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE PRODUCT WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SPECTRA OR A SPECTRA AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATION ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THE ABOVE EXCLUSION AND LIMITATIONS MAY NOT APPLY TO YOU.

13. LIMITATION OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL SPECTRA, ITS AFFILIATES OR LICENSEES, BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THE SOFTWARE PRODUCT OR THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, EVEN IF SPECTRA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, SPECTRA'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS EULA SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE SOFTWARE PRODUCT; PROVIDED HOWEVER, IF YOU HAVE ENTERED INTO A MASTER SUPPORT AGREEMENT, SPECTRA'S ENTIRE LIABILITY REGARDING SUPPORT SERVICES SHALL BE GOVERNED BY THE TERMS OF THAT AGREEMENT. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

14. CONTROLLING LAW AND SEVERABILITY

This EULA will be governed by and construed in accordance with the laws of the State of Colorado, as applied to agreements entered into and to be performed entirely within Colorado between Colorado residents. This EULA shall not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If for any reason a court of competent jurisdiction finds any provision, or portion thereof, to be unenforceable, the remainder of this EULA shall continue in full force and effect.

ABOUT THIS GUIDE

This guide describes how to configure, use, maintain, and troubleshoot the Spectra[®] Cube[™]. It also provides specifications for the library.

INTENDED AUDIENCE

This guide is intended for data center administrators and operators who maintain and operate backup systems. The information in this guide assumes a familiarity with SCSI and Fibre Channel command protocols, as well as with network connectivity protocols such as Fibre Channel, SAS, and Ethernet. It also assumes a knowledge of technical tasks such as configuring operating systems and installing drivers.

PRODUCT STATUS

The Spectra Logic[®] Technical Support portal provides information about which products are currently supported and which are considered discontinued. To view information about discontinued products, log into the portal (see [Accessing the Technical Support Portal](#) on page 165).

RELATED INFORMATION

This section contains information about this document and other documents related to the Cube.

User Interface Screens

The interface changes as new features are added or other modifications are made between software revisions. Therefore, the screens on your library may differ from those shown in this document.

Additional Publications

For additional information about the Cube and its drives, refer to the publications listed in this section.

Cube Tape Library

This guide and the following documents related to the Cube are available as PDF files on the Spectra Logic website at support.spectrallogic.com/documentation.

- The [Spectra Tape Libraries SCSI Developer's Guide](#) provides detailed information about the SCSI and Fibre Channel commands used in the library.
- The [Spectra Tape Libraries Warnings](#) document provides all of the warnings found in Spectra tape libraries documentation, in English and 27 other languages.

LTO Ultrium Tape Drives

The following documents provide information that is applicable to all IBM LTO tape drives.

- [*IBM Tape Device Drivers Installation and User's Guide*](#)

Note: This guide also provides information about using the IBM Tape Diagnostic Tool (ITDT) to troubleshoot drive problems.

- [*IBM TotalStorage LTO Ultrium Tape Drive: SCSI Reference*](#)

For drive-specific information, search for the product name (for example, LTO 8) on the documentation page on the IBM website. You can also search the IBM Support Portal at: ibm.com/support/knowledgecenter/.

Typographical Conventions

This document uses the following conventions to highlight important information:



WARNING

Read text marked by the "Warning" icon for information you must know to avoid personal injury.



CAUTION

Read text marked by the "Caution" icon for information you must know to avoid damaging the hardware or losing data.



IMPORTANT

Read text marked by the "Important" icon for information that helps you complete a procedure or avoid extra steps.

Note: Read text marked with "Note" for additional information or suggestions about the current topic.

CHAPTER 1 - LIBRARY OVERVIEW

The Cubeenterprise-class library is designed and built to meet the stringent requirements for data integrity, data security and high reliability in the enterprise environment.

This chapter provides an overview of the Cube library features and components.

Library Features	18
LumOS software	18
Front Panel Components	21
Interior Components	23
Rear Components	25
Operator Panel Touch Screen	26
TeraPack Access Port (TAP)	27
Spectra Library Control Module	28
Exporting Controllers	30
Tape Drives	30
TeraPack Cartridge Handling	32
Overview of the LumOS User Interface	33
Access Options	33
LumOS Web Interface	33
User Interface Features	34
Logging in to the LumOS User Interface	36
Dashboard	37
Overview of the LumOS API	39
Accessing the LumOS API	39
Authentication in ReST API	40
Sample API Command	40
API Updates	40

LIBRARY FEATURES

This section provides an overview of the features that make the Cube library a highly versatile enterprise storage solution.

LumOS software

The library's LumOS software lets you set configuration options, view library and drive information and metrics, manage cartridges, and monitor library operations. You can access the LumOS interface using any of the following methods:

- The Cube operator panel interface — via the touch screen on the library's operator panel.
- The LumOS web interface — via the Remote Library Controller (RLC) using a standard web browser.
- The LumOS ReST API — via API Platform software or a custom program developed to use the LumOS ReST API.

See [Overview of the LumOS User Interface on page 33](#), for detailed information about the features and controls provided by the LumOS user interface.



IMPORTANT

Many of the features described in this user guide require your library to be running the most current version of the LumOS software. Spectra Logic recommends that you keep your library's LumOS software and component firmware up-to-date at all times. If you are using a previously released LumOS package, upgrading to the current release is strongly recommended. See [Maintaining The Library on page 126](#) for detailed information.

The LumOS software includes the following features (listed in alphabetical order).

API Command Interface

The API interface provides a set of commands for use in customer-generated programs used for controlling all library operations without using the LumOS user interface. All library functionality is available through the ReST API. The LumOS API is updated with each release as new functionality is added.

Auto Configuration Save

The Auto Configuration Save feature automatically generates a daily backup file on the LCM. The backup file contains the library configuration, partition configuration, move history, and the MLM and DLM databases, as well as the encryption configuration and any BlueScale™ encryption keys.

If desired, you can download the backup file after it is created. Having an external copy of the backup file ensures that you can recover the library configuration, as well as the MLM and DLM databases, in the event of a disaster and is highly recommended.

Auto Drive Clean

Auto Drive Clean provides library-based cleaning of drives without user intervention. Automated drive cleaning results in fewer failed tape read/write operations and is the recommended method for cleaning drives.

The Auto Drive Clean feature uses a dedicated cleaning partition for storing cleaning cartridges. The cleaning partition can be shared by multiple storage partitions and is used by the library to automatically clean drives whenever necessary.

Diagnostics and Utilities

Diagnostics and utilities are available through the LumOS interface. Selecting a diagnostic or utility displays additional information, including whether or not you can run the operation while the library is operating.



IMPORTANT

In general, the library diagnostics and advanced utilities are only for use under the direction of Spectra Logic Technical Support.

Drive Lifecycle Management

Drive Lifecycle Management (DLM) helps you identify drives that are experiencing high error rates or other problems. See [Drive Lifecycle Management on page 103](#) for detailed information.

Encryption Key Management

The Cube library can encrypt data and manage encryption keys using BlueScale key management. See [Managing Encryption on page 87](#) for detailed information.

Media Lifecycle Management

Media Lifecycle Management (MLM) helps you manage your tape media by giving you tools to proactively determine potential media errors before they happen. See [Media Lifecycle Management on page 99](#) for detailed information about configuring and using the MLM features.

Shared Library Services (SLS) Partitioning

The library uses Shared Library Services (SLS) virtualization technology to partition the library into multiple virtual libraries. See [Partition Overview](#) on page 70 for detailed information about how partitions function in the library. See [Creating A Partition](#) on page 74 for detailed information about configuring and using partitions.

SlotIQ

SlotIQ optimizes robotics performance by allowing the library to virtualize slot locations and optimize the order of moves in a queue to reduce the amount of robotic movement required for any set of moves.

Soft Load

The Soft Load feature uses the drives soft load (or auto load) functionality to improve library performance. Soft Load requires that the library have a high performance transporter and that the partition use LTO-6 or later generation drives.

Spectra Swarm

The Spectra Swarm bridge is a high-performance storage controller that adds 40-Gigabit Ethernet connectivity to SAS tape drives. See the [*Spectra Swarm Bridge Installation & Configuration Guide*](#) for more information.

Front Panel Components

Figure 1 shows the front components of the library.

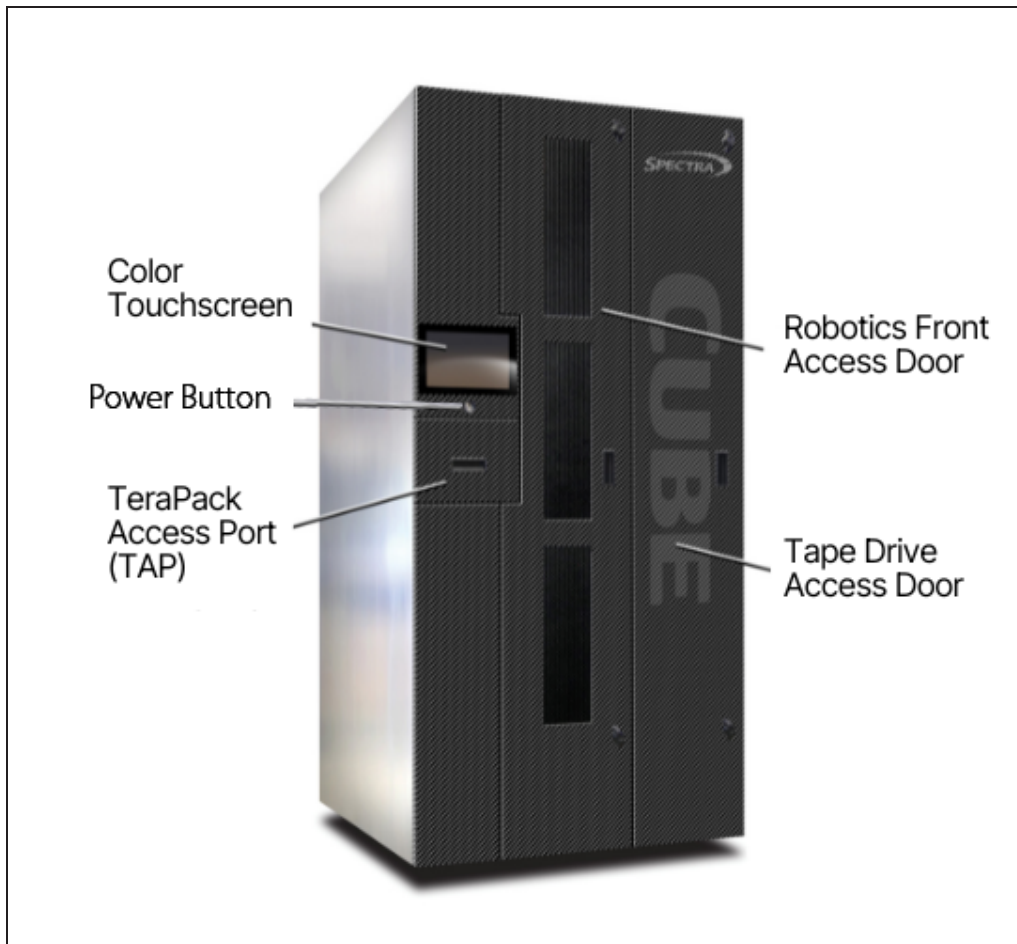


Figure 1 Front panel components.

The following table describes each of the components shown in Figure 1.

Component	Description
Touchscreen	The color touchscreen allows you to access the LumOS user interface which controls all aspects of the library.
Power Button	The power button controls library power. The button illuminates when the library is powered on.
TeraPack Access Port (TAP)	The TeraPack™ Access Port (TAP) acts as an entry/exit port that lets you import media into or remove media from the library. To learn more about the TAP, see TeraPack Access Port (TAP) on page 27.

Component	Description
Robotics Front Access Door	<p>The robotics front access door, positioned in the center of the library frame, allows you to access the interior of the library for service. This door is closed during normal operation. See Interior Components on the next page for more information.</p> <p>Note: Before opening the robotic front access door, ensure all robotic movements have stopped.</p>
Tape Drive Access Door	<p>The tape drive access door allows access to tape drives, the LCM, and Ethernet switches installed in the library. This door is closed during normal operation. See Interior Components on the next page for more information.</p>

Interior Components

Figure 2 shows the interior components of the library.

Note: The interior components are shown for reference only. They are not accessible during normal operation.

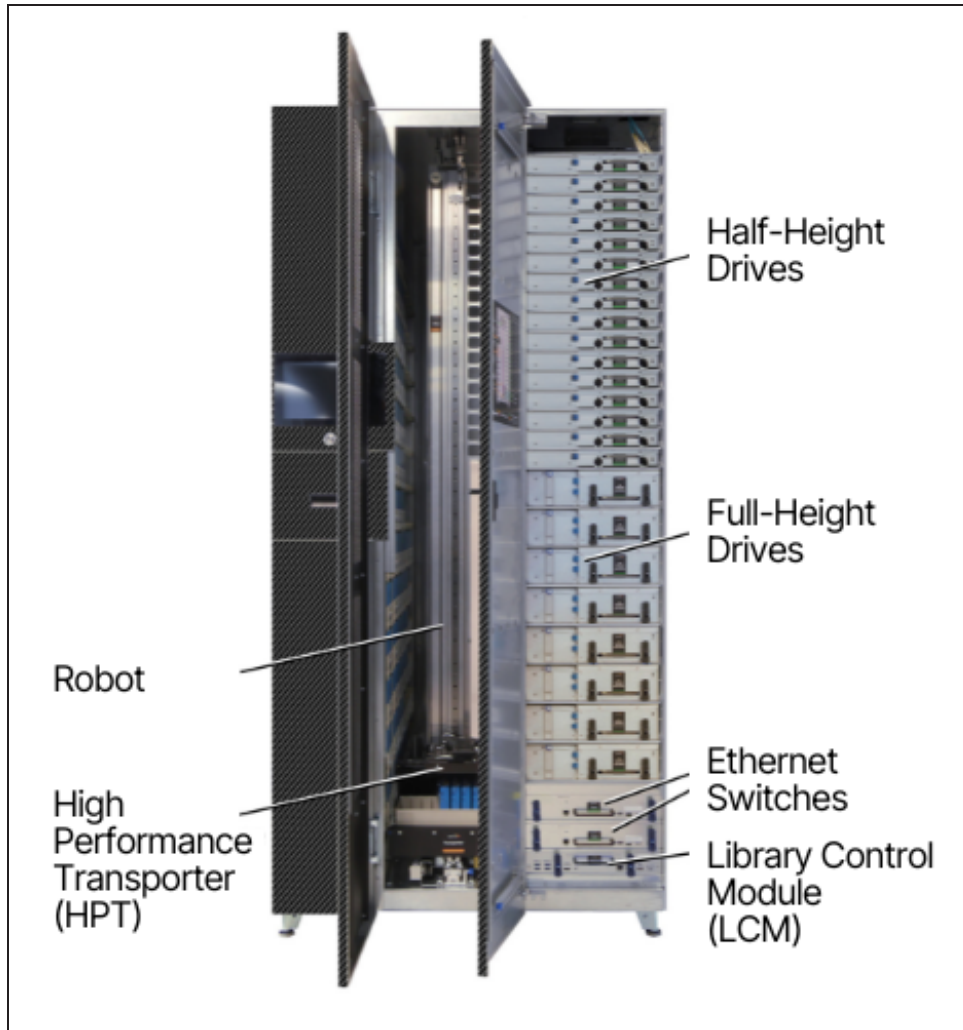


Figure 2 Library interior components (Robotics and Drive access doors opened).

The following table describes each of the components shown in Figure 2.

Component	Description
Robot	<p>The TeraPorter and the transporter make up the robotic mechanism used to perform all media movement within the library.</p> <p>The TeraPorter moves along the horizontal axis (HAX) and the transporter moves up and down the vertical axis (VAX).</p>

Component	Description
<p>High Performance Transporter</p>	<p>The High Performance Transporter (HPT) is mounted on the TeraPorter. During normal operation, the HPT retrieves a magazine from a source chamber and holds it while the robotics move to the destination drive. The cartridge picker then removes the requested individual cartridge from the magazine and inserts it into a drive. When the drive is finished using the cartridge and ejects it, the cartridge picker retrieves the cartridge and returns it to a magazine. The robotics then move the transporter to return the magazine to a chamber.</p> <p>The barcode reader, mounted on the cartridge picker, reads the barcode labels on TeraPack magazines and individual cartridges. The library uses the barcode label information to maintain an inventory of the media currently stored inside the library.</p>
<p>Tape Drives (full-height or half-height)</p>	<p>The library accommodates multiple generations of high-performance, high-capacity, full-height and half-height LTO drives. The library supports up to 16 full-height drives, or up to 30 half-height drives. The two drive form factors can be mixed in the same library.</p> <p>Drives are hot-swappable to provide uninterrupted operation.</p> <p>Note: Any drive bays that do not have drives installed must have covers installed to maintain proper air circulation throughout the frame and to protect internal library components.</p>
<p>Ethernet Switches</p>	<p>One or more Ethernet switches are installed to provide internal communication between the LCM and tape drives.</p> <p>Note: The external Ethernet ports on the Ethernet switches are not used at this time.</p>
<p>Library Control Module (LCM)</p>	<p>A dedicated on-board library control module (LCM) runs the LumOS software that controls all aspects of library operation.</p>
<p>Media Storage (not shown)</p>	<p>All of the media in the library is stored in TeraPack magazines. Each magazine contains ten slots for LTO cartridges. The magazines are placed on shelves divided into chambers. Each chamber provides storage for one TeraPack magazine.</p>
<p>Interior Lights (not shown)</p>	<p>LEDs mounted to the top of the library interior provide illumination automatically when the Robotics Door is opened.</p>
<p>Weather Stations (not shown)</p>	<p>Sensors to monitor the library's internal temperature and humidity.</p>

Rear Components

Figure 3 shows the rear panel components of the library frame.

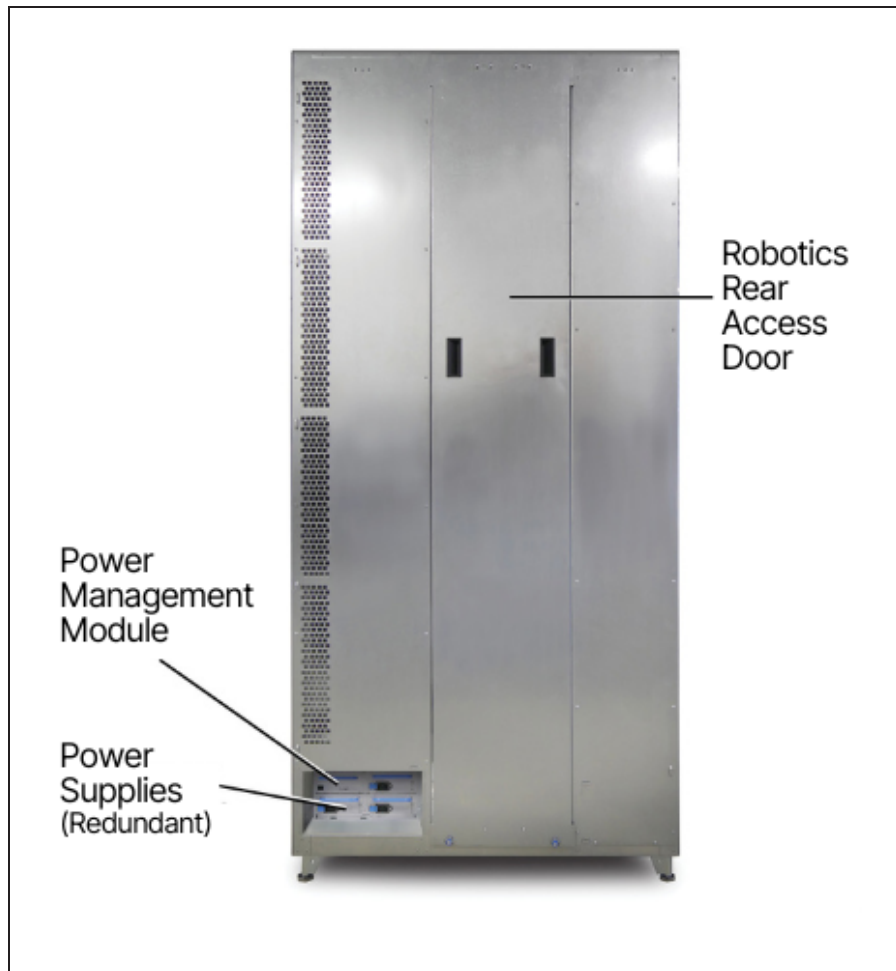


Figure 3 Library rear components.

The following table describes each of the components shown in Figure 3.

Component	Description
Power Management Module	The Power Management Module (PMM) controls all aspects of library power. The PMM interfaces with front-end AC-DC power supplies to control power to the system. The PMM generates power for robotics. The PMM also controls the safety disconnect circuit.
Power Supply Modules	The power supply modules convert AC input to provide power used by drives in the library. These power supplies also provide power to the LCM and the LCD operator panel. The number of supplies required by a library is calculated by Spectra Logic based on the number and type of drives in the library. Extra supplies provide redundancy and failover protection.

Operator Panel Touch Screen

The operator panel touch screen provides local access to the LumOS user interface through the Library Control Module (LCM). You can select options and enter information by touching the appropriate location on the screen. For detailed information about using the LumOS user interface through the touch screen, see [Overview of the LumOS User Interface](#) on page 33.



Figure 4 The library operator panel touch screen displaying the login screen of the LumOS user interface.

The operator panel includes the following features:

Component	Description
LCD touch screen	The LCD touch screen lets you monitor library operations and select configuration options using the LumOS user interface.
Power Button	The power button provides front panel on/off control of the library.

TeraPack Access Port (TAP)

The TeraPack Access Port (TAP) acts as entry/exit port that lets you import magazines into or export magazines from the library. A magazine can contain one or more cartridges or it can be empty.

Note: To import or export individual cartridges, they must be placed in a magazine.

Using the TAP to move cartridges into and out of the library provides these key advantages:

- **Data Security** — Media is never stored in the TAP. A newly inserted TeraPack magazine is automatically moved into the library and placed in a storage chamber. A magazine already in the library is only moved to the TAP when you request an export operation through the user interface. Data security and backup integrity are enhanced because the media stored in the library can only be physically accessed using the password-protected LumOS user interface or API.
- **Convenience** — Instead of individually importing or exporting single cartridges as you would with a traditional entry/exit port, using a TAP lets you handle multiple cartridges in a single operation, thus reducing the time spent on import and export tasks.



Figure 5 The TAP with a TeraPack magazine loaded.

Spectra Library Control Module

The library uses a control module called the Spectra Library Control Module (LCM). The dedicated computer runs the library’s LumOS software, which controls and manages all aspects of the library operation.

Spectra LCM Overview

The LCM runs the LumOS software, which provides the LumOS user interface that is used to perform all configuration, import/export, and management functions for the library. The LumOS user interface is accessible locally through the library's touch screen and remotely using a standard web browser.

In addition to providing the user interface, the LumOS software running on the LCM generates and maintains the MLM database, BlueScale encryption keys, system logs, and other information related to the current system status. It also handles email operation.

The LCM also processes media changer commands from the hosts and storage management software to control the operation of the TeraPorter. The LCM stores all of the information about the location and status of each element in the library, as well as the raw media inventory in its nonvolatile memory.

Figure 6 shows the external components on a Spectra Library Control Module.

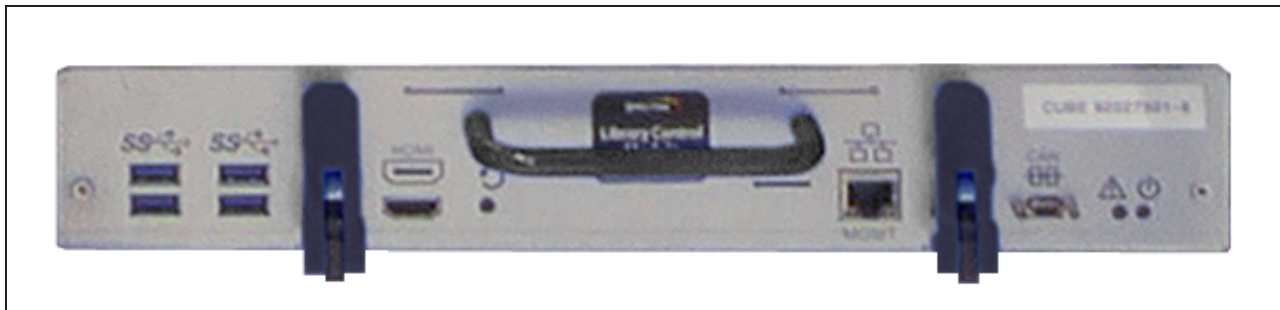


Figure 6 The connectors and components on a Spectra LCM.

The following table describes the components shown in Figure 6.

Component	Description
USB Ports (4)	The USB ports on the LCM can be used to connect a USB device for saving configurations and uploading LumOS software packages. You can also connect a USB keyboard and mouse to the USB ports on the LCM and use them when interacting with the LumOS user interface. This connection provides access to all of the options available from the library’s front panel touch screen.

Component	Description
Monitor Connector	This connector is only used for troubleshooting by Spectra Logic service personnel.
Ethernet Ports	<p>The Ethernet port on the LCM connect the library to an Ethernet network and is used to access the library through the LumOS web interface using the Remote Library Controller (RLC). The LumOS web interface provides access to all of the options available from the library’s operator panel except those that require physical interaction with the library (for example, importing or exporting media).</p> <p>The Spectra LCM has a 10/100/1000BaseT connection.</p>
Internal Drive	An internal NVMe drive stores the library’s configuration information, activation keys, system settings, and partition settings. It also stores the MLM and DLM databases and information related to the current system status.
RS-232 and CAN Connectors	These connectors are only used for troubleshooting by Spectra Logic service personnel.
Status Lights	Two LEDs illuminate to show power to the LCM, and fault status when applicable. One LED illuminates green when power is applied. The second LED is off during normal operation, and illuminates red when a fault condition occurs.

Exporting Controllers

A direct-attached LTO-6 or later generation drive is required to provide the control path for the library's robotics. When configuring a storage partition, the drive you select to provide the robotic control path is referred to as the "exporting controller" for the partition.

The controller is the bridge between an external Fibre Channel or SAS connection from the host and the internal interface used by the library. It provides the control path for the media changer commands sent from the host to the library. The controller relays the commands to the LCM, which processes the commands and uses them to control the robotics in the library.

A minimum of one exporting controller is required to connect the library's robotics to the Fibre Channel or SAS network. The commands to control the motion of the robotics within the partition are sent from the host to the exporting drive's logical unit number 1 (LUN 1). The motion control commands are then routed to the robotics using the exporting drive's Automation/Drive Interface (ADI).

To learn more about the role the controller plays in the library, see [TeraPorter Connectivity on page 49](#).

- Notes:**
- A tape drive can only provide the control path for one partition.
 - The library supports up to 30 drive exporters.

Tape Drives

The library supports LTO-6 and later generation Fibre Channel full-height drives, LTO-7 and later generation half-height Fibre Channel drives, and LTO-9 and LTO-10 full-height SAS drives. The drives are mounted in drive sleds that lock in place when installed in the library. Drives are hot-swappable to provide uninterrupted operation.

Note: To prevent issues with transporter position calibration, do not put labels on the front face of drives.

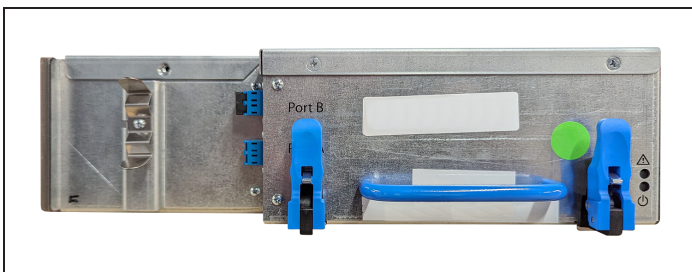


Figure 7 The LTO-6 and later full-height Fibre Channel drive sled.



Figure 8 The LTO-7 and later half-height Fibre Channel drive sled.

The following table describes the drive components.

Component	Description
Drive Sled	<p>The drive sled provides the electrical and logical connections to the library, as well as the connections to the host Fibre Channel arbitrated loop or fabric or SAS network.</p> <p>The drive sled firmware assigns an identifier to the drive based on its location in the library (see Drive Component Identifiers on page 47). This identifier is used to identify the drives in the Cube user interface and ReST API.</p> <p>See Drive Connectivity on page 50 for additional information about the connectivity provided by the drive sled.</p>
Fibre Channel Connectors	<p>Each Fibre Channel drive sled has two multi-mode optical SFP LC connectors (Port A and Port B) that are used to connect the drive directly to a Fibre Channel network. The two ports let you connect two separate fiber optic cables to each drive for failover redundancy. The two ports cannot be used simultaneously.</p>
SAS Connectors	<p>Each SAS drive sled has a two, unshielded, single-port SFF-8088 (LTO-6 through 8) or SFF-8644 (LTO-9 and LTO-10) serial connector that provides the Serial Attached SCSI (SAS) connectivity for the drive.</p>
Status LEDs	<p>Two LEDs indicate power on and failure status. One LED illuminates green when power is applied. The second LED is off during normal operation, and illuminates red when a fault condition occurs.</p>
Locking Levers (full height) Locking Knobs (half-height)	<p>Drives sleds are locked into place by either locking levers or locking knobs, depending on drive form factor. The levers or knobs allow you to manually lock the drive sled in place. The levers are released, or rotated open, to remove the drive sled from the library.</p>

For more information about the drives in the library, see:

- [LTO Ultrium Tape Drives on page 16](#) for a list of documents that provide information that is applicable to all IBM LTO tape drives.
- [LTO Tape Drive Specifications on page 209](#) for information about the transfer rates and storage capacities of LTO drives.
- [Component Interface Connectors on page 206](#) for cabling requirements for host connections to the drives.

TERAPACK CARTRIDGE HANDLING

The library optimizes space usage by storing media on horizontal shelves. This horizontal storage provides very high density by using space within the library instead of the limited space provided by the vertical library walls. Each horizontal shelf is divided into multiple equal-sized media storage chambers. Each chamber accommodates a single TeraPack magazine.

The library uses TeraPack magazines to import and export cartridges through the TAP and to store cartridges inside the library. Each magazine holds up to ten LTO cartridges. The magazine has guides along each side and grooves on the bottom to ensure proper alignment when it is inserted into the TAP.

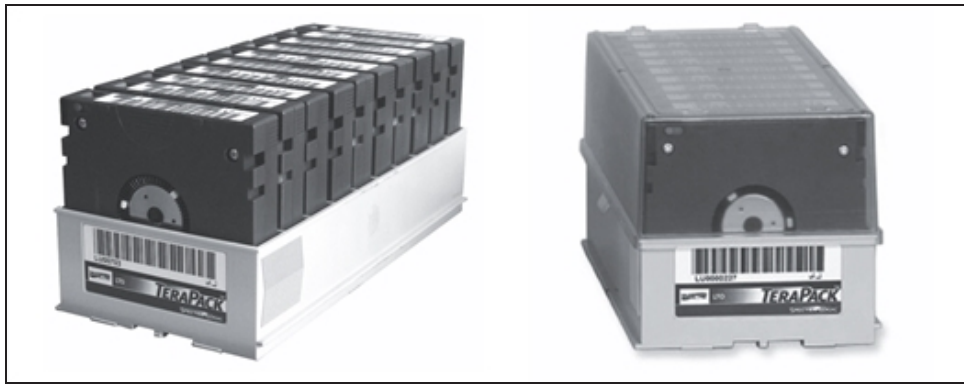


Figure 9 TeraPack magazine with barcode labeled cartridges and plastic dust cover.

Storing and handling cartridges in TeraPack magazines helps eliminate errors resulting from mishandling individual tapes, which is the leading cause of tape damage. When inside the library, TeraPack magazines are stored in semi-enclosed chambers. When not in the library, an optional clear plastic dust cover snaps onto the magazine to protect the cartridges. The cartridges are continually protected by the TeraPack magazine, both inside and outside of the library.

Using TeraPack magazines offers the following advantages:

- **Barcode labeling** All of the cartridges in a TeraPack magazine, as well as the magazine itself, are barcode labeled for easy identification.
- **Grouped media** The cartridges in a TeraPack magazine are treated as a single unit during import and export operations. This grouped media handling simplifies media management tasks by eliminating the need to import or export cartridges one by one.

OVERVIEW OF THE LUMOS USER INTERFACE

The LumOS user interface lets you set configuration options, view library and drive information and metrics, manage media, monitor library operations, and perform maintenance operations.

Access Options

The LumOS user interface is accessed using either the touch screen on the library operator panel or through the LumOS web interface.

Operator Panel Touch Screen Interface

The touch screen on the operator panel is the library's local LumOS user interface. You select options and enter information by simply touching the appropriate location on the screen with a stylus or your finger. The touch screen interface includes a soft keyboard that you can use to enter characters into the text fields.

LumOS Web Interface

The LumOS web interface lets you use a standard web browser to access the library through the Remote Library Controller (RLC). Simply enter the library's IP address into a browser running on a computer, tablet, or phone that can access the Ethernet network connected to the library's LCM module.

The LumOS web interface provides access to the same features and functions that are available through the touch screen, excluding functions that involve physical interaction with the library.

Note: Users with sufficient permissions can manually override and remove the restrictions on functions that involve physical interaction.

Supported Browsers

Remote access to the library through the web interface is only officially supported using the Google[®] Chrome[™] browser.

Additional browsers have not been fully tested with the LumOS web interface. Using an unsupported browser may result in the LumOS web interface not displaying or operating as expected.

Note: The LumOS user interface requires at least a 1080p resolution to properly display all elements of the user interface.

User Interface Features

The following sections describe the common LumOS user interface features.

Toolbars

The toolbar panel appears along the top edge of each screen and lets you navigate through the available toolbars to select options. Clicking on a toolbar expands it to display the available options.

Option Overview

The following table provides an overview of the options available under each toolbar.

Toolbar	Available Options
Status	<ul style="list-style-type: none"> • Dashboard - Provides an overview of the library and its components, including library capacity, tape drive and media status, robot status, environmental and power information, and a list of the last 20 media moves performed by the library. • Status Messages - Displays Info, Summary, Warning, Error, and Fatal Error messages. • DLM - (Drive Lifecycle Management) - Displays all installed drives with access to their health status, mount history, and details. • MLM - (Media Lifecycle Management) - Displays all currently installed tapes with access to their health status, barcode, and details. • Robotics - Displays the status of the robot inside the library and its details. When using the operator panel, users can send the robot to service. • Library Hardware - Displays the health status and details of all hardware in the library. • Environment - Displays chassis and robotics temperature and humidity information. • Power Usage - Displays the wattage used by the library. • Firmware Update Status - Displays the status of each firmware update check, which is performed each time the library is powered on, or when the LumOS software restarts.
Configuration	<ul style="list-style-type: none"> • Partitions - Displays all Cleaning and Storage partitions. Users can use the Partitions screen to create, edit, and delete partitions. • Package Update - Displays the active package and allows users to upload, change, and delete packages.

Toolbar	Available Options
	<ul style="list-style-type: none"> • Drive Firmware Update - Displays the Drive Firmware Update screen, which provides controls for staging and committing drive firmware updates. • Settings - Displays the Settings screen, which allows the user to modify basic, authentication, network, and metric settings. • Licensing - Displays the Licensing screen, which allows the user to view existing licenses and add new license keys. • User Management - Displays the Users screen, which allow the user to create, edit, or delete users. • Encryption - Displays the Encryption screen, which allows the user to add, import, export, or delete a BlueScale encryption key and change the encryption password.
Operations	<ul style="list-style-type: none"> • Move Media - Displays all Cleaning and Storage partitions and allows the user to move media inside the library. • Exchange Media - Only accessible on the operator panel. Displays all pools and magazines and allows the user to import or export magazines through the TAP. • Import Media - Only accessible on the operator panel. Displays all available partitions and allows the user to import magazines into partitions using the TAP. • Export Media - Only accessible on the operator panel. Displays all available partitions and allows the user to export magazines from partitions using the TAP.
Tools	<ul style="list-style-type: none"> • Log Gather - Displays the Log Gather screen, which allows the user to select a log type and time range and initiate a log gather. • Drive Test - Performs a write/read test on a drive in a partition. You must have a healthy cleaning partition associated with the target drive partition that must contain a Spectra Diagnostic Cartridge (SDC) of the same generation as the drive in test. For example, a LTO-8 drive requires a L8 SDC tape. • Backup/Restore - Displays the Backup/Restore screen, which allows the user to create, delete, upload, download, and restore from a backup file. • Diagnostics & Utilities - Displays the Diagnostics screen, which allows the user to run diagnostics to troubleshoot the library. These tests should only be performed under guidance from Spectra Logic Technical Support. • Alerts - Displays the Alerts screen, which allows the user to configure automatic alerts and add subscribers to the alert mail list.

LOGGING IN TO THE LUMOS USER INTERFACE

To log in to the LumOS user interface, use the front panel. To access the web interface, first use the front panel to determine the library's IP address, then open a web browser on a computer on the same network and enter the IP address of the library. The login screen displays.

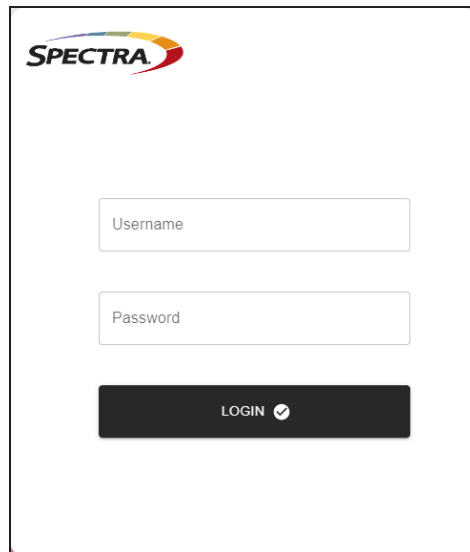


Figure 10 The Cube Login screen.

Enter in the **Username** and **Password** and click **Login** to log in.

- The default username is **su**.
- The default password is **spectra**.

Note: When logging into the LumOS interface, the web page defaults to the Dashboard.

LumOS Web Interface Elements

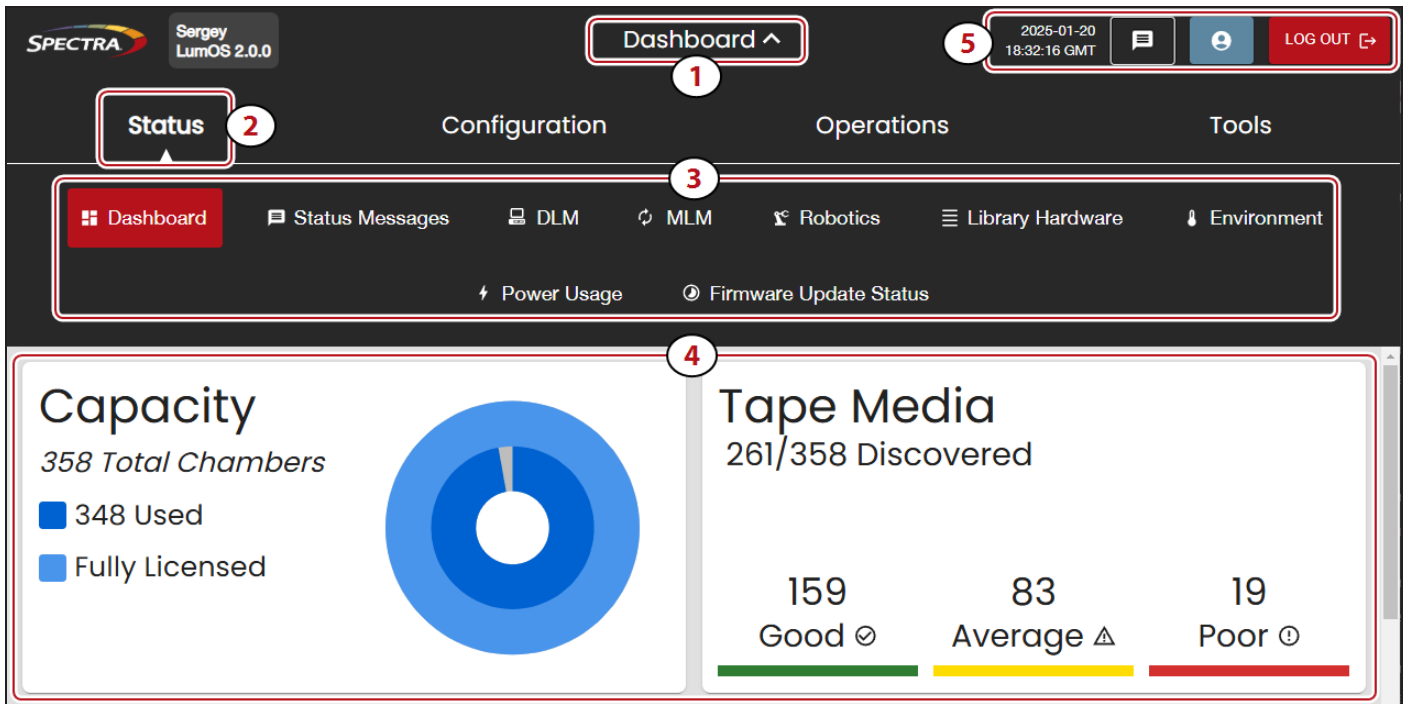


Figure 11 The LumOS web interface elements.

1. The current selected screen.
2. The current selected toolbar.
3. All feature screens available under the current selected toolbar.
4. The selected feature screen.
5. The current system time, and buttons for accessing system messages, user configuration, and to log out of the LumOS interface.

Dashboard

The LumOS user interface dashboard provides an overview of the Cube status. Expand the title bar and then select **Status > Dashboard**. Use the figure below to help you navigate the dashboard.

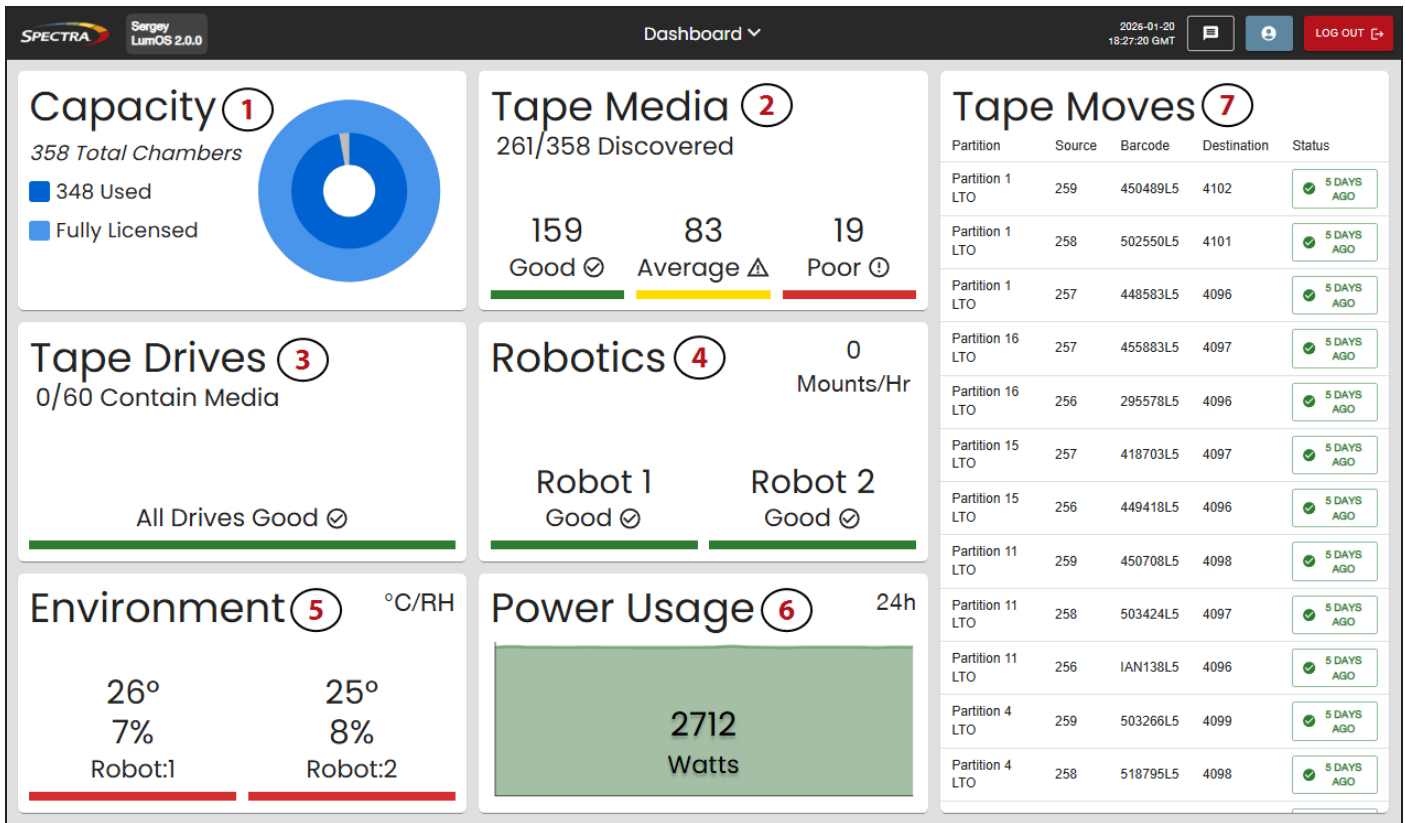


Figure 12 The LumOS Dashboard.

LumOS Dashboard

- Capacity** - The tape media storage capacity of the library. Click the widget to view the current license keys installed in the library, and to add new license keys.
- Tape Media** - The current number of tape cartridges in the library, and the general status of all media. Click the widget to view the Media Lifecycle Management screen.
- Tape Drives** - The current number of tape drives in the library, and the general status of the tape drives. Click the widget to view the Drive Lifecycle Management screen.
- Robotics** - The number and status of the robot(s) installed in the library, as well as the total mounts per hour. Click the widget to view the Robotics screen for more detailed information.
- Environment** - The current temperature and humidity readings for the robot(s) installed in the library. Click the widget to view the Environment screen for more detailed information.
- Power Usage** - The current wattage used by the library. Click the widget to access the Power Usage screen for more detailed information.
- Tape Moves** - The last 20 tape media moves performed by the library.

OVERVIEW OF THE LUMOS API

The LumOS API for the Spectra Cube tape library allows you to control all aspects of the library that are available when using the library front panel or remote library connection.

Note: The API is updated every time the LumOS software is updated.

Accessing the LumOS API

The LumOS API is accessed using the following path:

`https://library IP address/api`

For example:

`https://10.10.11.203/api`

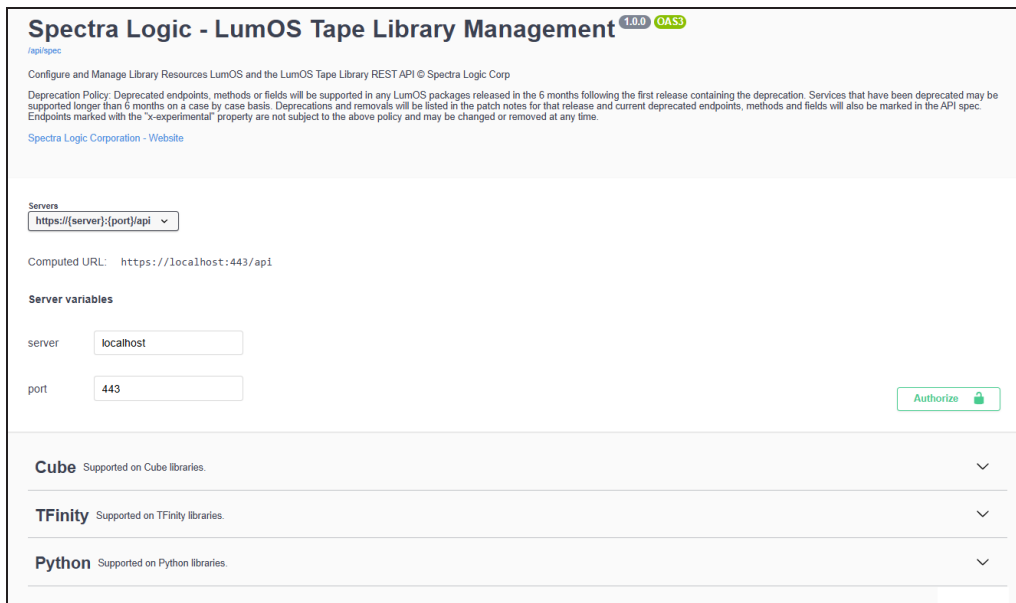


Figure 13 The main screen of the LumOS API.

Authentication in ReST API

Authentication in a REST API ensures that only authorized users can access or modify resources. The client sends credentials to the library, the library checks the provided credentials, and issues a Bearer token the user must use in the request headers for all future requests. A token is returned by sending a POST command to 'api/auth/login' with the required request body, and then using the token returned in the JSON body by the authorization HTTP header for subsequent requests.

Sample API Command

The below sample API command shows the login process using Curl.

Command:

```
curl -k -H 'Content-Type: application/json' -d '{"username":"su","password":"spectra",  
"domain":"NATIVE"}' -X POST https://10.10.11.203/api/auth/login
```

Response:

```
{"passwordHasExpired":false,"refreshUntil":1738180782,"token":"eyJhbGciOiJIUzI1NiIsInR5cCI6IkpXVCJ9.eyJ0eXBldj0zLCJncm91cHMioIjE3MzgwNTYwMTc0MDAwMDAsInBhc3N3b3JkS  
GFzRXhwaXJlZCI6ZmFsc2UsInZnJlc2hVbnRpbCI6MTczODE4MDE4Miwic3ViIjoic3UiLCJleH  
AiOiE3MzgwOTUyODIsImhhdCI6MTczODU5NDM4MiwianRpIjoic3ViIjoic3UiLCJleH  
WExLTk0YjAtOTQ5NGE2NTg1MDhhIn0.svJOVzxbJICUuvdWYnWnby5azQcxwQ3QEcXpswF  
7uvo","tokenExpiresAt":1738095282}
```

API Updates

The LumOS API is updated whenever the LumOS system software is updated. New API commands are listed in the Release Notes for each LumOS software release.

CHAPTER 2 - ARCHITECTURE OVERVIEW

The Cube library is designed to provide maximum flexibility and ease of use in an enterprise-class system.

Media Pools	42
Library Partitions	43
Storage Partitions	43
Cleaning Partitions and Auto Drive Clean	44
Component Identifiers	46
Full-Height Drive Library	46
Half-Height Drive Library	46
Drive Component Identifiers	47
Chamber Component Locators	47
Connectivity	49
TeraPorter Connectivity	49
Drive Connectivity	50
High-Availability Configurations	52
Redundant Connectivity	52
Redundant Power Supplies	53

MEDIA POOLS

Inside the library, magazines and cartridges are logically grouped through the use of pools. These pools are made up of chambers, each of which accommodates a single magazine. The library has three different types of pools: storage pools, entry/exit pools, and the free pool.

Storage pool

The chambers in a storage partition's storage pool provide the cartridge storage for a partition. You specify the number of chambers assigned to a storage pool when you create a partition.

- Each storage partition has its own storage pool containing at least one chamber. The cartridges in the storage pool are available for use by the host storage management software that accesses the partition.
- A cleaning partition has at least one chamber in its storage pool and can be shared by multiple storage partitions. The cleaning cartridges stored in the cleaning partition are not accessible to the storage management software.

Entry/Exit pool

The chambers in an entry/exit pool provide an interim storage location for cartridges during import and export operations. You specify the number of entry/exit pool chambers when you create a storage partition. Cleaning partitions do not have an entry/exit pool.

IMPORTANT

The host storage management software cannot use the cartridges in the entry/exit pool for backup jobs. However, the storage management software can access the cartridges stored in the entry/exit pool to move them into the storage pool.

A cartridge is in the entry/exit pool for one of the following reasons:

- It was ejected from the storage pool by the storage management software, or moved manually using the LumOS user interface.
- A magazine containing one or more cartridges was imported into the library. From the entry/exit pool, the cartridges can be imported into the storage partition's storage pool.
- A magazine containing one or more special-purpose cartridges was imported into the library using the TAP. These cartridges may be used for cleaning a drive.

Free pool

Chambers that are not assigned to a partition are in the free pool. These chambers can be assigned to a storage partition or a cleaning partition. The chambers in the free pool cannot be accessed through the user interface or the storage management software until they are added to a partition.

LIBRARY PARTITIONS

Partitions divide the library logically to appear as one or more physical libraries—one library per configured partition. Partitioning simplifies storage consolidation through the creation of virtual libraries, each with its own drives and media. Each partition:

- Has exclusive access to the tape drives and media storage assigned to it.
- Can control the TeraPorter(s) to move media within the partition.

The library supports two types of partitions, storage partitions and cleaning partitions. You can configure a maximum of 30 partitions using the maximum number of physical controllers. One or more cleaning partitions can be configured in a single library. A single cleaning partition can be associated with multiple storage partitions. Cleaning partitions do not count against the storage partition maximum.

Note: The more partitions in a library, the longer each move can take. You may need to increase the timeout setting in your storage management software.

Storage Partitions

Overview

The library requires, at a minimum, one storage partition. Each storage partition must have at least one drive and one chamber in its storage pool. Drives and chambers can only be assigned to one storage partition at a time.

In some environments, using multiple storage partitions is crucial to data center efficiency and growth. For example, multiple partitions are extremely useful in the following situations:

Multiple Storage Management Software Packages

If groups within your company use different storage management software packages, each software package requires its own dedicated library. Instead of maintaining multiple physical libraries — one per backup package — the data center can use a single Spectra Logic library with multiple partitions, in which each partition appears to the software as a dedicated library.

Encryption

If you want to encrypt some but not all of your backup data, you can partition the library into an encryption partition and non-encryption partition to segregate the two types of data.

Multiple Drive Generations

If your data center uses multiple generations of LTO drives, Spectra Logic strongly recommends configuring separate partitions for each generation to ensure read/write compatibility between the drives and cartridges.

Shared Resources

If each department in the company must keep their data segregated, partitioning the library supplies this segregation, as well as the subsequent integrity of the data set. Each partition can only access the drives and cartridge locations assigned to it. Data from other partitions cannot become intermixed with the data stored on the media in the partition's inventory.

Multiple Databases

If your company uses multiple databases, partitioning the library preserves the backup processes associated with each type of database.

Cleaning Partitions and Auto Drive Clean

Overview

The cleaning partition provides permanent storage for cleaning cartridges inside the library. This special-purpose partition does not have an entry/exit pool or any drives associated with it. A single cleaning partition can be shared by multiple storage partitions.

Auto Drive Clean uses the cleaning cartridges in the cleaning partition to provide library-based cleaning of drives, typically with no user intervention. Automated drive cleaning results in fewer failed tape read/write operations and is the preferred method for cleaning drives.

Drives in a partition with an associated storage partition are cleaned no more than once in any 12 hour period. If you want to clean the drive immediately, you can initiate a manual cleaning.

Note: Software-initiated drive cleaning operations cannot use the cleaning cartridges stored in a cleaning partition; the cartridges are not accessible to the storage management software.

Requirements

The Auto Drive Clean feature requires a cleaning partition to be associated with the storage partitions that contain the drives you want to clean.

Cleaning cartridges used in a cleaning partition must be stored in specially labeled Maintenance TeraPack magazines. The cartridges themselves must be identified with "CLN" at the beginning of the barcode on their labels. The library prevents you from importing cleaning cartridges and magazines that are not properly labeled into a cleaning partition.

Auto Drive Clean Operation

When a drive is unloaded in response to a host request and the data cartridge is moved to its storage location, the library queries the drive to determine if it needs cleaning. If cleaning is required, the library delays notifying the host that the SCSI move command for the unloaded data cartridge is complete while it performs an automatic drive cleaning.

During the delay, the library retrieves a cleaning cartridge from the cleaning partition and inserts it into the drive. When the cleaning is complete, the library returns the cleaning cartridge to the cleaning partition and notifies the host that the SCSI move command for the unloaded data cartridge is complete. The library then posts a system message that the cleaning was successful.

**IMPORTANT**

Media moves initiated from the front panel or REST API commands do not trigger drive auto cleaning.

In addition to automatic cleaning, you can use the user interface to initiate a manual cleaning operation using a cleaning cartridge stored in the cleaning partition. See [Manual Drive Cleaning](#) on page 1.

Expired Cleaning Cartridges

When an expired cleaning cartridge is loaded into a drive, it is immediately ejected without attempting the cleaning. The library flags the cleaning tape as expired in its inventory and does not attempt to use it for subsequent cleanings.

If the cleaning partition contains another valid cleaning cartridge, a cleaning that failed because of an expired cleaning cartridge is reattempted the next time the host unloads a data cartridge from the drive.

MLM Tracking of Cleaning Cartridges

When you use MLM-enabled cleaning cartridges, the library stores usage information in the MLM database, including the number of cleans remaining and the cartridge health - good, near expiration, or expired. This information is retained in the MLM database when a cleaning cartridge is exported from the library.

When a cartridge is nearing the end of its useful life, the library notifies you so that you can replace the cartridge. This early notification helps prevent failed cleanings resulting from using an expired cleaning cartridge.

The library does not store any information about non-MLM cleaning cartridges in the MLM database. However the library does mark an expired cleaning cartridge and does not attempt to use it again as long as it remains in the library. If an expired non-MLM cartridge is exported and then re-imported into the library, it is identified as expired the next time it is loaded into a drive.

Note: The expiration status of a cartridge is lost if the library or library controller is reset.

COMPONENT IDENTIFIERS

The library user interface and the API command interface use component identifiers for each drive. These identifiers also appear in system messages. The component identifier is based on the component's location in the library.

Full-Height Drive Library

Figure 14 shows the component identifiers for each chamber and drive for **full height** drives.

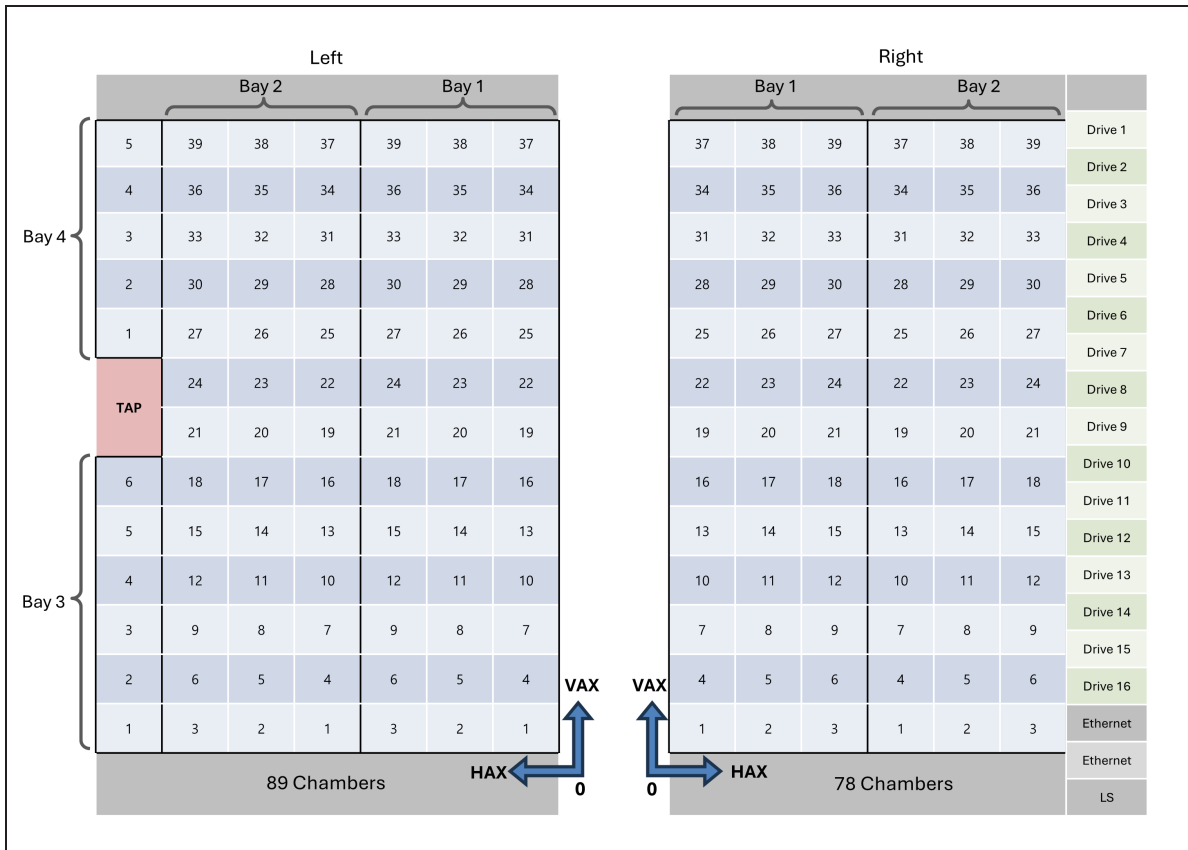


Figure 14 Chamber and drive locations - full height.

Half-Height Drive Library

Figure 15 shows the component identifiers for each chamber and drive for **half height** drives.

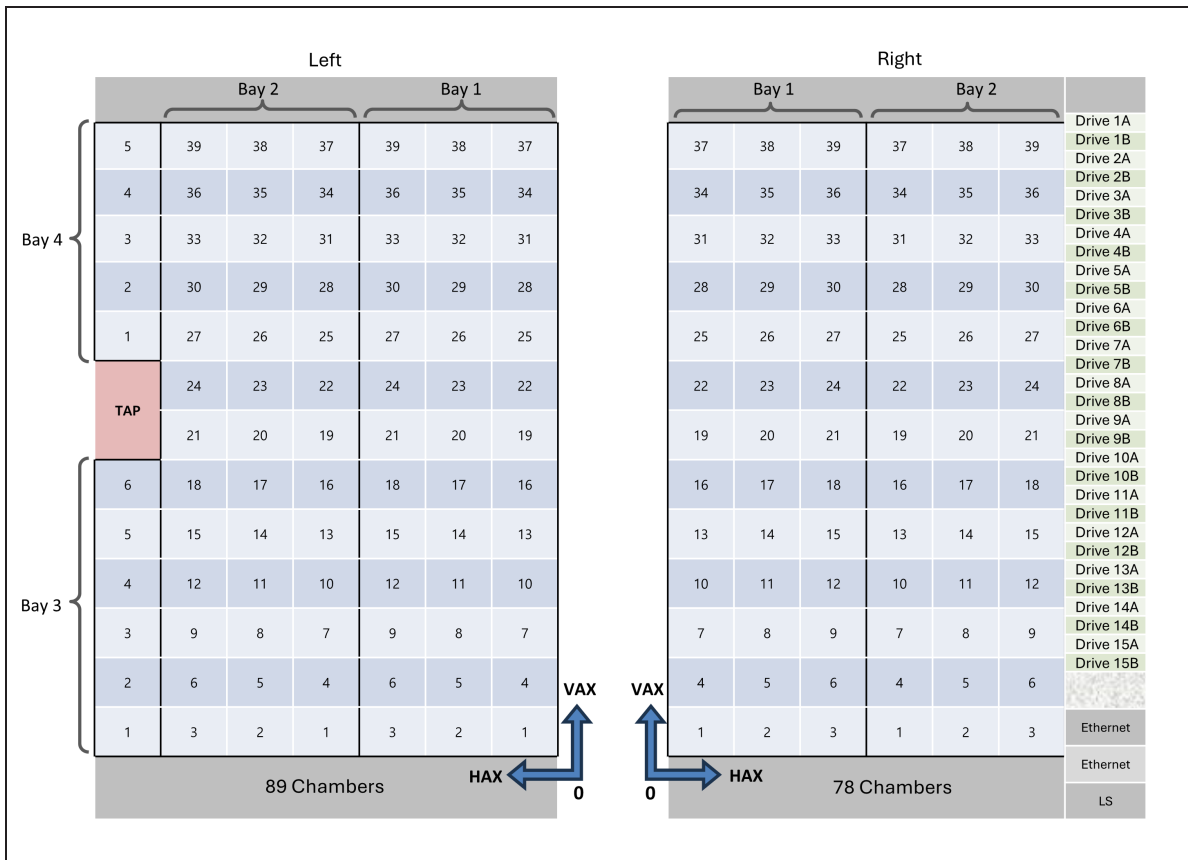


Figure 15 Chamber and drive locations - half height.

Drive Component Identifiers

The firmware in the drive sled that houses each drive assigns an identifier to the drive based on its location in the library. The identifier is also used to generate the World Wide Name (WWN) that the library reports for the drive (see [World Wide Names for Drives on page 51](#)). Because the identifier is location-based, it remains constant even if the physical drive is replaced by a new drive. The new drive assumes the location-based identifier.

Drive component locators use the format **Frame:DBA:Number**, where:

- **Frame** is the number of the frame. For the Cube library, this number is always 1.
- **DBA** is the number of the logical DBA containing the drive. Each DBA logically contains 4 drives. The DBAs are numbered from bottom to top of the library.
- **Number** is the number of the drive bay in the DBA.

Chamber Component Locators

Chamber component locators use the format **Frame:Side:Bay:Chamber**, where:

- **Frame** is the number of the frame. For the Cube library, this number is always 1.
- **Side** is the side where the chamber is located.

- **l** indicates the left side of the library as you are facing the library.
- **r** indicates the right side of the library as you are facing the library.
- **Bay** is the number of the shelving bay containing the chamber.
- **Chamber** is the number of the chamber in the shelving bay.

CONNECTIVITY

The library TeraPorter and the drives connect to the host system over a Fibre Channel arbitrated loop or fabric, or a SAS fabric. These connections carry two types of information:

- The commands from the storage management software that control the TeraPorter motion and the read/write operations of the drives.
- The data being transferred to and from a drive by the host.

TeraPorter Connectivity

The TeraPorter requires a drive to provide the robotic control path. When configuring a storage partition, the drive you select to provide the robotic control path is referred to as the “exporting controller” for the partition. The exporting controller makes the partition accessible to the hosts as a media changer (a library). It receives the media changer commands sent from the host to the library and relays them to the LCM, which in turn processes them into the motion commands used to control the robotics.

You can select multiple exporting controllers for a partition and use your host software to export the same changer interface over the controllers to provide redundancy.

Control Path Through a Direct-Attached Drive

In a direct-attached drive configuration, one or more drives in a storage partition are designated as the exporting drive (also know as the exporting controller). The commands from the host to control the motion of the robotics within the partition are routed to the exporting drive’s logical unit number 1 (LUN 1). Commands to control the operation of the exporting drive are sent from the host to LUN 0 of the drive.

- Notes:**
- If you have multiple storage partitions, you must designate an exporting controller for each partition.
 - A drive can only provide the robotic control path for the partition to which it is assigned.
 - You can select multiple drives as controllers, and export the same changer interface over the drives to provide redundancy, as long as your storage management software can support this. These multiple paths cannot be used at the same time.

Figure 16 shows an example of a partition with two Fibre Channel drives providing the robotic control path. LUN 1 on the drives provides the robotic control path over which the commands to the robotics are received from the host.

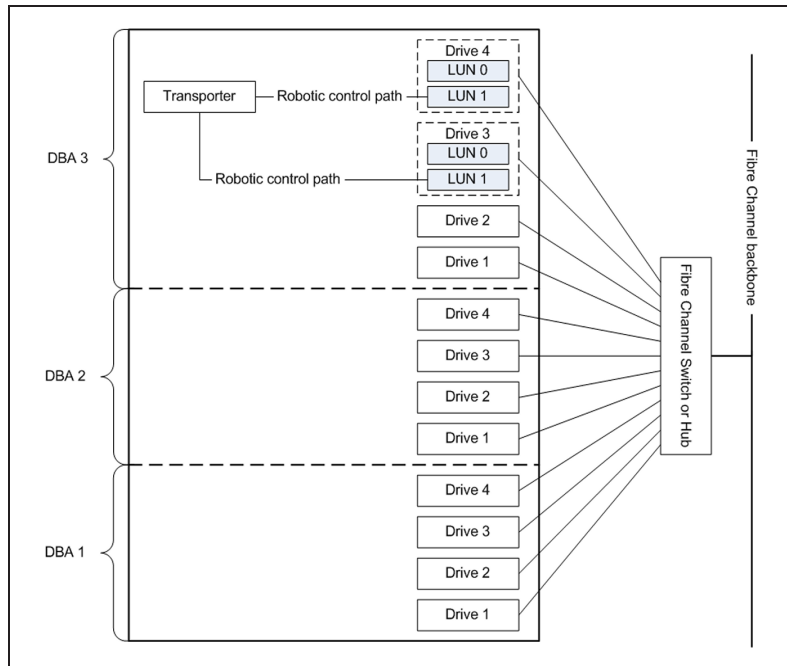


Figure 16 An example of a partition with two direct-attached Fibre Channel drives providing the robotic control path.

World Wide Names for Partitions

The partition WWN is the same as the WWN for the drive. The commands to control the motion of the robotics within the partition are sent from the host to the exporting drive's logical unit number 1 (LUN 1). Commands to control the operation of the exporting drive are sent from the host to LUN 0 of the drive.

See [World Wide Names for Drives](#) on the next page for more information about WWNs for drives.

Drive Connectivity

The drives in the library have either a Fibre Channel interface or a SAS interface.

- Serial Attached SCSI (SAS) drives connect to a SAS HBA or a Spectra Swarm bridge.
- Fibre Channel drives connect to the host using a Fibre Channel arbitrated loop, fabric, or switch.

Note: When connecting Fibre Channel drives to an arbitrated loop, keep in mind that all of the drives on an arbitrated loop must share the data transfer capacity (bandwidth) of the interface. Having multiple, different bandwidth devices on the same loop can negatively impact the performance of all the devices.

World Wide Names for Drives

As part of providing network connectivity, the drive sled firmware assigns a location-based WWN for the drive it houses. This WWN is used by the host software to address the drive. Because this WWN is location-based, it remains constant even if a drive is replaced by a different one of the same type. The new drive assumes the location-based identifier and WWN.

Note: The WWN displayed on the Drive Details screen is actually the WWPN for port A on the drive sled. The WWPN for port B is the same as the one for port A except that the second digit from the left is **2** instead of **1**.

HIGH-AVAILABILITY CONFIGURATIONS

In high-availability enterprise environments, keeping the library operating even in the event of a network connection failure or component failure is extremely important.

Redundant Connectivity

In a high-availability environment, the ability to maintain communications between the host systems and the library and its drives in the event of a connection failure is essential.

- You can select multiple drives as controllers and export the same changer interface over the drives to provide redundancy as long as your storage management software can support this. These multiple paths cannot be used at the same time.
- The servers and Fibre Channel switches used to access the direct-attached Fibre Channel drives in the library can use failover software to provide redundant connectivity through the two Fibre Channel ports on each full-height drive.

Drive Connectivity Failover

The drives used with the library are equipped with two Fibre Channel or SAS ports. The two ports cannot be used simultaneously to provide redundant data paths between the hosts and the drive. However, they can be used to provide failover capability in the event that communication to the port currently in use is interrupted. This failover can be accomplished several ways, including:

- Manually disconnect the cable from the failed port and connect it to the other port. You may need to reconfigure your host software to recognize the alternate port.
- Connect each port on the drive to a separate HBA port in the host. Configure one HBA port as the primary connection and the other HBA port as the failover connection. Install failover software on the host computer to control the transfer of I/O from one HBA to the other in case of a failure.

Note: You may also need to configure your storage management software to correctly recognize both ports. Refer to your failover software, HBA, and storage management software documentation for instructions.

Note: Tape drives sold by Spectra Logic do not support MPIO.

Redundant Power Supplies

The library uses power supply modules to convert AC input to power drives library. These power supply modules also provide power to the LCM and LCD operator panel. The number of power supply modules required by a library is calculated by Spectra Logic based on the number and type of drives in the library. Extra power supply modules provide redundancy and failover protection.

CHAPTER 3 - CONFIGURING INITIAL SETTINGS

This chapter describes configuring the Cube initial settings.

Configuring Users	55
Creating and Editing Users	56
Editing the Current User Password	57
Configuring Settings	58
Basic Settings	59
Automatic Logout Settings	60
Authentication Settings	60
Network Settings	63
Syslog and Remote Settings	64
Power Settings	65
Environment Settings	66
Dashboard Settings	67
Startup Scan Settings	68

CONFIGURING USERS

Overview

Each library user is assigned to one of three user groups, each with its own set of pre-defined library privileges.

User Privilege Requirements

Only a user with superuser privileges can add, modify, or delete users.

Understanding User Groups and Security

The following table describes the three user groups and the privileges of each.

User Group Type	Description
Superuser	<p>Controls all aspects of the library's configuration and operation, including defining other library users and assigning them to a user-privilege group. By default, the LumOS software has a superuser account named "su".</p> <p>Notes:</p> <ul style="list-style-type: none"> • The library requires a minimum of one superuser. You cannot delete the last member of the superuser group. • Only a user with superuser privileges can add, modify, or delete users. • Only a user with superuser privileges can access and configure encryption features.
Administrator	<p>Configures and uses the library. Users in the Administrator group have the same privileges as users in the superuser group with the exceptions of creating or modifying library users, accessing the encryption features, changing authenticators, restoring the library from a backup, or reading the security log.</p>
Operator	<p>Performs day-to-day operations. Users assigned to the Operator group can move media, and import and export media using the Entry/Exit pool, but cannot access the more sensitive library operations such as configuration, diagnostics, and security.</p>

Creating and Editing Users

This section describes using the LumOS user interface to create and edit users. To begin, login to the LumOS user interface and navigate to **Configuration > User Management**.

The screenshot shows the LumOS Users management interface. At the top, there is a 'SPECTRA' logo, a 'Users' dropdown menu, and a 'LOG OUT' button. The main content is divided into two sections: 'Create User' and 'All Users'.

Create User Section:

- 1** Username: Test User
- 1** New Password: [Redacted]
- 1** Confirm New Password: [Redacted]
- 1** User Group: Admin
- 2** LTO Storage Partitions: LTO Storage Partition, LTO6 Storage Partition, LTO7 Storage Partition, LTO8 Storage Partition, LTO9 Storage Partition, LTO Clean Partition 1 (all unchecked)
- 3** CREATE USER button

All Users Section:

	Username	User Group	Partitions	Change Password	Delete User
<input checked="" type="checkbox"/>	OP	Operator	LTO8 Storage Partition	CHANGE PASSWORD	DELETE
<input type="checkbox"/>	su	Super User		CHANGE PASSWORD	DELETE

At the bottom of the 'All Users' section, there is an 'Update Action' dropdown set to 'Change User Group', a 'Group' dropdown set to 'Admin', and an 'UPDATE SELECTED USERS' button.

Figure 17 The LumOS Users screen.

Use Figure 17 above to help you create and edit users.

1. Enter the required information for **Username**, **Password**, and **Confirm Password**.

Use the drop-down menu to select a **User Group**.

Note: Usernames are case sensitive.

2. Select the partition(s) you want to assign to the new user.

Note: Users can only access the partition(s) assigned to them.

3. Click **Create User**. The new user displays below in the **All Users** section.

4. Click **Change Password** and enter and confirm a new password if desired.

- To edit a user, select one or more users in the **All Users** section. Select the desired action from the **Update Action** drop-down menu and then an option from the **Please Choose an Update Action First** drop down menu.

Note: Valid update actions include under **Update Action** are:

- **Add Partition Access**
- **Remove Partition Access**
- **Change User Group**

- Click **Update Selected Users**.

Editing the Current User Password

This section describes using the LumOS user interface to edit the password for the user profile actively signed on to the library.

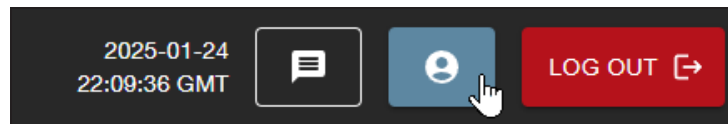


Figure 18 The LumOS toolbar buttons.

- Click on the blue user icon in the top right to open the current user settings.

Figure 19 The LumOS User Configuration screen.

- Click **Change Password**.
- Enter the current user password, the new desired password, and confirm the new desired password.
- Click **Submit**.

CONFIGURING SETTINGS

You can use the LumOS user interface to configure settings for the Cube. This section describes configuring all settings in the Settings screen in these sections:

- **Basic Settings on the next page**
- **Automatic Logout Settings on page 60**
- **Authentication Settings on page 60**
- **Network Settings on page 63**
- **Syslog and Remote Settings on page 64**
- **Startup Scan Settings on page 68**

User Privilege Requirements

Only a user with superuser or administrator privileges can access the Settings screens to enable new options or change system configuration settings. See [Understanding User Groups and Security on page 55](#) for information about the three types of user groups and what types of privileges each has.

To begin, log in to the LumOS user interface and select **Configuration > Settings**.

Basic Settings

Basic Settings

Name **1**

Contact **2**

Location **3**

Manual **4**

NTP

Date & Time (Location: America/Los_Angeles)
mm/dd/yyyy --:-- --

Front Panel Time Zone **5**
UTC

Figure 20 The Basic Settings section.

1. Enter a **Name** for the library.
2. Enter **Contact** information for the library.
3. Enter **Location** information for the library.
4. Select between **Manual** or **NTP** for the time format on the library.
 - If you select **Manual**, enter the required time and date information or click the calendar icon on the right hand side to set the time.
 - If you select **NTP**, enter the required NTP server information for up to four NTP servers (not pictured).
5. Select the **Front Panel Time Zone** in the drop-down menu.
6. Click **Submit Changes** in the lower right corner of the user interface (not shown).

Automatic Logout Settings

This section covers the available automatic logout settings for the LumOS user interface. All entry field text must be numerical.

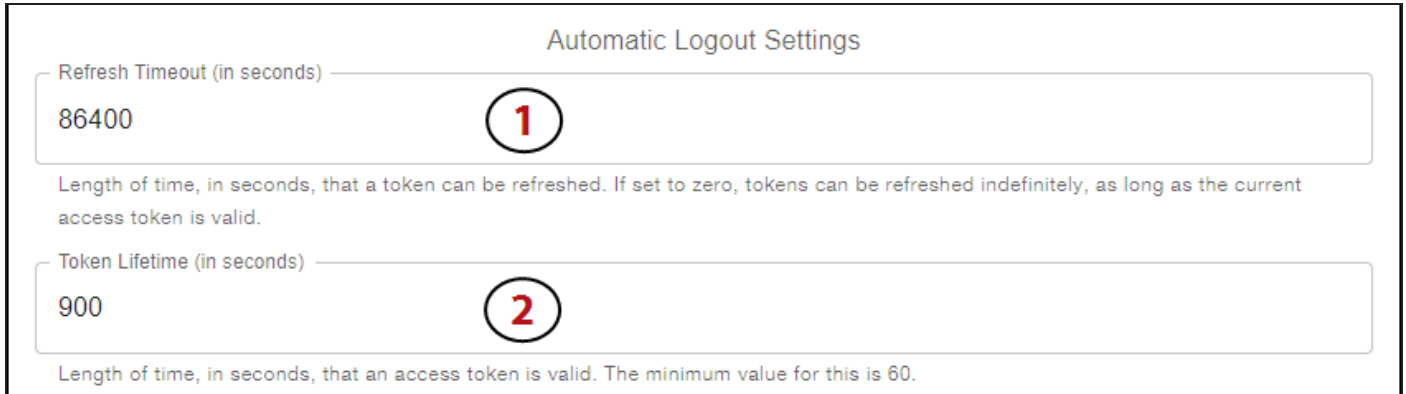


Figure 21 The Automatic Logout section.

1. Enter a value for the **Refresh Timeout**. This setting is the length of time in seconds that you can refresh a token. If set to zero, you can indefinitely refresh a token provided a valid and current access token.
2. Enter a value for the **Token Lifetime**. This setting is the length of time in seconds that an access token is valid. The minimum value is 60 seconds.

Authentication Settings

This section covers all the available authentication settings in the LumOS user interface.

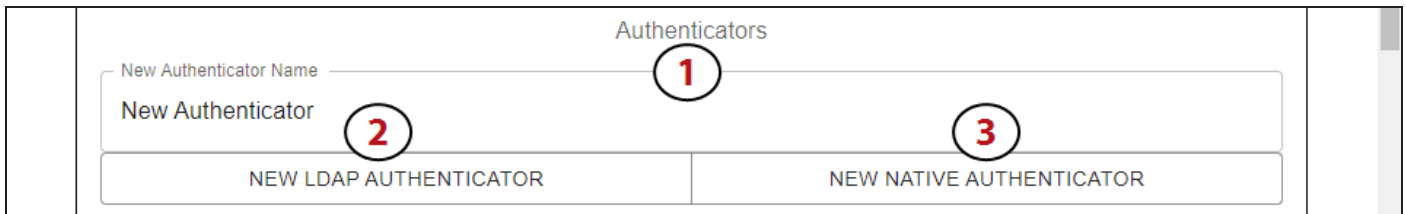


Figure 22 The Authenticator sections.

1. Enter a **New Authenticator Name**.
2. Click **New LDAP Authenticator** to create a new LDAP (Lightweight Directory Access Protocol) Authenticator. See [LDAP Authenticator on the next page](#) to learn how to configure a LDAP authenticator.
3. Click **New NATIVE Authenticator** to create a new NATIVE Authenticator. See [NATIVE Authenticator on page 62](#) to learn how to configure a native authenticator.

LDAP Authenticator

This section covers the available LDAP authentication settings in the LumOS user interface.

Figure 23 The LDAP Authenticator section.

1. Toggle the selector to enable the LDAP authenticator.
2. Enter the required information for the **Read Only User** username, **Read Only Password**, the **Base DN** (domain name) information, **Username Key**, and **Groups Key**.
3. Toggle the selector to enable **Trusted Certificate** if desired.
4. Enter information for the **Port**, **Superuser Group**, and **Admin Group**.
5. Enter information for the **Operator Group**.
6. Click **Submit Changes**.

NATIVE Authenticator

This section covers the available NATIVE authentication settings in the LumOS user interface.

Note: The library only supports one NATIVE authenticator.

The screenshot shows the 'Settings' page for the 'NATIVE Authenticator Example authenticator (NATIVE)'. The interface includes a toggle switch labeled 'Enabled' (1). Below it, a red box highlights the password requirements fields: 'Minimum Numbers' (2), 'Minimum Uppercase' (1), 'Minimum Lowercase' (3), 'Minimum Special Characters' (1) (2), 'Minimum Password Length' (8), 'Password History Length' (5), and 'Maximum Repeated Characters' (2). Below these, a checkbox labeled 'Enable Password Expiration' (3) is checked. A red box highlights the password expiration settings fields: 'Password Lifetime (in seconds)' (86400), 'Minimum Password Age (in seconds)' (60) (4), and 'Expiration Warning (in seconds)' (604800). A red circle (5) highlights the 'SUBMIT CHANGES' button at the bottom right.

Figure 24 The NATIVE authenticator section.

1. Toggle the selector to enable the NATIVE authenticator.
2. Enter the desired password requirements in the entry fields.
3. Select **Enable Password Expiration** if desired.
4. Enter the desired password expiration settings in the entry fields.
5. Click **Submit Changes**.

Network Settings

This section covers configuring the library Network Settings.

The screenshot shows the 'Network Settings' interface. It is divided into sections for IPv4 and IPv6, and a Port section. Red boxes and circles highlight specific elements:

- 1:** A red box around the DHCP dropdown menu for IPv4.
- 2:** A red box around the IPv4 Address in CIDR format input field.
- 3:** A red box around the Default gateway input field for IPv4.
- 4:** A red box around the Port input field showing '443' and the 'POPULATE DEFAULT PORT' button.
- 5:** A red box around the first of three DNS Servers input fields.

Figure 25 The Network Settings screen.

1. Toggle the drop-down menu between **DHCP** and **Static** as desired.
2. Enter information for the **Network** address.



IMPORTANT IPv4 and IPV6 IP addresses must be entered in CIDR format.

3. Enter information for **Default gateway**.
4. Enter information for **Port**. Click **Populate Default Port** if desired.
5. Enter information for **DNS Servers** if desired. You may enter up to three DNS servers.
6. Click **Submit Changes** (not pictured).

Syslog and Remote Settings

This section covers configuring the Syslog, Remote Client, and Remote Access settings.

The screenshot shows the configuration interface for Syslog, Remote Client, and Remote Access settings. The interface is divided into three sections:

- Syslog Settings:** This section contains a text input field for "Syslog Remote Server" with a red box around it and a circled "1" next to it. Below it is a note: "Enter a hostname or IP address. Do not include a port number or subnet mask. Use an empty server name to disable syslog." There are two input fields: "Port" with the value "514" and a circled "1" next to it, and "Network" with the value "UDP" and a circled "1" next to it. Below the "Port" field is a note: "Port of the remote syslog server. Value must be between 1 and 65535. Default is 514." Below the "Network" field is a note: "Network protocol used for syslog connections. Default is UDP."
- Remote Client Settings:** This section contains a checkbox labeled "Import/Export Allowed for Remote Clients" which is checked, with a circled "2" next to it.
- Remote Access Settings:** This section contains a checkbox labeled "Enable SSH" which is unchecked, with a circled "3" next to it. Below it is a note: "Remote Access settings are not guaranteed to persist across package updates or backup restores." Below the "Enable SSH" checkbox is a note: "Allow remote SSH access to the library. Only enable this feature if directed to by Spectra Logic Technical Support." A red button labeled "SUBMIT CHANGES" with a checkmark icon and a circled "4" next to it is located at the bottom right of this section.

Figure 26 The Syslog, Remote Client, and Remote Access Settings sections.

1. Enter information for the **Syslog Remote Server**. You can enter an IP address or hostname for the remote syslog server.

Enter the port number for the remote syslog server under **Port**.

Note: Syslog on Spectra LumOS uses UDP and the port 514.


Use the **Network** drop-down menu to select between TCP or UDP.

Note: Spectra Logic recommends using TCP for your syslog server.

2. Select **Import/Export Allowed for Remote Clients** to allow remote clients to prepare Import/Export actions. You still require physical access to the library to move the cartridges inside the TAP.
3. Select **Enable SSH** to allow remote SSH access to the library. Spectra Logic recommends only enabling this feature at the direction of Spectra Logic Technical Support.
4. Click **Submit Changes**.

Power Settings

This section covers configuring the library power settings.

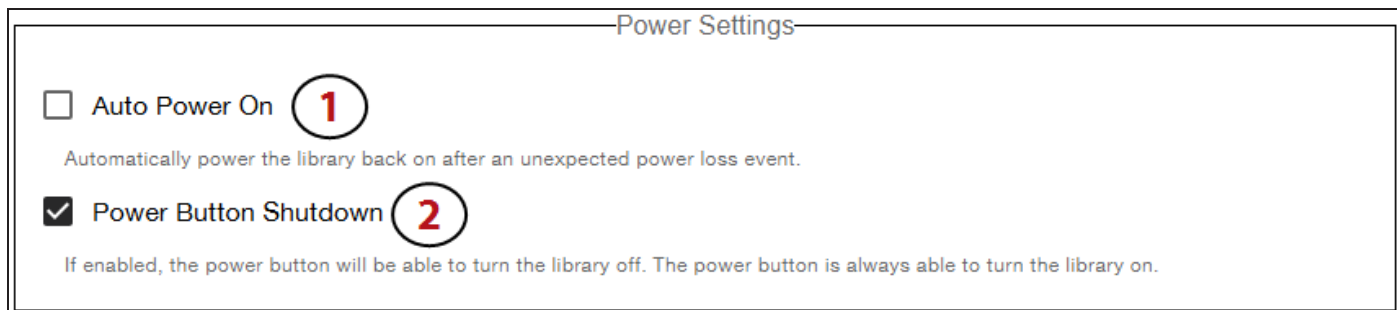

The screenshot shows a configuration window titled "Power Settings". It contains two settings:

- Auto Power On** (1)
Automatically power the library back on after an unexpected power loss event.
- Power Button Shutdown** (2)
If enabled, the power button will be able to turn the library off. The power button is always able to turn the library on.

Figure 27 The Power Settings section.

1. Select **Auto Power On** to automatically power the library after an unexpected power loss event.
2. Select **Power Button Shutdown** to allow users to press the library power button to turn the library off.
3. Click **Submit Changes** (not pictured).

Environment Settings

This section covers configuring the library environment settings.

The screenshot shows the 'Environment Settings' section of a web interface. It contains the following elements:

- 1** **Enable Environment Messages**
Send messages and email alerts about the temperature and humidity of the library
- 2** **Repeat Environment Error Messages**
Periodically repeat messages and email alerts when temperature or humidity remain outside their allowed ranges
- 3** **Message Repeat Delay**
How often to repeat environment messages and email alerts
- 4**

Figure 28 The Environment Settings section.

1. Toggle **Enable Environment Messages** to enable the library to send messages and email alerts about the library temperature and humidity.
2. Toggle **Repeat Environmental Error Messages** to allow the library to send repeat messages and email alerts when library temperature or humidity remain outside of recommended ranges.
3. Use the drop-down menu to select the **Message Repeat Delay**. This setting controls the frequency of repeat environmental error messages if they are enabled. You can choose between one hour, four hours, eight hours, and 24 hours periods.
4. Click **Submit Changes**.

Dashboard Settings

This section covers configuring the LumOS dashboard setting.


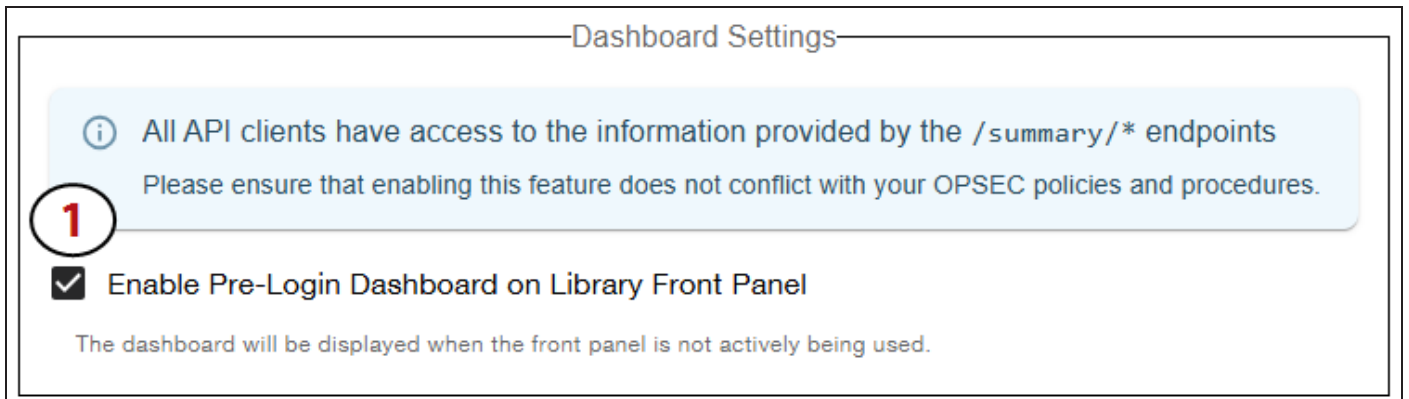


Figure 29 The Dashboard Settings section.

1. Select **Enable Pre-Login Dashboard on Library Front Panel** to display the pre-login dashboard screen on the library front panel.
2. Click **Submit Changes** (not pictured).

Startup Scan Settings

This section covers configuring the Startup Scan setting.

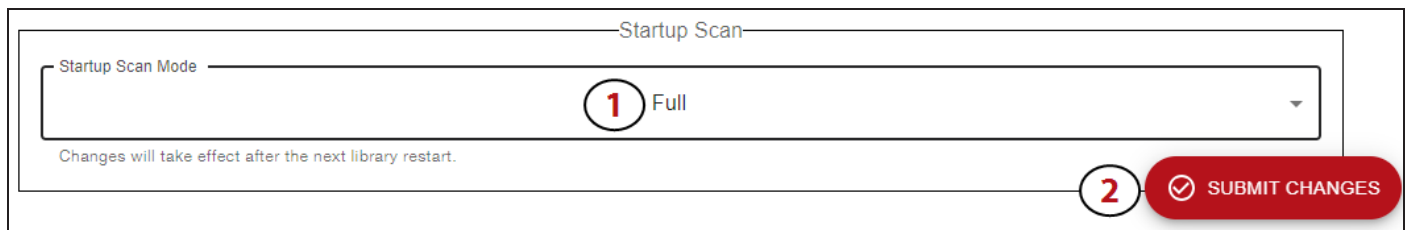

Startup Scan

Startup Scan Mode

1 Full

Changes will take effect after the next library restart.

2 SUBMIT CHANGES

Figure 30 The Startup Scan section.

1. Select the **Startup Scan** option from the drop-down menu. The library initiates a startup scan when the library is started or when the access door is closed.
 - **Full** - Perform a full inventory scan, verifying every tape barcode slot in every chamber.
 - **Quick** - Perform a column scan, verifying every magazine barcode and scanning the contents of unexpected magazines.
 - **None** - (default) Do not perform any scan on library startup or on door close.
2. Click **Submit Changes**.

CHAPTER 4 - CONFIGURING PARTITIONS

This chapter describes configuring the Cube partition settings and creation.

Partition Overview	70
Licensing	70
Configuring and Using Cleaning Partitions and Auto Drive Clean	70
Configuring and Using Storage Partitions	71
Storage Partition Options	71
Creating A Partition	74
Overview	74
Partition Interface	74
Creating A New Cleaning Partition	75
Creating A New Storage Partition	76
Modifying An Existing Partition	84
Deleting A Partition	86

PARTITION OVERVIEW

The library supports two types of partitions: storage partitions and cleaning partitions. When configuring partitions, keep in mind the requirements in the following sections.

User Privilege Requirements

Only a user with superuser or administrator privileges can create or modify partitions.

Licensing

By default the library allows you to create a single cleaning partition and a single storage partition using five storage chambers total. Additional partitions and storage chambers are available through purchasable licenses. Contact Spectra Logic to purchase additional licenses for your library. See [Licenses on page 109](#) for information on entering a purchased license key into the library.

Configuring and Using Cleaning Partitions and Auto Drive Clean

- Cleaning partitions do not count against the partition maximum.
- A cleaning partition can be shared by multiple storage partitions .
- Cleaning partitions use chambers that are not licensed with a Capacity On Demand (CoD) key. If all of the chambers are licensed, a cleaning partition uses any chambers that are not already assigned to another partition.
- Configuring a cleaning partition and assigning it to one or more storage partitions automatically enables the Auto Drive Clean feature for those storage partitions. The drives in the storage partitions with an associated cleaning partition are cleaned automatically when a drive indicates that it needs cleaning.
- The cleaning cartridges in the cleaning partition are inaccessible to the storage management software. If your storage management software supports automated drive cleaning and you plan to use this method to clean the drives, store a TeraPack magazine (not a Maintenance TeraPack magazine) containing one or more cleaning cartridges in the storage partition's storage pool. The storage management software can then access the cleaning cartridges when needed.



IMPORTANT

If you store cleaning cartridges in the storage partition, make sure that they are identified as required by your storage management software to prevent the storage management software from attempting to use the cartridges for writing or reading data.

- The cleaning cartridges used in a cleaning partition must be stored in specially labeled Maintenance TeraPack magazines.
- If you do not configure a cleaning partition and associate it with the storage partitions, you must use your storage management software to perform the cleaning or use the LumOS user interface to manually move a cleaning cartridge to the drive that needs cleaning.
- Media moves initiated from the front panel or REST API commands do not trigger drive auto cleaning.

Configuring and Using Storage Partitions

- You can configure storage partitions either before or after you configure cleaning partitions. If you want to use Auto Drive Clean with a storage partition, it is easier to configure the cleaning partition before you configure the storage partition. If you choose to create the storage partition before you create the cleaning partition, you need to modify the storage partition to assign the cleaning partition to it.
- The library requires, at a minimum, one storage partition to be configured before you can use the library. Each storage partition must have a minimum of one drive and one chamber assigned to the storage pool.
- When using both Fibre Channel and SAS drives in the library, the different drive interface types must be in separate partitions.
- Chamber Availability — The number of chambers available for a storage partition depends on how many chambers in the library are licensed and how many chambers are used by other partitions.

Note: The more partitions in a library, the longer each move can take. If move requests can be sent to several partitions at once, you may need to increase the timeout setting in your storage management software.

Storage Partition Options

Before you begin configuring partitions, gather the information listed in the following table.

Option	Description
Soft Load	The Soft Load feature uses the drive's soft load (or auto load) functionality to improve library performance. Soft Load requires that the library have high performance transporters.
MLM Discovery	Choose the MLM discovery options for the partition. <ul style="list-style-type: none"> • Disabled - Prevent the partition from populating in the MLM database. • Auto Discovery - Automatically add MLM information for all tapes in a partition that are not in the MLM Database already.

Option	Description
	<ul style="list-style-type: none"> • PreScan - Automatically add newly imported cartridges to the MLM database. Additionally checks the cartridge to determine if it has any of the following characteristics: <ul style="list-style-type: none"> • Non-MLM-enabled • Broken or dislodged leader • Write protected • Encrypted tape with a moniker not currently stored in the library • Red media health
Read Element Status	<p>Read Element Status returns the status of elements in the partition.</p> <ul style="list-style-type: none"> • Standard - The default setting. • Tape Generation - Adds Media Domain, Media Type, Drive Domain, and Drive Type to the SCSI command response.
SlotIQ	<p>SlotIQ optimizes robotics performance by allowing the library to virtualize slot locations and optimize the order of moves in a queue to reduce the amount of robotic movement required for any set of moves.</p>
Quick PostScan	<p>Quick PostScan performs a readability verification test to verify data integrity for all of the cartridges in the partition. Quick PostScan verifies all the data on a single wrap from the beginning of the tape (BOT) to the end of the wrap or end of recorded data (EOD), whichever comes first.</p> <p>Note: Quick PostScan is only supported for Spectra Certified Media, and only for tape cartridges in storage slots. Tape cartridges in drives or Entry/Exit slots are not scanned.</p> <p>Note: Media moves initiated from the front panel or REST API commands do not trigger PostScan operations.</p>
Barcode	<p>Choose the barcode label options for the partition. Spectra Certified data cartridges with standard barcode labels use a barcode with eight human-readable characters followed by a checksum character that is not human-readable.</p> <p>Barcode options allow the user to set the checksum behavior, truncation side, and the number of characters to report.</p> <ul style="list-style-type: none"> • Checksum Behavior - The library supports three different checksum behaviors. Use Checksum (default) verifies the barcode against the checksum during a read. Ignore Checksum does not verify the barcode against the checksum. If your labels do not include a checksum, use No Checksum. • Truncation Side - Truncates barcode characters in the library. The library supports Left and Right side truncation. • Number of Characters to Report - Select the number of barcode characters to report. If Number of Characters to Report is set to a lower number than 16, the library truncates characters on the side configured by Truncation Side.

Option	Description
	<p>IMPORTANT Be careful when specifying the number of characters to report. You may end up with duplicate barcodes reported. For example, 12345XXXL2 and 12345ABCL3 are both reported as 12345 with a right side truncation of 5 characters.</p>

CREATING A PARTITION

Overview

The LumOS user interface allows the user to create a new partition on the Cube. This section covers [Creating A New Storage Partition on page 76](#) and [Creating A New Cleaning Partition on the next page](#).

User Privilege Requirements

Only a user with superuser or administrator privileges can create or modify partitions.

Partition Interface

Log into the LumOS user interface and select **Configuration > Partition**. The Partitions screens displays.

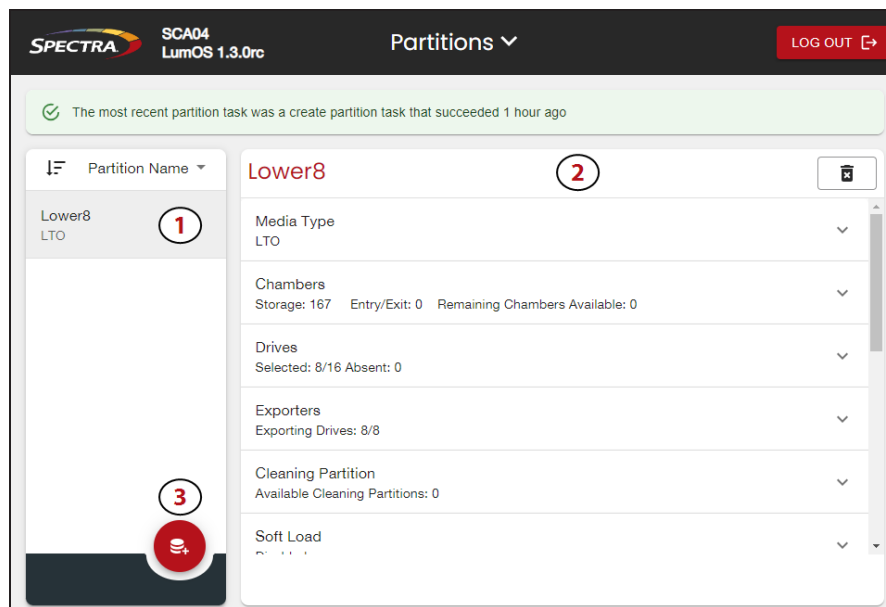


Figure 31 The LumOS partitions screen.

Features of the Partitions screen include:

- Partition Tab (1) - Displays all existing partitions. The filter sorts the list by Partition Name or Media Type.
- Partition Management Tab (2) - Displays the information about the selected partition.
- Create New Partition button (3) - Opens the wizard to create a new partition.

Creating A New Cleaning Partition

The following section describes the steps to create a new cleaning partition. The step numbers relate to the numbered locations on the figure below.

Figure 32 The LumOS cleaning partition creation screen.

1. Click the **New Partition** button. Enter the name for the new cleaning partition and click **Begin Cleaning Partition Creation**. The cleaning partition creation section displays.

Note: Only alphanumeric characters are allowed for the partition name.

2. Select the **Media Type** you want to use. Cleaning partition media type must match the storage partition media type.
3. Use the **Storage** entry field or slider to select the number of chambers for the partition.
4. Select the desired **Checksum Behavior** using the drop-down menu. You may specify the **Truncation Side** using the drop-down menu, and the number of characters using the slider.
5. Click **Create Cleaning Partition**.

Creating A New Storage Partition

The following section describes the steps to create a new storage partition. The step numbers correspond to the numbered locations on the figures below. Start by clicking the **New Partition** button and entering the name for the new storage partition.

Note: Only alphanumeric characters are allowed for the partition name.

Click **Begin Storage Partition Creation**. The storage partition creation section displays.

Note: The Partition name cannot be edited in the future.

The screenshot shows the 'Test' storage partition creation interface. It is divided into two main sections: 'Media Type' and 'Chambers'.
 1. The 'Media Type' section features a drop-down menu currently set to 'LTO'. A red circle with the number '1' is positioned above the menu.
 2. The 'Chambers' section contains a light blue informational box on the left stating: 'Slots are allocated to partitions on a chamber basis. At least one storage chamber must be allocated.' To the right of this box are two sliders. The top slider is labeled 'Storage' and has a value of '0' on the left and '210 available' on the right. The bottom slider is labeled 'Entry/Exit' and also has a value of '0' on the left and '210 available' on the right. A red circle with the number '2' is positioned above the 'Storage' slider.

Figure 33 The LumOS storage partition creation screen - Media Type and Chambers.

1. Use the **Media Type** drop-down menu to select LTO.

Note: Media type cannot be changed after creation.

2. Use the entry fields or sliders to select the number of **Storage** chambers and **Entry/Exit** chambers for the partition.

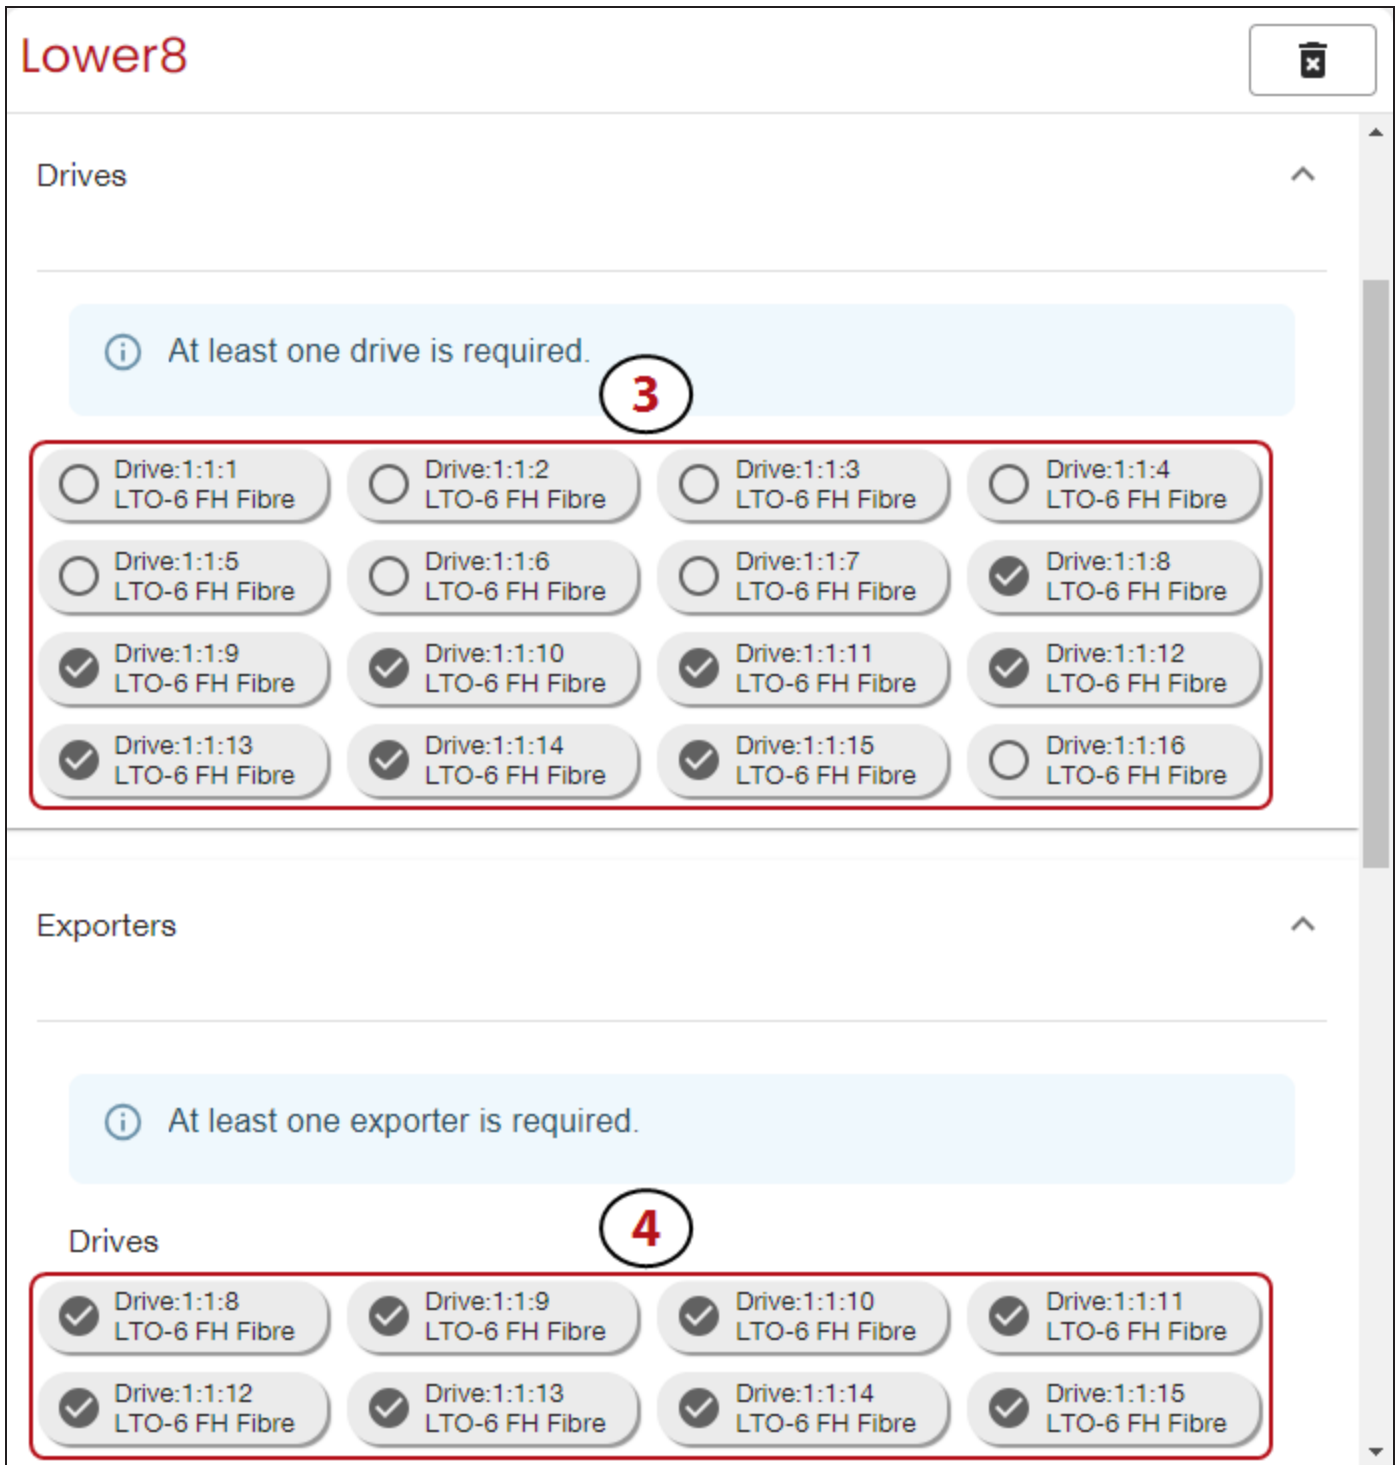


Figure 34 The LumOS storage partition creation screen - Drives and Exporters.

3. Select the **Drives** to include in the partition. At least one drive is required to create a partition.
4. Select any desired drives selected in Step 3 as an **Exporter**. At least one exporter is required to create a partition.

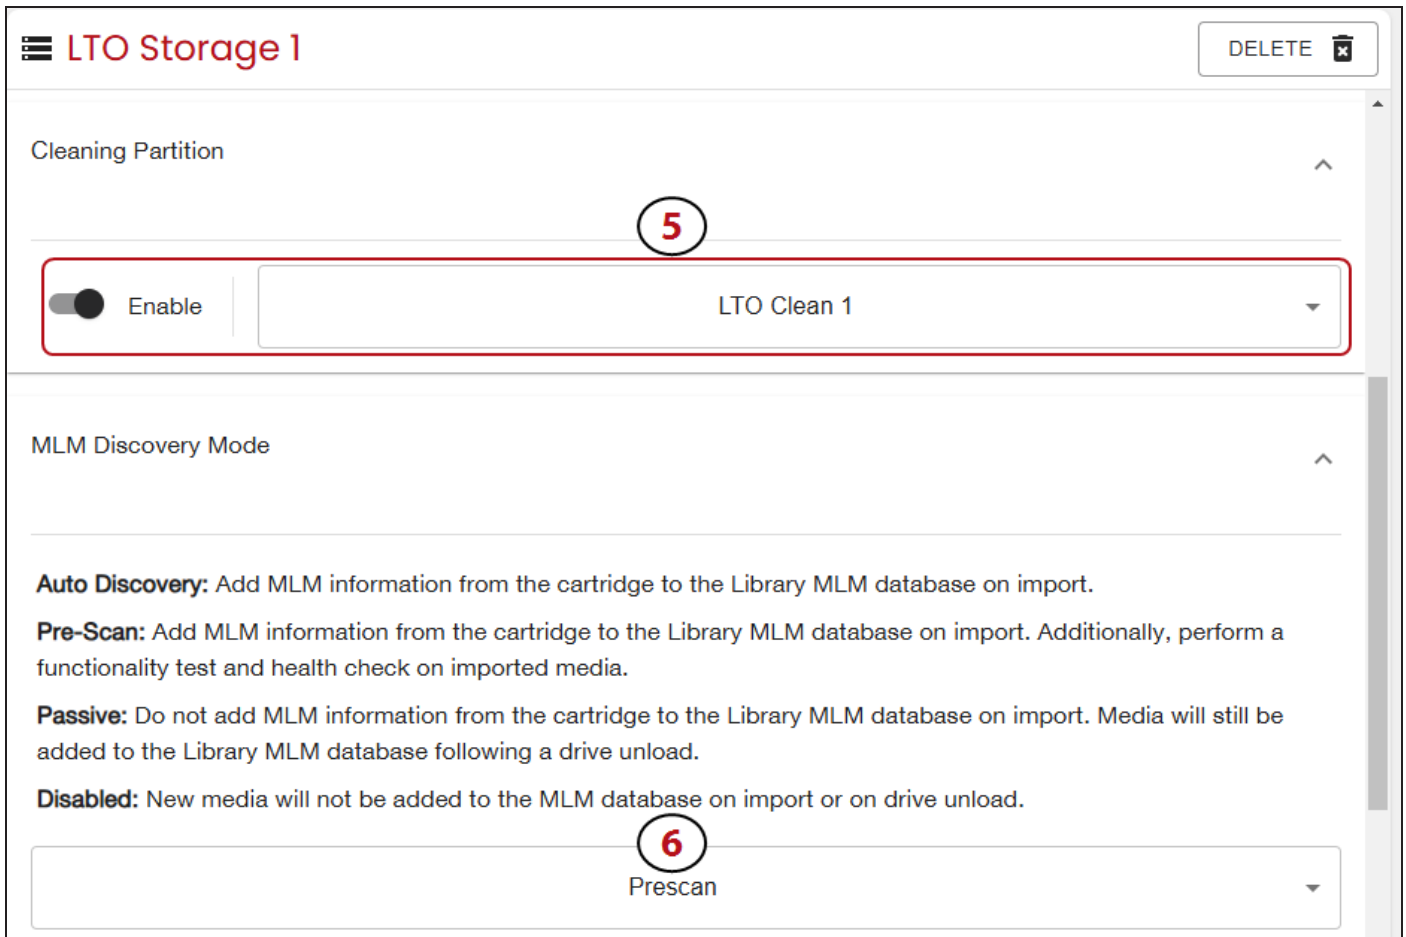


Figure 35 The LumOS storage partition creation screen - Cleaning Partition and MLM Discovery Mode.

5. If desired, select a **Cleaning Partition**. Cleaning partitions must use the same media type as the storage partition.
6. Select **MLM Discovery Mode**. Available options are **Auto Discovery**, **PreScan**, **Passive**, and **Disabled**.
 - **Auto Discovery** automatically adds MLM information for all tapes in a partition that are not in the MLM Database already.
 - **PreScan** discovers newly imported cartridges, adds them to the MLM database, and additionally runs a basic health and function test on the tape cartridge.
 - **Passive** does not discover new imported cartridges, but does add tape cartridge information to the MLM database when the tape cartridge is unloaded from a drive.
 - **Disabled** prevents the tape cartridges in the partition from populating to the MLM database.

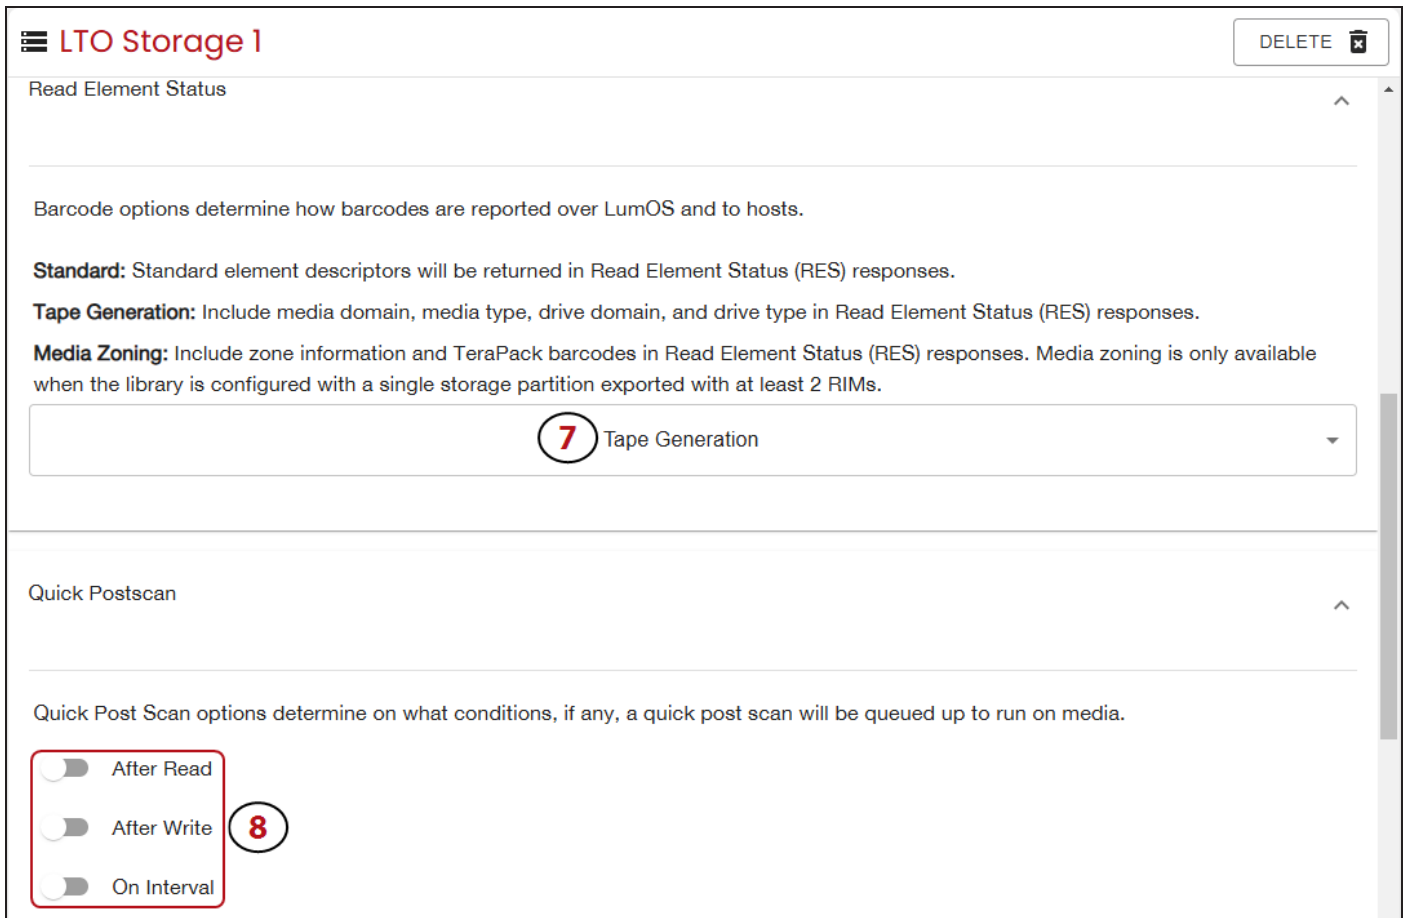


Figure 36 The LumOS storage partition creation screen - Read Element Status Options and Quick PostScan.

7. Use the **Read Element Status Options** drop-down menu to select between **Standard** and **Tape Generation** options.
8. Use the selectors to configure the **Quick PostScan** frequency. If you select **On Interval**, enter a value in the entry field to indicate the number of days between scans.

Note: Media moves initiated from the front panel or REST API commands do not trigger PostScan operations.

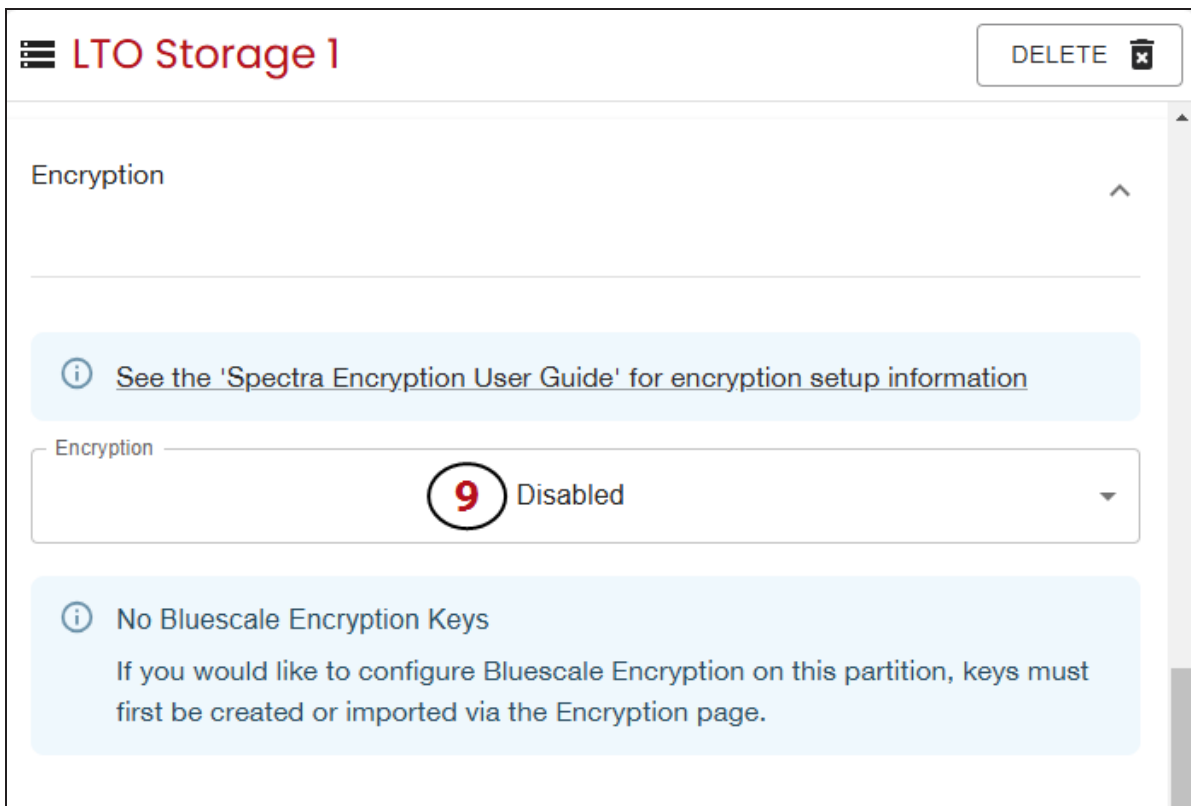


Figure 37 The LumOS storage partition creation screen - Encryption Options.

9. If desired, use the drop-down menu to select an **Encryption** type. Available options are **Disabled** and **BlueScale Encryption**. If you select to use encryption, use the **Encryption Key** drop-down menu to select an existing key. For more information on how to add an encryption key, see [Configuring Encryption](#) on page 89.

LTO Storage 1 DELETE

Barcode Options ^

Barcode options determine how barcodes are reported over LumOS and to hosts.

Use Checksum: Your labels include a checksum and you want the barcode verified against the checksum when it is read. Verification is not generally required, but adds extra confirmation that the barcode label was read correctly by the barcode reader.

No Checksum: Your labels do not include a checksum.

Ignore Checksum: Your labels include a checksum character but you do not want the barcode verified against the checksum when it is read.

Left: Truncate the left side and report only the right-most n number of characters in the barcode.

Right: Truncate the right side and report only the left-most n number of characters in the barcode.

For example, if the barcode is 1234567L2, truncate right with a length of 5 will report the barcode as 12345.

10 Use Checksum

Checksum Behavior

11 Truncation Side

16 **12** Number of Characters to Report

Figure 38 The LumOS storage partition creation screen - Checksum Options.

- 10.**For Barcode Options, use the **Checksum Behavior** drop-down menu to select between **Use Checksum**, **No Checksum**, or **Ignore Checksum**.
- 11.**Use the drop-down menu to select the **Truncation Side**.
- 12.**Enter a number into modify the **Number of Characters to Report**.

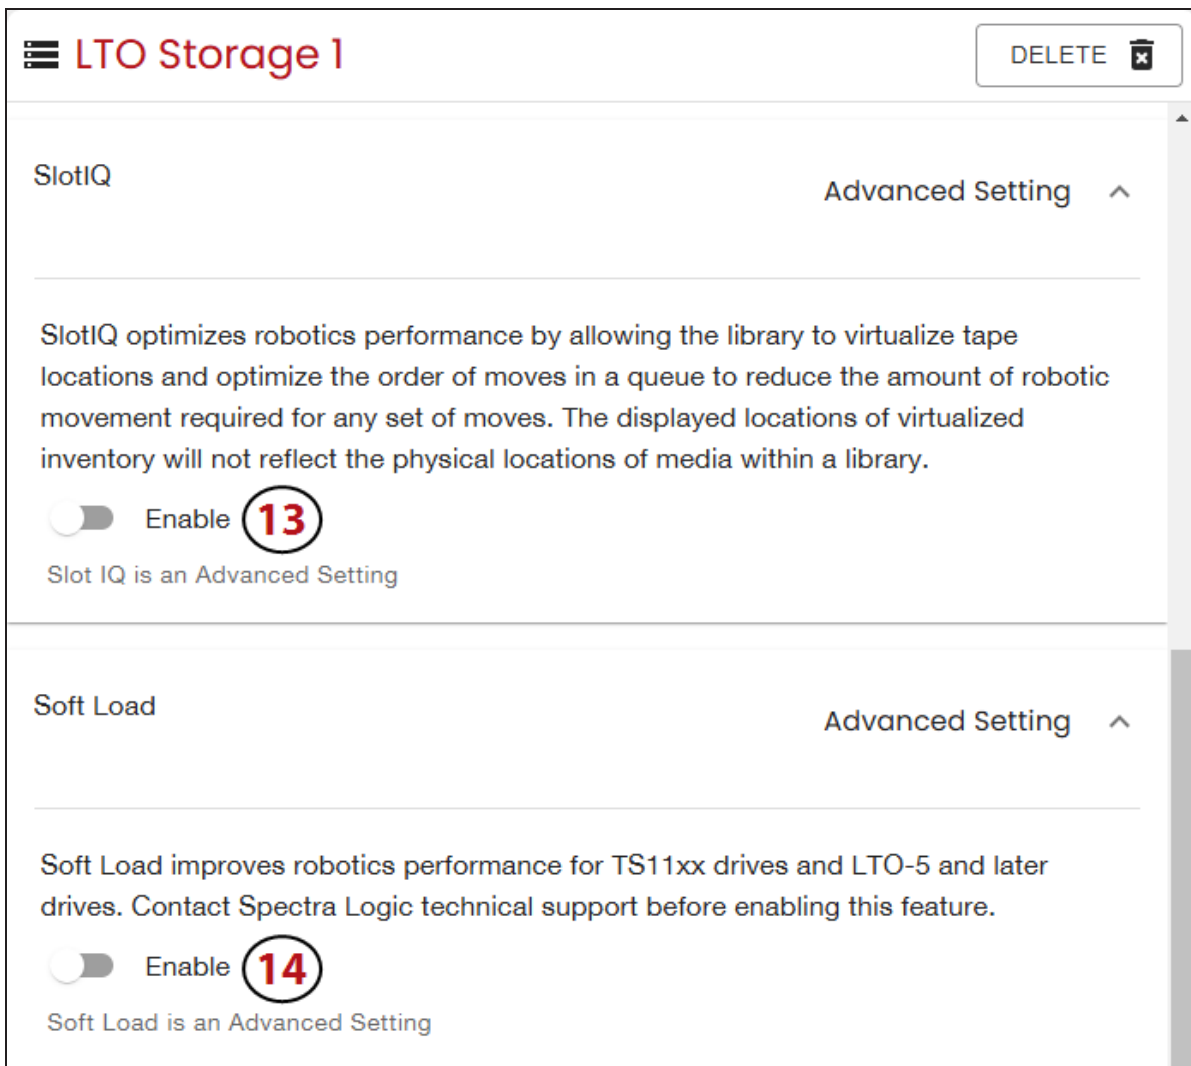


Figure 39 The LumOS storage partition creation screen - SlotIQ and Soft Load Options.

- 13.** If desired, use the selector to enable **SlotIQ**.
- 14.** If desired, use the selector to enable **Soft Load**.

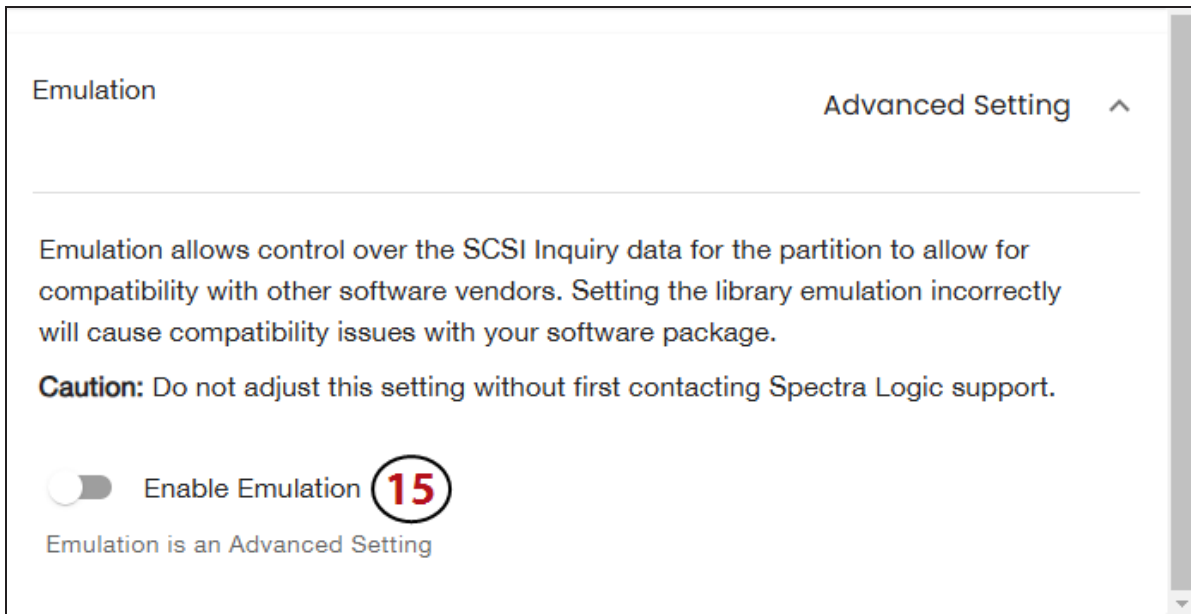


Figure 40 The LumOS storage partition creation screen - Emulation Options.

15. If desired, use the selector to enable **Emulation**. If you select to use emulation, enter **Vendor** and **Product** information in the required fields.

Note: Contact Spectra Logic Technical Support before modifying this setting.

16. Click **Create Storage Partition** at the bottom of the screen (not shown).

MODIFYING AN EXISTING PARTITION

This section describes how to edit or modify an existing partition.

**CAUTION**

Use your storage management software to empty all drives and discontinue host operations before modifying an existing partition.

Preparation

Before making changes to an existing partition, review the information in the [Partition Overview on page 70](#) to ensure that you address any requirements. In addition, consider the following recommendations and requirements:

- Spectra Logic strongly recommends backing up the library configuration, either to a USB device or as an attachment to an email before you make changes.
- When reducing the number of chambers assigned to a partition, physically export any magazines in those chambers before you remove chambers from the partition.

**IMPORTANT**

By default, the library deletes empty chambers from a partition first. However, if all chambers are full, the library is forced to delete populated chambers. When this happens, the magazines in the deleted chambers are no longer accessible through the LumOS user interface. You must add these chambers to either a new or existing partition before the magazines are accessible again.

Modify a Partition

Log into the library as a user with superuser or administrator privileges, then navigate to **Configuration > Partitions**. Use the following figure and corresponding steps to modify an existing partition.

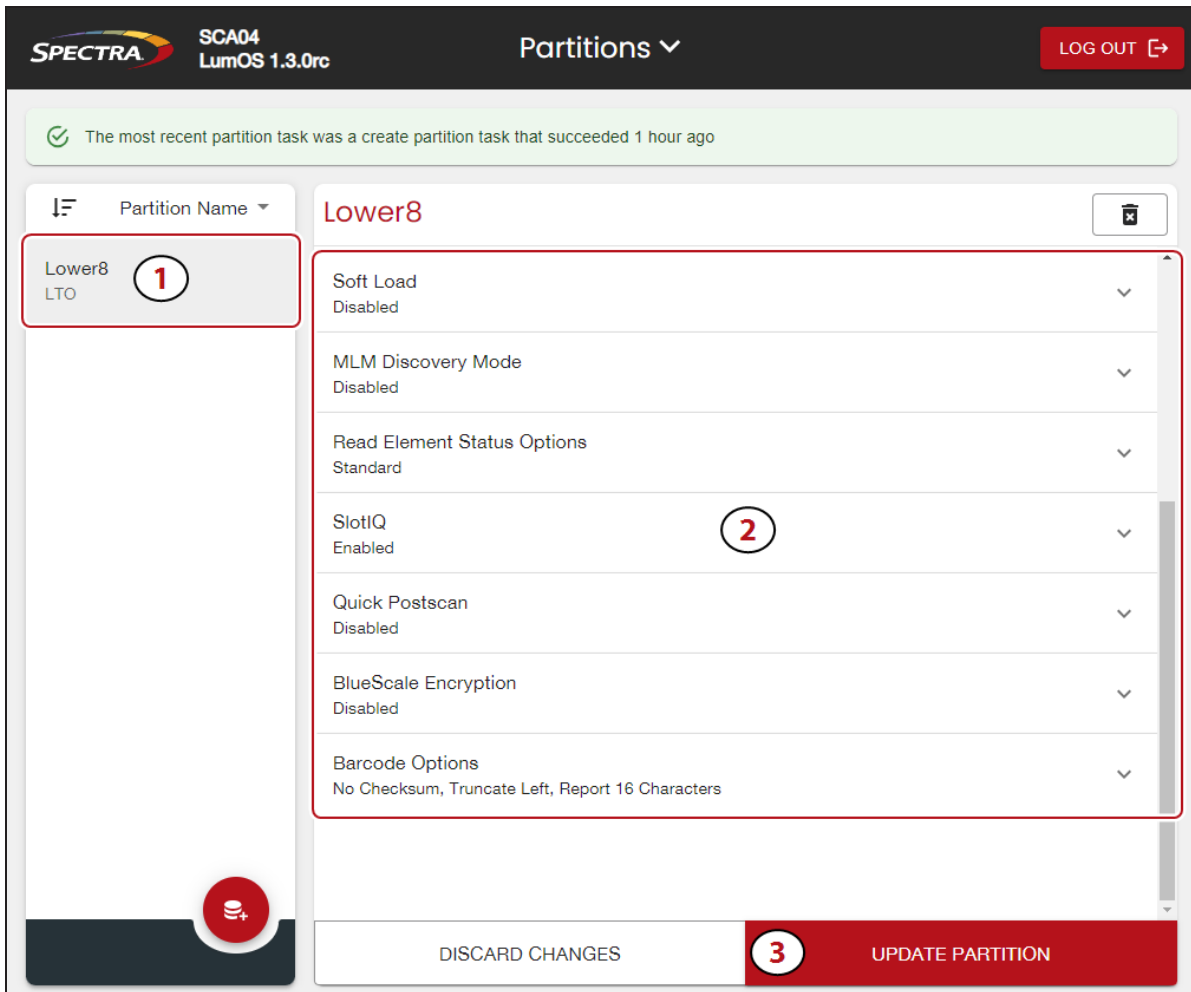


Figure 41 The Partitions screen.

1. Select the partition you want to modify.
2. On the Partition Management Tab, expand the sections you want to modify and make your desired changes. See [Storage Partition Options](#) on page 71 for information about each setting.
3. Click **Update Partition**.

DELETING A PARTITION

When you delete a partition, the drives and chambers previously assigned to that partition are available to be assigned to a new or existing partition.

Preparation

Before deleting an existing partition, make sure you address the following:

- Spectra Logic strongly recommends backing up the library configuration before you delete a partition.
- Empty all drives in the partition.
- To ensure that you do not inadvertently mix cartridges from one storage partition with that from another, use your storage management software to eject all cartridges from the storage partition's storage pool.



IMPORTANT

After the partition is deleted, any magazines in the chambers that were assigned to the partition's storage and entry/exit pools are not accessible until the chambers are assigned to another partition.

- If the storage partition is configured to use encryption, make sure that you export the encryption key for any cartridges that were in the partition.
- If you plan to delete a cleaning partition, first remove the cleaning partition from any existing storage partitions, otherwise the delete fails.

Auto Configuration Save

When you delete a partition, the library automatically generates a configuration backup file and saves it to the memory card in the LCM. If you configured the email option, an email with the backup file as an attachment is sent to the specified recipient.

Delete A Partition

Use the following steps to delete an existing partition:

1. Log in as a user with superuser or administrator privileges and navigate to **Configuration > Partitions**.
2. Select the partition you want to delete.
3. Click the trashcan icon in the top right of the Partition Management Tab.
4. Click **Confirm** on the confirmation screen.

CHAPTER 5 - MANAGING ENCRYPTION

This chapter describes supported encryption methods and how to configure encryption on your Cube.

BlueScale Encryption Key Management Overview	88
Understanding the Components	88
Configuring Encryption	89
Adding BlueScale Encryption	89
Exporting BlueScale Encryption Keys	92
Deleting BlueScale Encryption Keys	93
Authorization Settings	94

BLUESCALE ENCRYPTION KEY MANAGEMENT OVERVIEW

BlueScale Encryption key management is tightly integrated into your Cube. BlueScale Encryption key management is provided through the library's user interface.

Understanding the Components

The BlueScale Encryption key management system contains two major components:

- **The BlueScale Encryption Key management Software** — The key management feature is accessed through the library's user interface, either using the operator panel or a remote connection through the LumOS web interface. Spectra BlueScale encryption key management is available in Standard and Professional Editions to meet your site security requirements.
- **The Encryption Chip in the LTO-6 or Later Generation Drives** — Using encryption-enabled hardware makes encryption extremely fast and places no burden on your network. After encryption is enabled, data is automatically encrypted as it is written to tape.
Note: Encryption-enabled LTO drives use the same encryption algorithm, ensuring that tapes encrypted by one LTO drive generation can be read by another generation of drive as long as the tape itself is compatible with the drive.

CONFIGURING ENCRYPTION

You can use the LumOS user interface to configure BlueScale for the library. This section describes adding, importing, and exporting BlueScale Encryption and how to configure authorization settings.

To begin, log in to the LumOS user interface and select **Configuration > Encryption**.

Adding BlueScale Encryption

Use the figures below to add or import an encryption key.



Figure 42 The Encryption screen.

1. Click **Create Key** or **Import Key**.
 - For **Create Key**, follow Step 2 on page 90.
 - For **Import Key**, follow Step 4 on page 90.

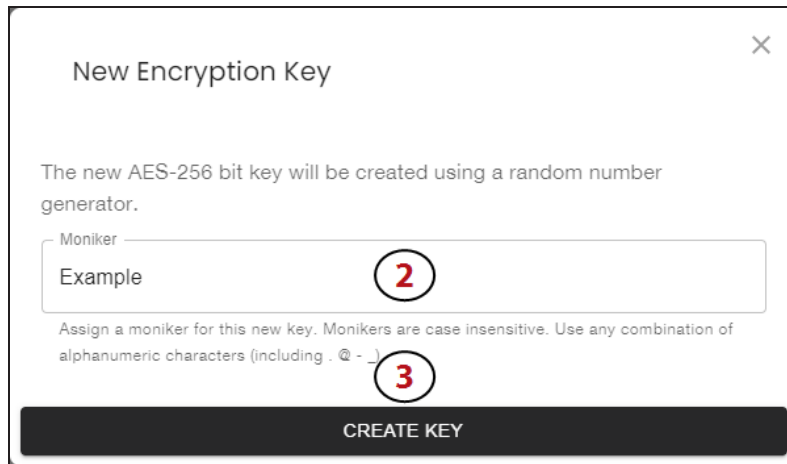


Figure 43 The New Encryption Key screen.

2. To create a new encryption key, enter a **Moniker** in the text field.
3. Click **Create Key**.

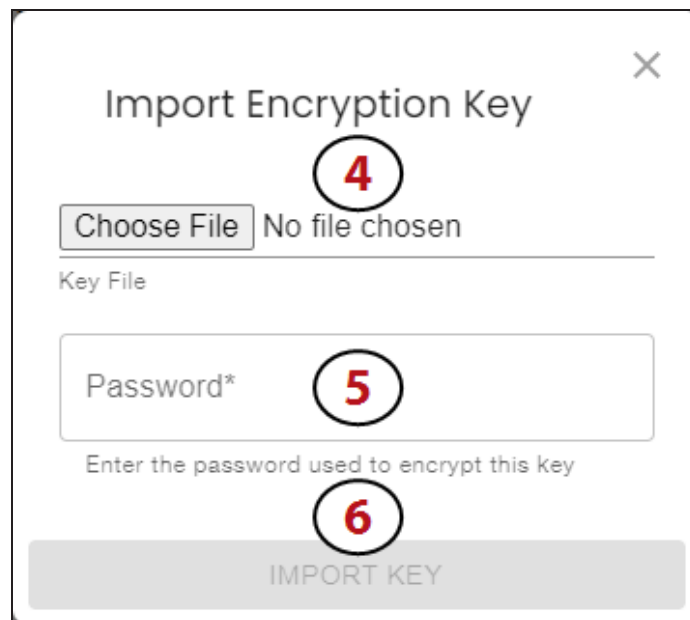


Figure 44 The Encryption screen.

4. To import an existing encryption key, click **Import Key** (not pictured) at the bottom of the screen. Click **Choose File** and use file explorer to locate the desired encryption key file.
5. Enter the **Password** for the selected key into the text field.
6. Click **Import Key**.

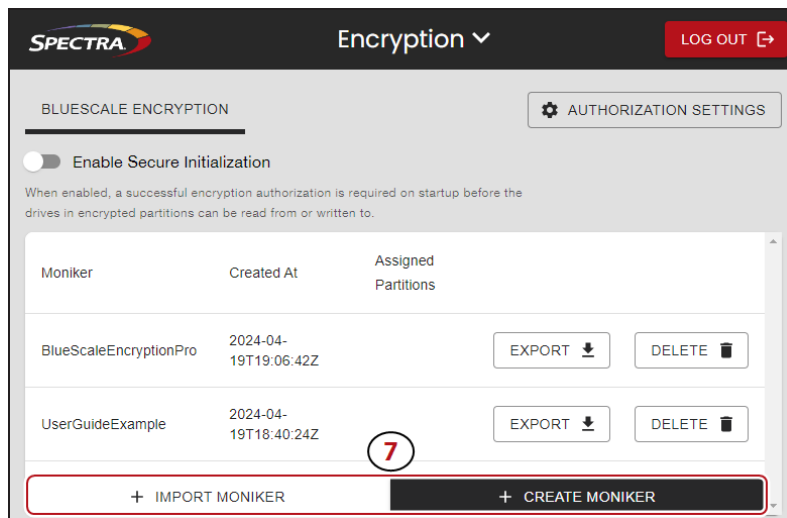


Figure 45 The Encryption screen.

7. If you have a BlueScale Encryption Professional license, you can repeat the above steps to create or import additional encryption keys.

Note: To add an encryption key to a partition, see [Creating A New Storage Partition](#) on page 76.

Exporting BlueScale Encryption Keys

Use the figures below to export an existing BlueScale encryption key.



Figure 46 The Encryption screen.

1. Click **Export** next to the desired encryption key.

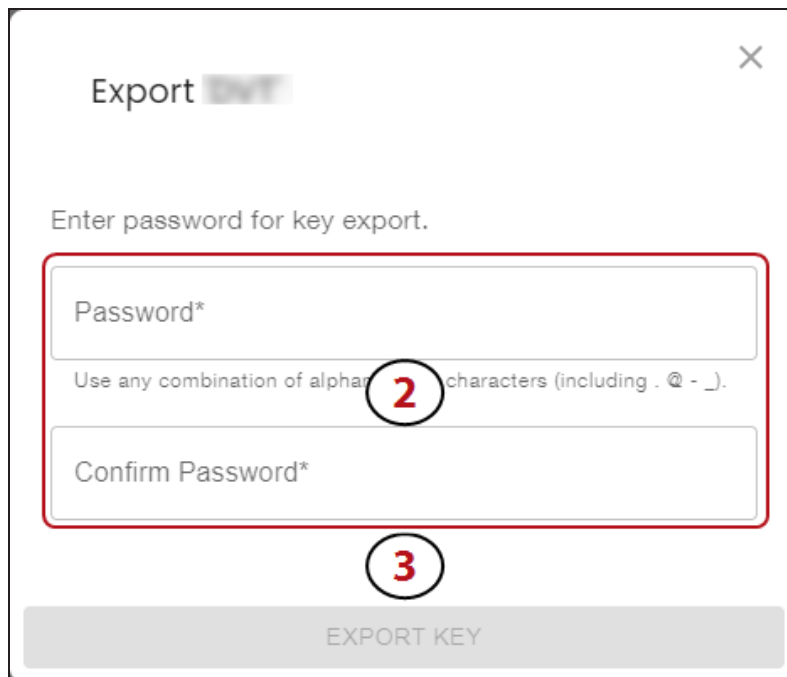


Figure 47 The Export screen.

2. Enter and confirm the **Password** for the selected key. The password is required when you import the key.
3. Click **Export Key**.

Deleting BlueScale Encryption Keys

Use the figures below to delete an existing BlueScale encryption key. Deleting an encryption key does not remove the encryption from any assigned partitions. Be sure to clear the encryption setting from existing partitions and to export a copy of the encryption key prior to deletion.



CAUTION

Make sure that you export a copy of the existing key before you delete it. You need a copy of the exported key and its password to import the key back into the library and restore data that was encrypted with the key.

1. Export at least one copy of the encryption key and store it in a safe location (see [Exporting BlueScale Encryption Keys](#) on the previous page).
2. If the encryption key you plan to delete is assigned to a partition, edit the partition to disable encryption (see [Modifying An Existing Partition](#) on page 84).

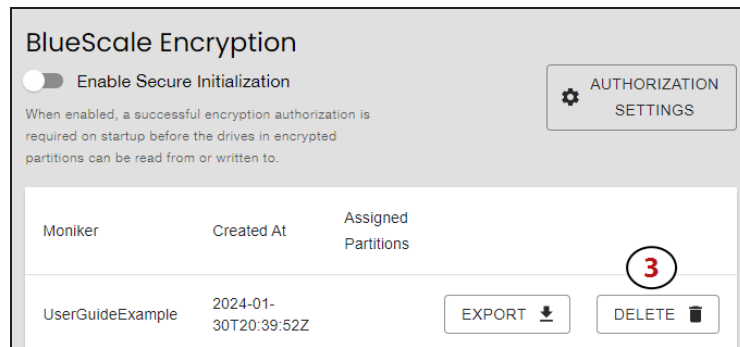


Figure 48 The Encryption screen.

3. From the Encryption screen, click **Delete** on the row of the key you want to delete.

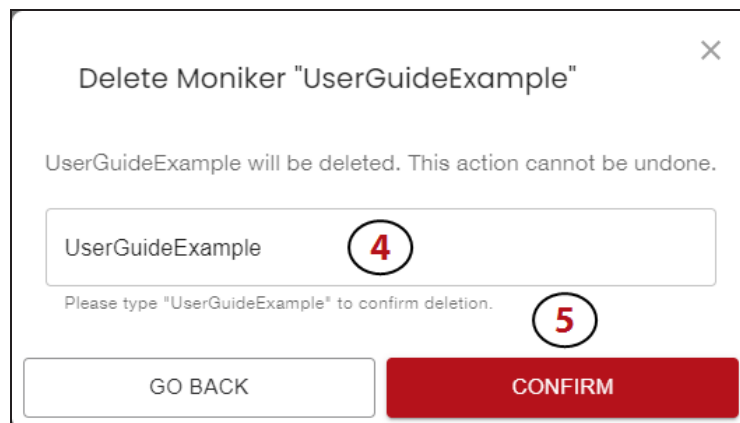


Figure 49 The Delete Moniker screen.

4. In the confirmation window, enter the **Moniker** of the key into the text field.
5. Click **Confirm** to delete the encryption key.

Authorization Settings

The section below provides an overview of the authorization settings in the LumOS user interface.



Figure 50 The Encryption screen.

1. Toggle the selector for **Enable Secure Initialization** if desired. Secure initialization requires encryption authorization on library initialization for drives in encrypted partitions before read and write actions can occur.
2. Click **Authorization Settings** button to open the Authorization Settings window.

Figure 51 The Authorization Settings screen.

3. In the **Current Password** text field, enter the current encryption password.
4. Enter and confirm the **New Password** in the text fields.
5. Click **Submit**.

Note: To reset an expired password, you must use the LumOS API commands.

CHAPTER 6 - USING THE LIBRARY

This chapter describes using the Cube, including moving, importing, and exporting media.

Controlling the Library Power	97
Power On the Library	97
Power Off the Library	98
Media Lifecycle Management	99
Navigating the MLM Screen	99
MLM Filters	100
Mount History	101
Media Details	102
Tape Mount Details	103
Drive Lifecycle Management	103
Overview	104
Drive Health Reports	104
Drive Lifecycle Management	105
Navigating the DLM Screen	105
Drive Mount History	106
Drive Details	107
Drive Actions	108
Licenses	109
Adding a License	109

CONTROLLING THE LIBRARY POWER

The library power is controlled using the front panel power button.

Power On the Library

Before powering on the library, make sure that all of the library's power cables are plugged into AC outlets.

Use the Front Panel Power Button

1. Press and hold the front panel power button until the button's LED illuminates and the LCD operator panel turns on.



Figure 52 The front panel power button.

2. Wait while the library completes its power-on sequence.
3. After initialization is complete, the LumOS login screen displays (see [Logging in to the LumOS User Interface on page 36](#)).

Note: If the library cannot complete the initialization process, it generates system messages and enters maintenance mode. Contact Spectra Logic Technical Support for assistance (see [Contacting Spectra Logic on page 9](#)).

Power Off the Library

Before powering off the library, use the following steps to prepare for shut-down.

1. Use your storage management software to stop any backups running to the library.
2. Move any media loaded in tape drives to storage locations.
3. Power off the library by pressing and holding the front panel power button for approximately 5 seconds until the button's LED starts flashing. The library begins its power-off sequence, which allows the LumOS software and components to shut down gracefully.



WARNING

The library is not de-energized when using the front panel or API commands to power off the library. To fully de-energize the library, you must disconnect the power cords from the back of the library.

MEDIA LIFECYCLE MANAGEMENT

This section describes how to use Media Lifecycle Management to proactively monitor and report on the health of cartridges in your library.

User Privilege Requirements

Only a user with superuser or administrator privileges can enable MLM and configure the global MLM features.

Navigating the MLM Screen

To view Cube Media Lifecycle Management (MLM) information, log in and navigate to **Status > MLM**.

The screenshot shows the LumOS MLM interface. At the top, it displays 'SPECTRA T680-Hollywood LumOS 3.0.0' and 'MLM'. The date and time are '1/16/2026 12:28:01 PM PST'. There are notification icons for '99+', a user profile, and a 'LOG OUT' button. Below the header, it shows '85 Tapes Present' and '105 Total MLM Records'. A 'Page Mode' dropdown menu is set to 'Present Media'. There are 'CLEAR FILTERS' and 'CHANGE FILTERS' buttons. A table lists tape records with columns: Tape Barcode, Health, Load Count, Capacity Used, Last Load Partition, Read Last Load, Written Last Load, and Last Unload Time. Three annotations are present: '1' points to the 'Page Mode' dropdown, '2' points to the 'CHANGE FILTERS' button, and '3' points to the 'Tape Barcode' column header.

Tape Barcode	Health	Load Count	Capacity Used	Last Load Partition	Read Last Load	Written Last Load	Last Unload Time (America/Los_Ange)
626784L7	✓	Uncertified	Uncertified	Partition LTO7 YDCM ADI	Uncertified	Uncertified	Jan 9, 2026 10:13 AM
452678L5	✓	Uncertified	Uncertified	Partition LTO5 6 ADI	Uncertified	Uncertified	Jan 8, 2026 11:53 PM
000040L7	✓	1902	0/6,000 GB (0%)	Partition LTO7 YDCM ADI	0 MB	5 MB	Jan 9, 2026 10:32 AM

Figure 53 The LumOS MLM screen.

Use [Figure 53](#) to help you navigate the features of the MLM screen.

1. Use the drop-down menu to select between viewing **Present Media** or **Exported Media**.
2. Use the **Change Filters** feature to filter the records. See [MLM Filters](#).
3. Click the **Tape Barcode** buttons to view detailed tape information. See [Mount History](#).

MLM Filters

Use filters to sort through your library MLM records. To access the filter menu, select **Change Filters** from the MLM screen in [Figure 53](#).

Figure 54 The LumOS MLM Filters screen.

1. Use the Text Filters text boxes to specify a **Tape Barcode**, **Tape Serial Number**, or **Last Loaded Partition**.
2. Use the Date Filters boxes to specify the **Earliest Manufacture Date** or **Latest Manufacture Date**.
3. Use the Range Filters to specify a minimum and maximum value for **Tape Health**, **Remaining Capacity** in gigabytes, or **Used Capacity** in gigabytes. Only tapes within the specified ranges will display.
4. Use the **Spectra Certified Media Only** toggle to filter out noncertified media.
5. Click **Set Filters** to apply the filter settings.

Mount History

To view the MLM Mount History screen, click the **Tape Barcode** from the MLM home screen. Use Figure 55 to help you navigate the mount history screen.

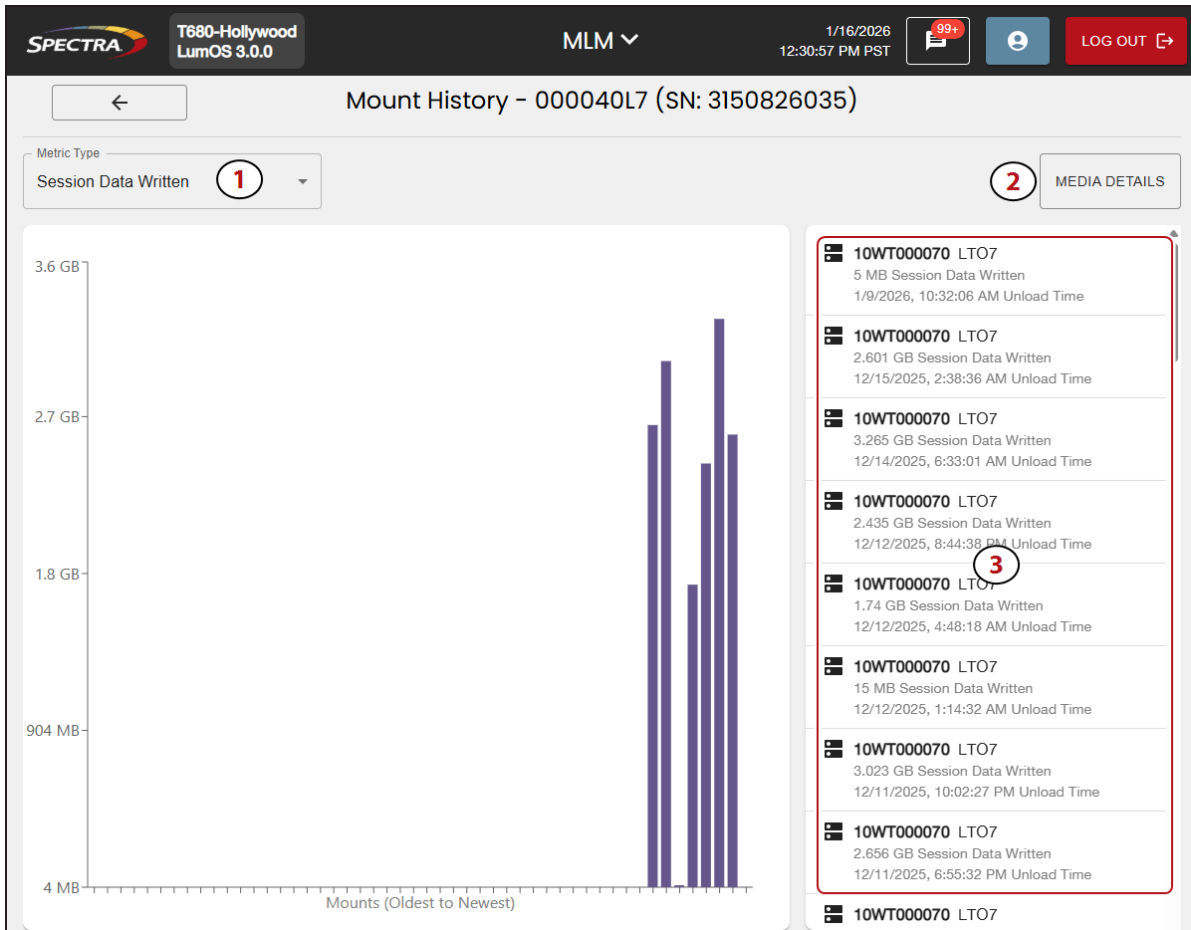


Figure 55 The LumOS Mount History screen.

1. Use the **Metric Type** drop-down menu to select the metric you want to view on all mount periods.
2. Click **Media Details** to view the media details for the tape. See [Media Details](#) on the next page for more information.
3. Click on a drive mount history entry to expand and view all drive details. See [Mount History](#) for more information.

Media Details

To view the Media Details screen, select **Media Details** from the MLM Mount History screen.

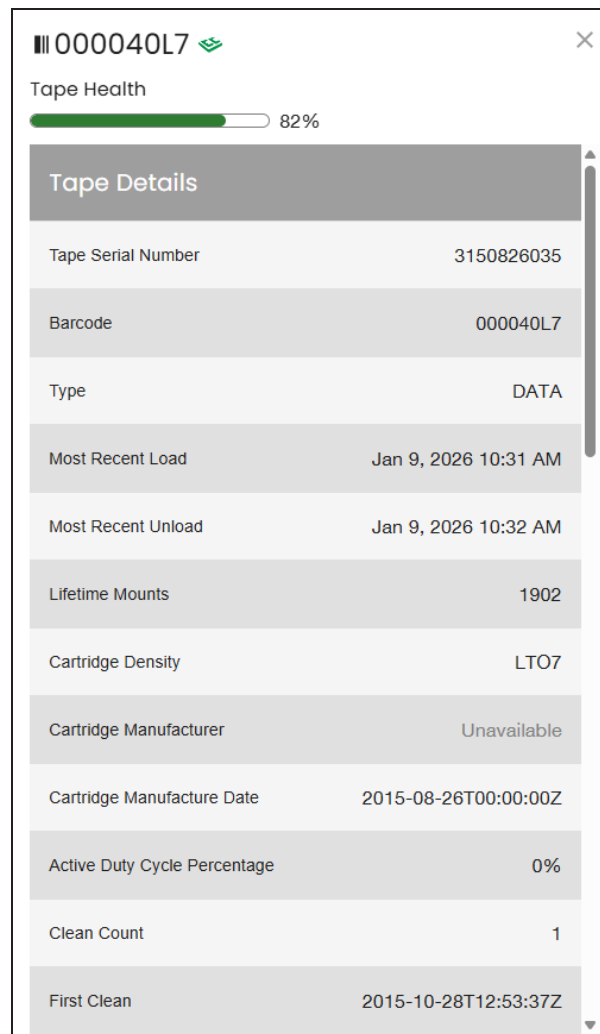


Figure 56 The LumOS Media Details screen.

The **Tape Details** screen displays all tracked metrics for the tape.

Tape Mount Details

To view the Mount Details screen, select an entry from Step 3 on page 101 under Mount History. The Mount Details screen displays.

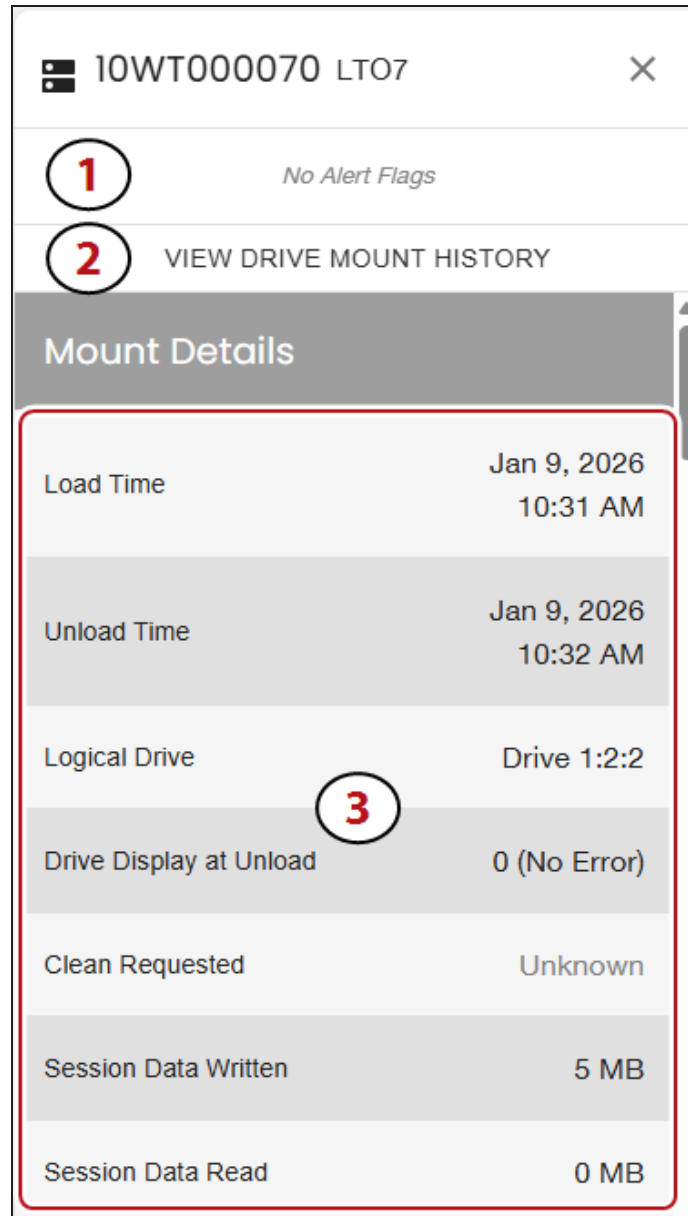


Figure 57 The LumOS Mount History screen.

1. The **Alert Flags** section displays any active alerts for the drive.
2. Click **View Drive Mount History** to navigate to the DLM Drive History screen.
3. The **Mount Details** section lists the drive mount details of the selected tape.

DRIVE LIFECYCLE MANAGEMENT

Overview

Drive Lifecycle Management works in conjunction with Media Lifecycle Management to help you identify drives that experience a high number of errors or other problems during operation.

Each time a cartridge is unloaded from a drive, the library collects media health data from the drive. This data includes read/write errors, tape alerts, and flags generated during the time the most recent cartridge was loaded in the drive. It also includes the current value for the drive's single character display (SCD) and any errors detected at the time the cartridge is unloaded. All of this data, plus the MLM data for the 50 most recently loaded cartridges, is stored in the DLM database. This data is used to generate an overall drive health status for the library, as well as health reports for each individual drive.

Drive Health Reports

A health icon next to each drive indicates the overall health of the drive. Detailed reports provide information about the cartridges that have been loaded into the drive and any errors reported. The DLM database containing the health information for every drive in the library is backed up whenever the library is backed up.

User Privilege Requirements

Only a user with superuser or administrator privileges can access and use the DLM features.

Drive Lifecycle Management

The LumOS user interface allows you to monitor the drives in the Cube. To view the Drive Lifecycle Management (DLM) screen, log in and navigate to **Status > DLM**.

Figure 58 The LumOS DLM screen.

Navigating the DLM Screen

Use [Figure 58](#) to help you navigate the features of the DLM screen.

1. Use the **Search** entry field to search for drives by serial number.
2. Use the **Generations** drop-down menu to filter the records by drive generation.
3. Use the **Partitions** drop-down menu to filter the records by the partition to which the drive is assigned.
4. Each drive pane displays basic information about the drive.
5. Click **Mount History** to display the mount history for the drive. See [Drive Mount History](#) on the next page for more information.
6. Click **Actions** to display the action history to access the Drive Actions menu, which allows you to clean, reset, or replace a drive. See [Drive Actions](#) on page 108 for more information.
7. Click **Details** to display the drive details screen. See [Drive Details](#) on page 107 for more information.

Drive Mount History

Use Figure 59 to help you navigate the Mount History screen.

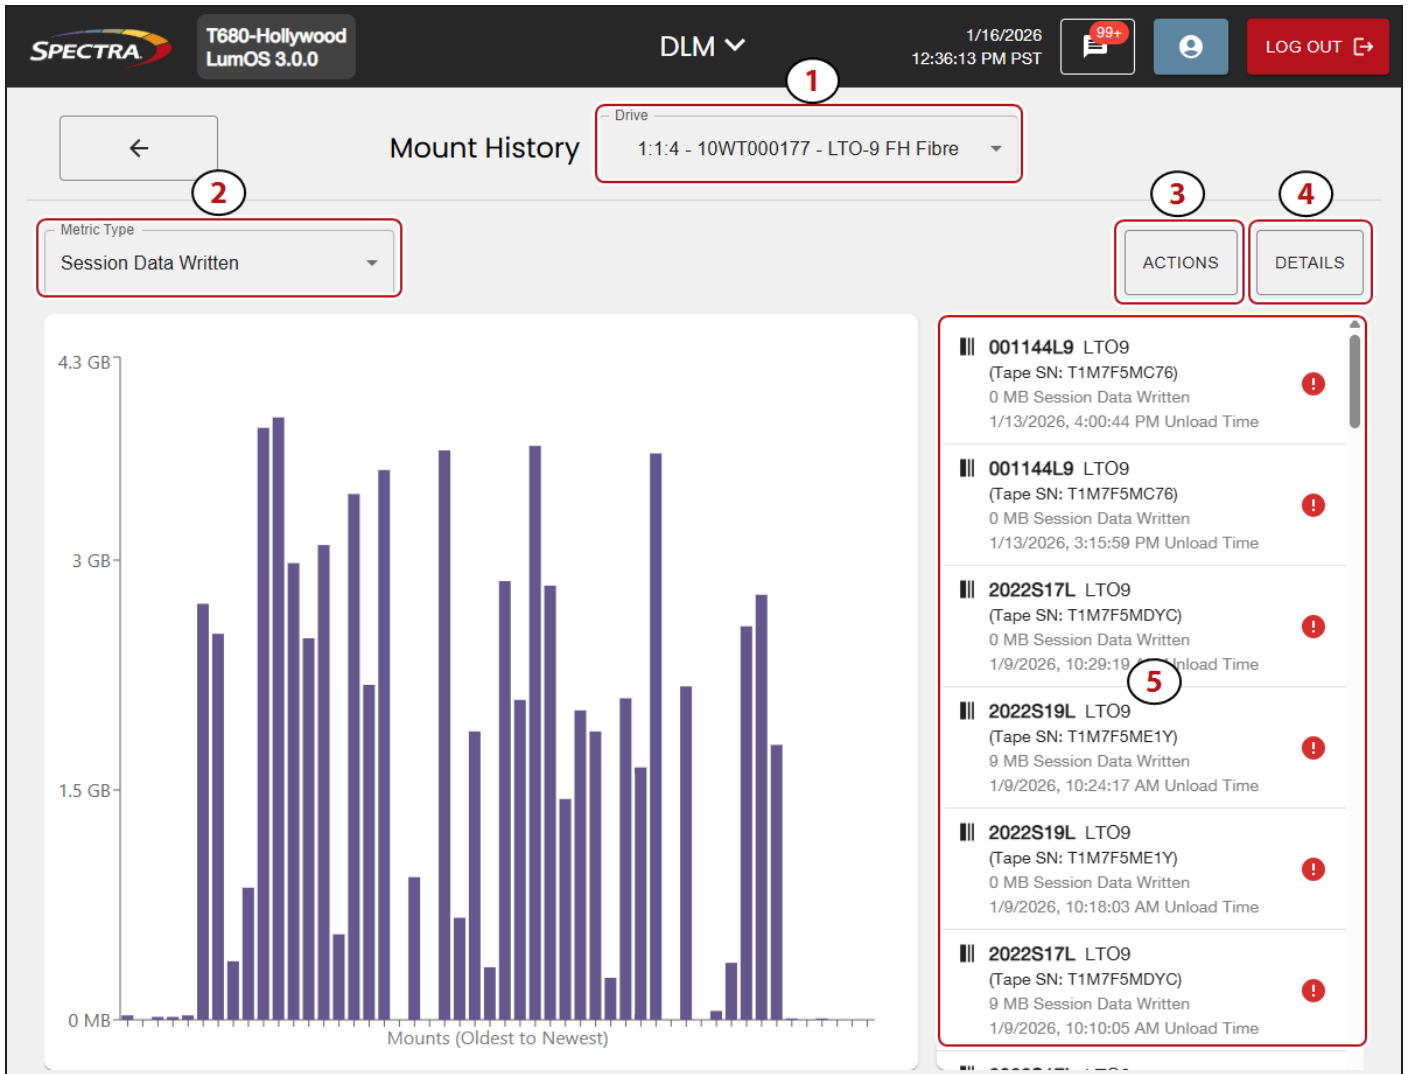


Figure 59 The LumOS Mount History screen.

1. Use the **Drive** drop-down menu to select the drive for which you want to view details.
2. Use the **Metric Type** drop-down menu to select the metric you want to view on all mount periods.
3. Click **Actions** to display drive actions available. See [Drive Actions](#) for more information.
4. Click **Details** to display drive details for the drive. See [Drive Details](#) on the next page for more information.
5. Click on a mount history entry to expand and view all mount period details.

Drive Details

Use Figure 60 to help you navigate the Drive Details screen.

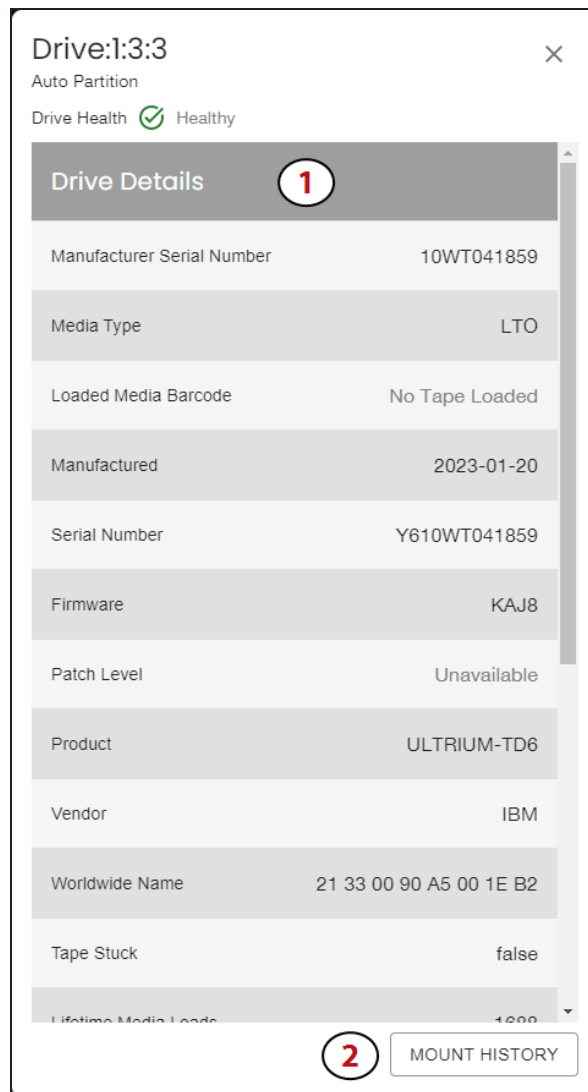


Figure 60 The LumOS Drive Details screen.

1. The Drive Details screen lists the metrics for the drive.
2. Click **Mount History** to display the Drive Mount History screen. See [Drive Mount History](#) on the previous page for more information.

Drive Actions

Use the figure below to help you navigate the **Drive Actions** screen.

Start Time	End Time	State	Task	Log
8/27/2024, 5:07:36 PM	—	RUNNING	Reset	
8/27/2024, 5:07:33 PM	8/27/2024, 5:07:33 PM	SUCCEEDED	Replace	2024-08-27T23:07:33Z Preparing drive for replacement. 2024-08-27T23:07:33Z Preparing drive for replacement completed.
8/27/2024, 5:04:40 PM	8/27/2024, 5:07:30 PM	SUCCEEDED	Manual Clean	Cleaning Tape: CLNAE0L2 Success
8/23/2024, 5:21:14 PM	8/23/2024, 5:22:12 PM	SUCCEEDED	Reset	2024-08-23T23:21:14Z Resetting drive. 2024-08-23T23:22:12Z Resetting drive completed.

At the bottom of the screen, there are five action buttons: DUMP DRIVE TRACE, CLEAN DRIVE, REPLACE DRIVE, RESET TAPE DRIVE & CONTROLLER, and TEST DRIVE.

Figure 61 The LumOS Drive Actions screen.

1. **Start Time** and **End Time** display the start and end date and time an action.
2. **State** displays the current status of an action.
3. **Task** displays the type of action.
4. **Log** displays a detailed description of the action.
5. The action buttons initiate the corresponding action on the drive:

Dump Drive Trace - Generates a set of logs to help diagnose drive errors.

Clean Drive - Initialize a manual clean of the drive. The drive must be configured in a partition associated with a cleaning partition, and valid cleaning media must be present in the associated cleaning partition.

Replace Drive - Shuts down the drive to prepare for replacement. Contact Spectra Logic Technical Support for assistance replacing a drive.

Reset Tape Drive & Controller - Resets the drive and controller. If possible, empty the drive before performing the reset.

Test Drive - Opens the Drive Test tool. See [Drive Test](#) on page 149 for more information.

LICENSES

The LumOS user interface allows you to add and monitor licenses. To add a new license to the Cube, log in and navigate to **Configuration > Licensing**.

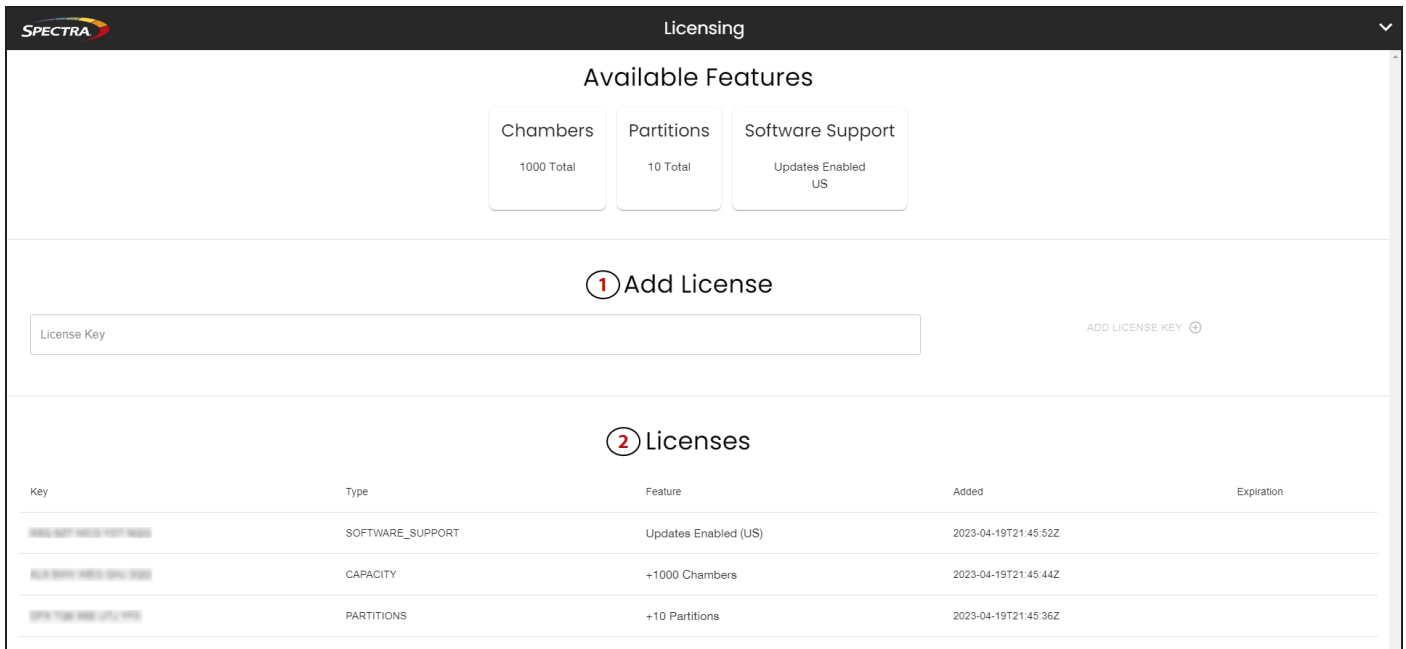


Figure 62 The LumOS Licensing screen.

Adding a License

To add a license:

1. Enter the **License Key** in the entry field and click **Add License Key**.
2. Confirm the new license displays in the **Licenses** pane.

CHAPTER 7 - TAPE MEDIA OPERATIONS

This chapter describes tape media operations, including moving, importing, and exporting media.

Move Media	111
Moving Media	111
Importing, Exporting, and Exchanging Magazines	113
Main TAP	113
Requirements	113
Restrictions	114
Performing an Import or Export	116
Importing Into a Storage or Cleaning Partition	117
Import Requirements	117
Prepare the Storage Partition or the Cleaning Partition	119
Import the Magazines	120
Exporting Magazines and Cartridges	122
Prepare for the Export	122
Export the Magazines or Cartridges in a Partition	123
Exchanging Magazines and Cartridges	124
Prepare for the Exchange	124
Exchange the Magazines or Cartridges in a Partition	124

MOVE MEDIA

Overview

During normal operations, you typically use your storage management software to move cartridges from one location to another within the library. However, you may occasionally need to create and process a move queue to direct the library to move cartridges manually. This can be done using the library's LumOS user interface or REST API to locate and move individual cartridges (for example, to move a cleaning cartridge stored in the storage partition to a drive if you are not using the Auto Drive Clean option). Use the instructions below to manually direct cartridge moves using the LumOS user interface.

User Privilege Requirements

The user privilege requirements when moving cartridges in a storage partition depend on how the library is being accessed. Operator users can only move cartridges within their assigned partitions. Superuser or administrator users can move cartridges within any partition.

Moving Media

To move media in the library, log in and select **Operations > Move Media**, then **Select** the partition for which you want to move media. The user interface refreshes to display the inventory of the selected partition.

The screenshot shows the LumOS Inventory screen for the 'User Guide Partition (LTO)'. It is divided into three main sections: 'Source', 'Destination', and 'Moves'.

- Source (1):** A table with columns 'Type', 'Address', and 'Barcode'. It includes a search bar and filter options for 'SLOT', 'DRIVE', and 'ENTRY/EXIT'. A 'Slot/Drive Range' is set from 4098 to 4155.
- Destination (2):** A table with columns 'Type' and 'Address'.
- Moves (3):** A table with columns 'Source', 'Barcode', and 'Destination'. It includes an 'ADD TO MOVE QUEUE +' button.
- MOVE QUEUE (4):** A table with columns 'Source', 'Barcode', and 'Destination'. It shows a move from Source 4096 (Barcode 453863L5) to Destination 4097.
- ISSUED MOVES:** A section for tracking issued moves.
- 5:** A 'SUBMIT QUEUE' button at the bottom right.

Type	Address	Barcode
SLOT	4098	418070L5
SLOT	4100	452653L5
SLOT	4103	1AN316L5
SLOT	4104	367581L6
SLOT	4107	502967L5
SLOT	4108	032192L6
SLOT	4109	021545L6
SLOT	4110	415108L5

Type	Address
SLOT	4099
SLOT	4101
SLOT	4102
SLOT	4105
SLOT	4106
SLOT	4118
SLOT	4119
SLOT	4120
SLOT	4121
SLOT	4122
SLOT	4123

Source	Barcode	Destination
4096	453863L5	4097

Figure 63 The LumOS Inventory screen.

Use Figure 63 to help you move media:

1. Select the desired **Source** slot from the list.
2. Select the desired **Destination** slot from the list.

Note: You can filter **Source** and **Destination** by **Slot, Drive, or Entry/Exit** port. Additionally you can directly **Search** or limit the displayed range.

3. Verify the information displayed in the **Moves** column matches the desired **Source, Barcode, and Destination**. Click **Add To Move Queue** if the information is correct. Repeat as necessary to add additional moves to the **Move Queue**.
4. Confirm that the **Move Queue** lists all desired moves. Click the minus icon to remove a specific move from the queue, if necessary.

Note: Clicking the **Issued Moves** tab displays the partition move history.

5. Click **Submit Queue** to issue the move commands.

IMPORTING, EXPORTING, AND EXCHANGING MAGAZINES

You can use the LumOS user interface to import, export, and exchange cartridges on the Cube. You must be physically present at the library to perform these tasks, but the import and export process can be controlled remotely if desired.

Main TAP

For day-to-day operations involving a small number of magazines, you can import or export one at a time using the main TAP.

Requirements

User Privilege Requirement

Any user with operator privileges who is assigned to the partition and all users with superuser or administrator privileges can perform import or export operations. See [Configuring Users on page 55](#) for information about assigning user to a partition.

Note: Operators assigned to the partition can only import and export to and from the Entry/Exit pool.

Cartridge and Magazine Labeling

Make sure that each cartridge and magazine is labeled with a unique barcode. The barcode labels on Spectra Certified Media contain information about the media type. To ensure that the correct type of cartridges are stored in a partition, the library prevents you from importing the wrong cartridge type into a partition.

TeraPack Magazines

Cartridges are always imported and exported using a TeraPack magazine (or a maintenance magazine for cleaning partitions), regardless of whether you have an individual cartridge or a group of cartridges.

- When you want to import a single cartridge, you must first put the prepared cartridge in a magazine, then import the magazine.
- When you want to export a single cartridge, you must export the magazine containing the cartridge and remove the desired cartridge from the magazine. You can then re-import the magazine if desired.

Restrictions

Using the LumOS Web Interface

Import, Export, and Exchange operations are normally performed using the operator panel on the front of the library; however, you can override this restriction and initiate the import, export, and exchange processes remotely using the LumOS user interface or API commands. See [Operator Panel Override](#) below for more information.

Background Operations

You cannot import, export, or exchange cartridges or magazines if the library is actively running a background operation such as Media Auto Discovery, PreScan, or PostScan.

Media Auto Discovery and PreScan are background operations that use the drives in a partition to discover newly imported cartridges and add them to the MLM database. The discovery process cannot begin while the hosts are actively loading cartridges into or unloading cartridges from the drives. If you import cartridges during this time, the library posts a failure message stating that no drives are available to perform the discovery process.

Operator Panel Override

You can override the operator panel restriction on Import, Export, and Exchange operations to initialize the operations using the LumOS web interface. To override the restriction using the LumOS web interface, navigate to **Operations** toolbar and select the desired operation screen and follow the steps below.

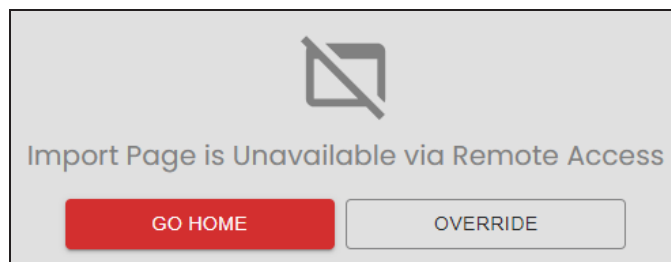


Figure 64 The Override button.

1. Click **Override**.



Figure 65 The Confirm Override screen.

2. Click **Confirm**.

Note: Overriding the operator panel only allows users to initialize operations and manipulate the TAP remotely. An operator must be physically present at the library to insert or remove magazines.

Performing an Import or Export

Importing and exporting requires you to manage the TeraPack Access Port (TAP) on the library. You can manage the TAP using the buttons in the LumOS user interface. For an example, Figure 66 shows the Main TAP and Open TAP buttons.

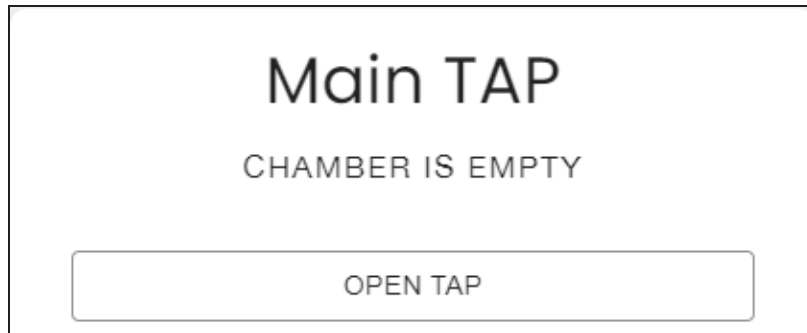


Figure 66 The LumOS Main TAP interface.

Use the links below to navigate to the corresponding sections:

- [Importing Into a Storage or Cleaning Partition on the next page](#)
- [Export the Magazines or Cartridges in a Partition on page 123](#)
- [Exchanging Magazines and Cartridges on page 124](#)

IMPORTING INTO A STORAGE OR CLEANING PARTITION

During normal operations, magazines containing data cartridges are typically imported to a storage partition's entry/exit pool and then moved to the storage pool using **Move Media** in the LumOS user interface. This process ensures that the media inventory maintained by the storage management software is accurate.

An exception is the first time that cartridges are loaded into a storage partition. Importing magazines directly into a storage partition's storage pool simplifies loading a storage partition for the first time. After the cartridges are imported into the storage pool, they are available for immediate use by the storage management software.

Import Requirements

Partitions

You must have one or more partitions defined before you can import magazines into the library. See [Partition Overview on page 70](#) for information about partitions and pools. [Creating A Partition on page 74](#) provides detailed instructions for creating partitions.

Cartridges and Magazines

All cartridges are imported into the library using magazines. Before beginning, have on hand the cartridges that you want to import into the partition.

If you are importing magazines into the storage partition's storage pool for the first time, the maximum number of magazines equals the number of chambers assigned to the storage pool for the partition. You do not need to fill all slots in the magazines or all of the chambers in the partition; however, any empty chambers are inaccessible to the storage management software.

Entry/Exit Pool

For daily operations, TeraPack magazines containing data cartridges are typically imported or exported using a storage partition's entry/exit pool. When using the entry/exit pool for importing/exporting, the following must be true:

- The entry/exit pool must have sufficient empty chambers available for importing new magazines. If you need to import new magazines and all of the chambers in the entry/exit pool are full, you must export one or more magazines to make space for the new magazines.

- The entry/exit pool must have sufficient empty slots available to accommodate any cartridges that the storage management software ejects from the partition. If all of the slots in the entry/exit pool are full, either move newly imported cartridges to the partition's storage pool, leaving empty slots in the entry/exit pool, or export one or more full magazines and replace them with magazines that have empty slots.

**IMPORTANT**

Make sure that the magazines you export are not filled with cartridges that you just imported but did not yet move to the storage pool using the LumOS user interface.

- You can import a magazine containing a cleaning cartridge into the partition's entry/exit pool and then use the Inventory screen to move the cartridge to a drive for cleaning. When the cleaning is complete, move the cleaning cartridge back to the entry/exit pool and export the magazine from the entry/exit pool.

Storage Pool

A storage partition's storage pool contains all of the cartridges that can be accessed by the storage management software for the purpose of writing or reading data.

- If you are importing magazines into the entry/exit pool and using your storage management software to move the cartridges to the storage pool, the storage pool must have sufficient empty slots to accommodate each cartridge imported into the entry/exit pool.
- If you are importing directly into the storage pool, the storage pool must have sufficient empty chambers to accommodate the magazines you plan to import.
- Any chambers in the storage pool that do not contain magazines are inaccessible to the storage management software. You can, however, import magazines into the empty chambers using the library's LumOS user interface.

Cleaning Partition

When importing cleaning cartridges into a cleaning partition, keep the following in mind:

- Cleaning cartridges must be identified with "CLN" at the beginning of the barcode sequence on their labels. This requirement applies to both standard and custom barcode labels.
- Cleaning cartridges used in a cleaning partition must be in Maintenance TeraPack magazines, which are identified by Spectra-unique labels. The library automatically prevents importing cleaning cartridges and magazines that are not properly labeled into a cleaning partition.

Note: Maintenance TeraPack magazines filled with appropriately labeled cleaning cartridges are available from Spectra Logic.

- Make sure that the Maintenance TeraPack magazine does not contain any data cartridges. The library will not import a Maintenance TeraPack magazine that contains cartridges that are not identified with “CLN” at the beginning of the barcode sequence on their labels.
- The cleaning cartridges in a cleaning partition can only be used for drives in storage partitions configured to use that cleaning partition. Associating a cleaning partition with drives in a storage partition automatically enables the Auto Drive Clean feature for that partition.
- The cleaning cartridges in the cleaning partition are inaccessible to the application software running on the host. Make sure you disable any software-based drive cleaning to prevent repeated requests to import a cleaning cartridge.
- If your storage management software supports automated drive cleaning and you plan to use this method to clean the drives instead of the library’s Auto Drive Clean feature, refer to your software documentation for instructions. You must import the properly labeled cleaning cartridges into the storage partition using a TeraPack magazine (not a Maintenance TeraPack magazine).

Prepare the Storage Partition or the Cleaning Partition

Before importing magazines into a storage partition or a cleaning partition, make sure that the partition has sufficient empty slots or chambers available to accommodate the cartridges or magazines you plan to import.

- If you plan to import cartridges into the storage partition’s entry/exit pool, and then use your storage management software to move the cartridges to the storage pool, check the Inventory screen for the partition to make sure that the storage pool has an empty slot available to accommodate each imported cartridge. If there are insufficient empty slots available in the storage pool, do one of the following to prepare the storage pool to receive the imported cartridges:
 - If the partition’s storage pool has empty chambers, import one or more TeraPack magazines with empty slots into the storage pool.
 - If the partition’s storage pool does not have any magazines with empty slots, use your storage management software to eject cartridges from the library. The library moves the ejected cartridges from the partition’s storage pool to magazines in its entry/exit pool. You can then export the magazines from the library. The resulting empty slots in the storage pool are now available for newly imported cartridges.
 - Exchange a full magazine in the storage pool for one containing empty slots.
- If you plan to import cartridges directly into the partition’s storage pool, make sure that the storage pool has an empty chamber for each magazine you plan to import. The partition’s Import/Export screen shows the number of empty chambers available in the partition’s storage pool. If there are no empty chambers available in the storage pool, export one or more magazines from the storage pool.

- If you plan to import cleaning cartridges into a cleaning partition, make sure that there is an empty chamber for each maintenance magazine you plan to import. If there are no empty chambers available in the cleaning partition, export one or more magazines. Alternatively, you can exchange expired cleaning cartridges for new ones in the magazines already present in the cleaning partition without having to import additional magazines.

Import the Magazines

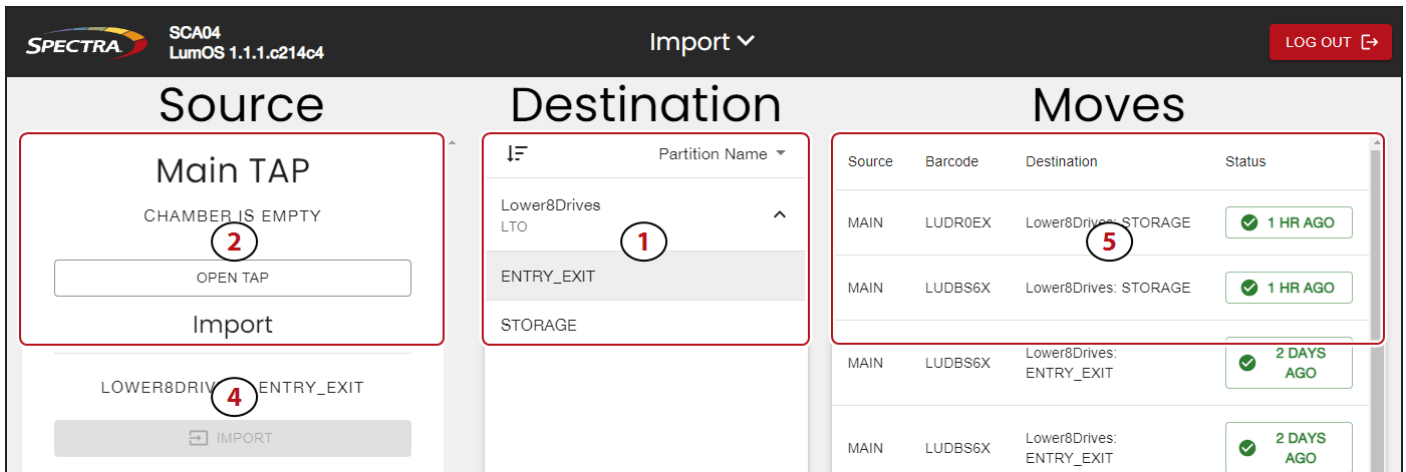


Figure 67 The LumOS Import screen.

To import a magazine, log into the library as a user with the appropriate privileges and select **Operations > Import Media** in the LumOS user interface. Use Figure 67 on page 120 above to help you import media:

- Select the desired **Destination** partition and pool type from the list.
 - Note:** Cleaning partitions can only select the **Storage** pool. Storage partitions can select either the **Storage** or **Entry/Exit** pools.
- Click **Open TAP**.
- Insert the magazine into the tray on the open TAP with the smooth surface side toward the outside of the library, as shown in Figure 68 on page 121.



Figure 68 Insert a magazine into the TAP, making sure that it is correctly oriented.

4. Push the TAP door closed, then click **Close TAP**.
5. Click **Import** to start the import.
6. Review the **Moves** column for your import history.

EXPORTING MAGAZINES AND CARTRIDGES

The export process uses the main TAP to physically remove all of the magazines (and any cartridges they contain) from the selected location (a cleaning partition or storage partition's entry/exit pool or storage pool). The exported magazines are not replaced by new magazines.

Prepare for the Export

- If you want to export cartridges from a storage partition, use the your storage management software to eject the desired cartridges from the partition's storage pool. You can then export the cartridges from the entry/exit pool. Using this method to export cartridges from a storage partition ensures that the media inventory maintained by the storage management software remains accurate.

The following steps describe the process for ejecting cartridges from a storage partition using the entry/exit pool.

1. Use your storage management software to eject the cartridges from the library.
2. The library moves each cartridge out of the partition's storage pool and into an empty slot in a TeraPack magazine already stored in the entry/exit pool.
3. When all of the requested cartridges are in the entry/exit pool, the library reports to the software that the export request is complete.
4. At your convenience, you can then export the magazines in the entry/exit pool from the library using controls on the Export screen of the user interface and the main TAP.

**IMPORTANT**

When exporting tape cartridges from a partition with SlotIQ enabled, Spectra Logic recommends that you use your host software to move the cartridges to the Entry/Exit pool before exporting.

- Exporting a magazine directly from the storage pool is not recommended unless you are exporting all of the magazines from a partition. This process is often referred to as a "bulk export."

If you choose to export magazines directly from the storage partition's storage pool, be sure to use your storage management software to update its media inventory after completing the export.

Export the Magazines or Cartridges in a Partition

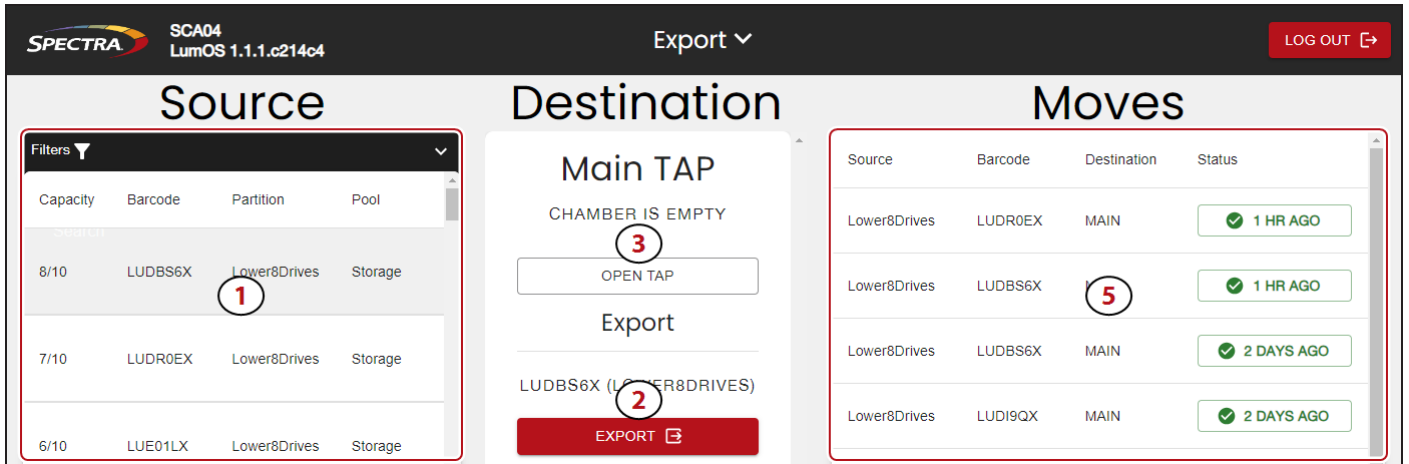


Figure 69 The LumOS Export screen.

To export a magazine or cartridge, log into the library with the appropriate privileges and select **Operations > Export Media** in the LumOS user interface. Use Figure 69 above to help you export media:

1. Select the desired **Magazine** in the **Source** column.
2. Click **Export**.
3. Click **Open TAP** to access the exported magazine. Remove the magazine or desired cartridges from the magazine.
4. Push the TAP door closed, then click **Close TAP**.
5. Review the **Moves** column for your export history.

EXCHANGING MAGAZINES AND CARTRIDGES

The exchange process moves each of the magazines in the selected location to the TAP so that you can exchange the magazines for others of the same type.

You can also remove or exchange one or more individual cartridge(s) in a magazine while leaving the other cartridges in place. Exchanging cartridges in a magazine is especially useful when you need to temporarily import a cleaning cartridge into the storage pool as part of drive maintenance.

Prepare for the Exchange

Be sure to have the prepared cartridges and labeled magazines on hand before beginning the exchange.

Exchange the Magazines or Cartridges in a Partition

The screenshot shows the LumOS Exchange interface. The top navigation bar includes the SPECTRA logo, version information (SCA04 LumOS 1.1.1.c214c4), the 'Exchange' menu, and a 'LOG OUT' button. The main content is divided into three panels:

- Import Pool & Magazines:** Shows 'NO POOL SELECTED' with a 'SELECT A POOL' button (5). Below is a table with columns 'Partition', 'Pool', and 'Media'. A row is highlighted with a red box (1), and a 'SHOW MEDIA' button next to it is circled (2).
- TAPs:** Shows 'Main TAP' with 'CHAMBER IS EMPTY' (4) and an 'OPEN TAP' button. Below is an 'Import' section with 'NO IMPORT POOL' and a 'SELECT IMPORT POOL FIRST' button (6). An 'Export' section shows 'NO MAGAZINES SELECTED' and a 'SELECT MAGAZINES FIRST' button (3).
- Moves:** A table showing the history of moves. The first row is circled (7). The table has columns: Type, Source, Barcode, Destination, and Status.

Type	Source	Barcode	Destination	Status
Import	MAIN	LUDR0EX	Lower8Drives: STORAGE	2 HRS AGO
Export	Lower8Drives	LUDR0EX	MAIN	2 HRS AGO
Import	MAIN	LUDBS6X	Lower8Drives: STORAGE	2 HRS AGO
Export	Lower8Drives	LUDBS6X	MAIN	2 HRS AGO
Import	MAIN	LUDBS6X	Lower8Drives: ENTRY_EXIT	2 DAYS AGO

Figure 70 The LumOS Exchange screen.

To exchange a magazine or cartridge, log into the library with the appropriate privileges and select **Operations > Exchange Media**. Use Figure 70 above to help you exchange media.

1. Select a magazine to export from the magazine list.
2. If desired, click **Show Media** to display the cartridge ID and barcodes contained in the magazine.
3. Click **Export** on the TAP to export the selected magazine.

4. Click **Open TAP** to access the exported magazine. Exchange the magazine or any desired media in the TAP then push the TAP door closed and click **Close TAP**. If you exchange a magazine, make sure the new magazine is oriented correctly (see [Figure 68 on page 121](#)).
5. Click **Select A Pool** to select the pool to which you want to exchange media.
6. Click **Import** to import the new media to the selected pool.
7. Review the **Moves** column for your import and export history.

CHAPTER 8 - MAINTAINING THE LIBRARY

This chapter describes maintaining the Cube, including updating library software, managing library backups, running diagnostics, and generating log files for use in troubleshooting.

Servicing or Moving the Library	127
LumOS Package Update	128
Overview	128
Upload a Package	129
Set Active Package	130
Drive Firmware Update	131
Updating Drive Firmware in LumOS User Interface	131
Updating Drive Firmware Using ITDT	137
Managing Backups	140
Alerts	142
AutoSupport Logs	142
Configuring Alerts	144
Adding or Editing Alert Subscribers	145
Log Gathering	147
Gathering Logs	147
Robotics	148
Robot Details	148

SERVICING OR MOVING THE LIBRARY

Contact Spectra Logic Technical Support before making any changes to your library hardware or performing any service operations.

Servicing the Library

In the event that it is necessary to replace a component, make sure that you have instructions for performing the procedure *and* you either:

Are instructed to do so by Spectra Logic Technical Support,

—OR—

Have a support contract such as Assisted Self-Maintenance (ASM).

Moving the Library

The library hardware is configured to ensure proper thermal control, air flow, and dust filtering. After the library is installed, do not move the library.

IMPORTANT

Moving the library without assistance from a Spectra Certified Field Engineer voids your service contract. Contact Spectra Logic Technical Support for assistance if you need to relocate your library (see [Contacting Spectra Logic on page 9](#)).

LUMOS PACKAGE UPDATE

This section describes updating the software package running on the library.

Note: After upgrading library software, you must clear your web browser cache if you use a web browser to access the library remotely.

Overview

This section describes updating the LumOS software using the LumOS user interface. Before you begin, download the desired package from the Spectra Logic Support Portal and generate a valid service key.

You can upload a package and pubkey file from a networked machine through the LumOS user interface.

If your library is on a closed network, download the package and pubkey files to the root directory of a USB device and plug the USB device directly into the library, then use the library front panel to perform the update.

- Notes:**
- The `.lotf` and `.lotf.pubkey` files must be in the same directory.
 - When updating via USB device, it is highly recommended to use USB 3.0 devices. Prior USB generations add considerable time to the update process.

Log into the LumOS user interface and select **Configuration > Package Update**.

The screenshot displays the LumOS Package Update interface. At the top, it shows the 'Current Active Package' as '3.0.1-2026-02-05-0021.lotf' with 'DETAILS' and 'UPDATE HISTORY' buttons. The 'Available Packages' section shows 'No Packages Available' with a dropdown arrow and buttons for 'SET AS ACTIVE PACKAGE' and 'DELETE PACKAGE'. The 'Upload Package' section includes an information message: 'Lumos packages can be downloaded from the Spectra Logic Support Portal'. Below this are two 'Choose File' buttons for 'Package File' and 'Pubkey File', both showing 'No file chosen'. At the bottom is an 'UPLOAD PACKAGE' button.

Figure 71 The LumOS Package Update screen.

Upload a Package

The following section describes the steps to select and upload a package. Use [Figure 72](#) to help you complete the steps below.

Upload Package

i LumOS packages can be downloaded from the [Spectra Logic Support Portal](#)

Choose File No file chosen **1**

Package File

Choose File No file chosen **2**

Pubkey File **3**

UPLOAD PACKAGE

Figure 72 The Package Update - Upload Package screen.

1. Click **Choose File** and navigate to select your desired Package File. Click **Open**.
2. Click **Choose File** and navigate the file browser to select your desired Pubkey file. Click **Open**.
3. Click **Upload Package**.

Set Active Package

The following section describes the steps to select and activate an uploaded package. Use Figure 73 to help you complete the steps below.

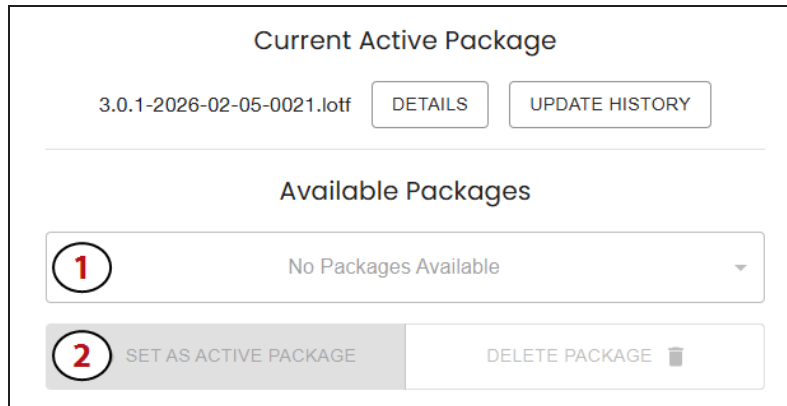


Figure 73 The Package Update - Active Package screen.

1. Select a package from the **Available Packages** drop-down menu, then click **Set As Active Package** to update the library software.

Note: The **Available Packages** drop-down menu only contains packages that were previously uploaded.

2. After setting the active package, you may need to click **OK** on several pop-up screens (not pictured). The library then power cycles as part of the update process.

Note: After upgrading library software, you must clear your web browser cache if you use a web browser to access the library remotely.

DRIVE FIRMWARE UPDATE

Overview

Whenever you update your library software, confirm that your drives are using the latest firmware version. Drive firmware updates are occasionally require to resolve drive issues.

The method you use to update the drives depends on the type of drives you are updating and your operating environment. This guide covers using the LumOS user interface and IBM Tape Diagnostic Tool (ITDT) to update drive firmware.

Note: You must discontinue backup operations and empty the tape drives before you can update drive firmware.

Updating Drive Firmware in LumOS User Interface

This section describes upgrading drive firmware using the LumOS user interface which is the recommended method to update drive firmware. Log into the LumOS user interface and select **Configuration > Drive Firmware Update**.

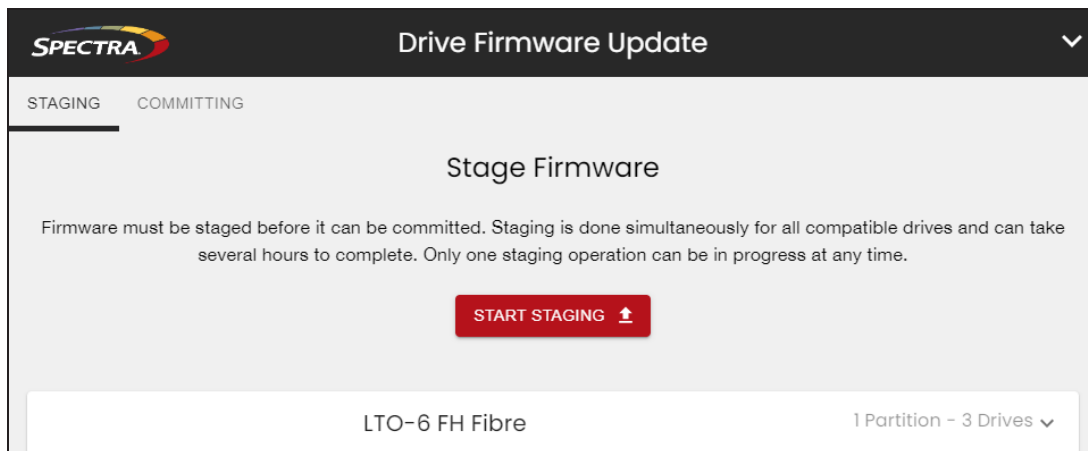


Figure 74 The LumOS Drive Firmware Update Staging screen.

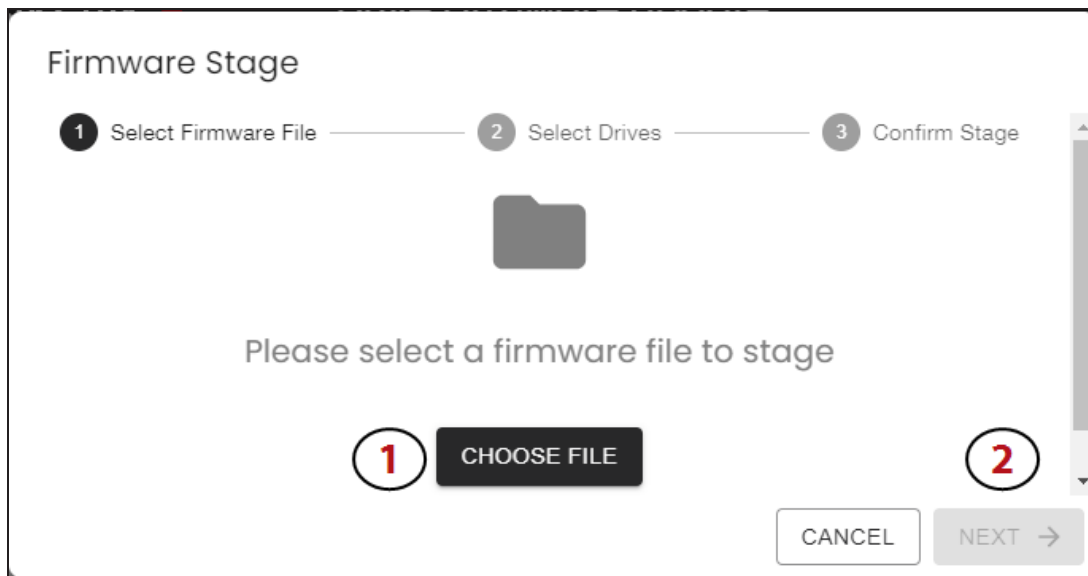


Figure 75 The LumOS Drive Firmware Stage Select Firmware File screen.

Click **Start Staging**, then use the steps below.

Note: Only one staging operation can be in progress at any time.

1. Click **Choose File** to open a file browser then select the desired firmware file.
2. Confirm the displayed firmware code and compatible drives information is correct and then click **Next**.

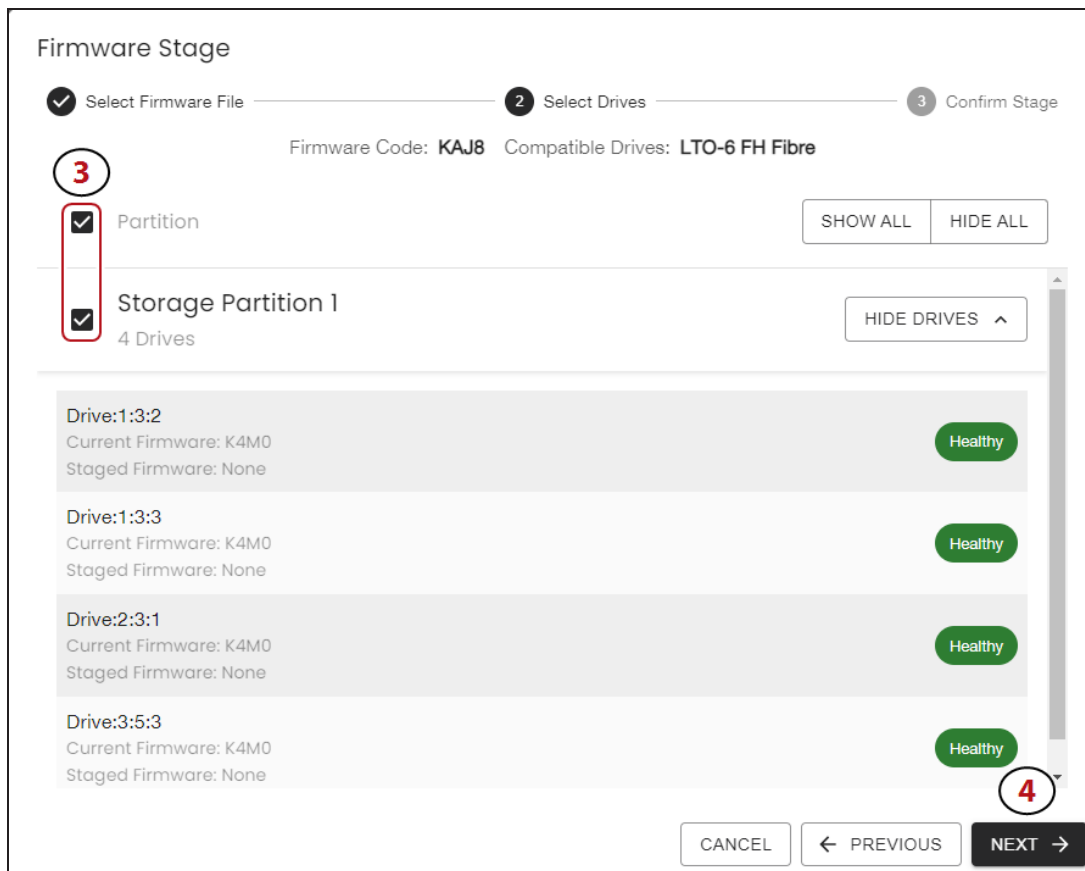


Figure 76 The LumOS Drive Firmware Stage Select Drives screen.

3. Select the partition to upgrade using the check box. To update all valid drives across all partitions, select the **Partition** check box.
4. Click **Next**.

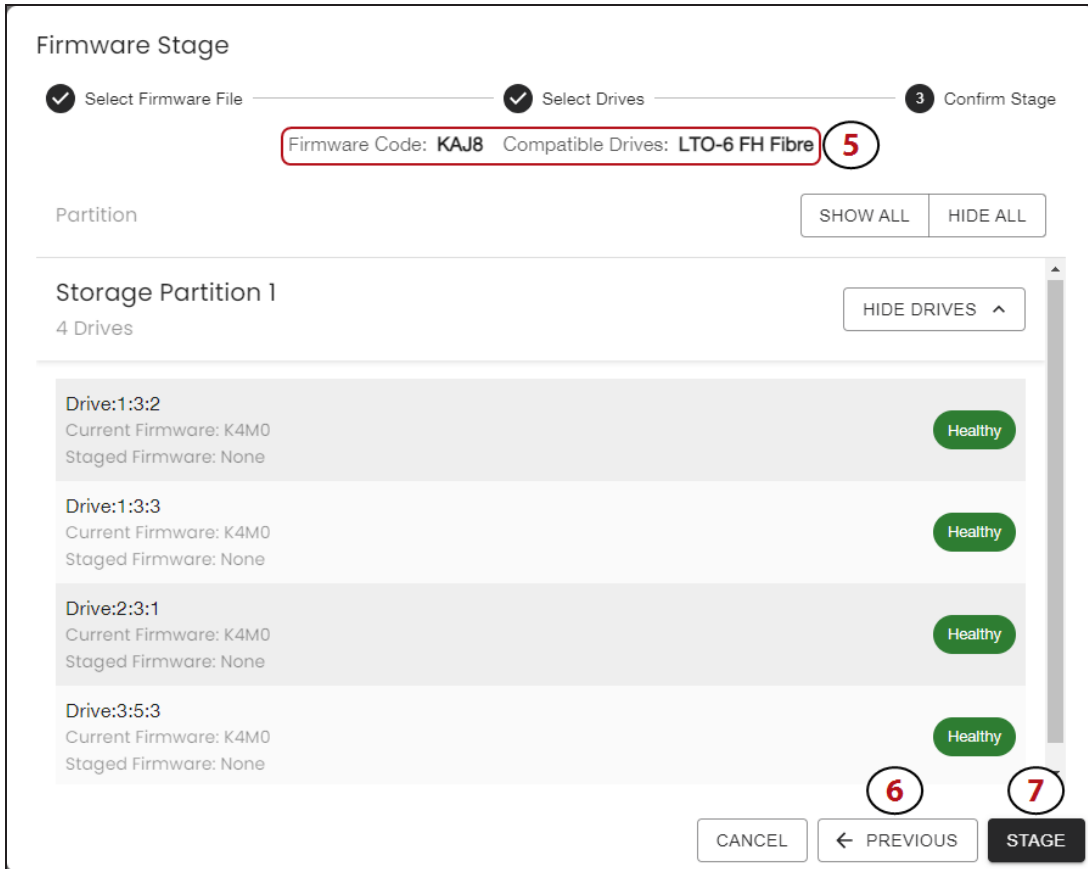


Figure 77 The LumOS Drive Firmware Stage Confirm Stage screen.

5. Confirm the **Firmware Code**, **Compatible Drives**, and selected drives are correct.
6. To make a correction, click **Previous** to return to previous pages.
7. Click **Stage**. The Staging screen displays the current operation progress and operation details.

Note: Staging may take several hours to complete. During the staging operation, you can continue normal backup operations.

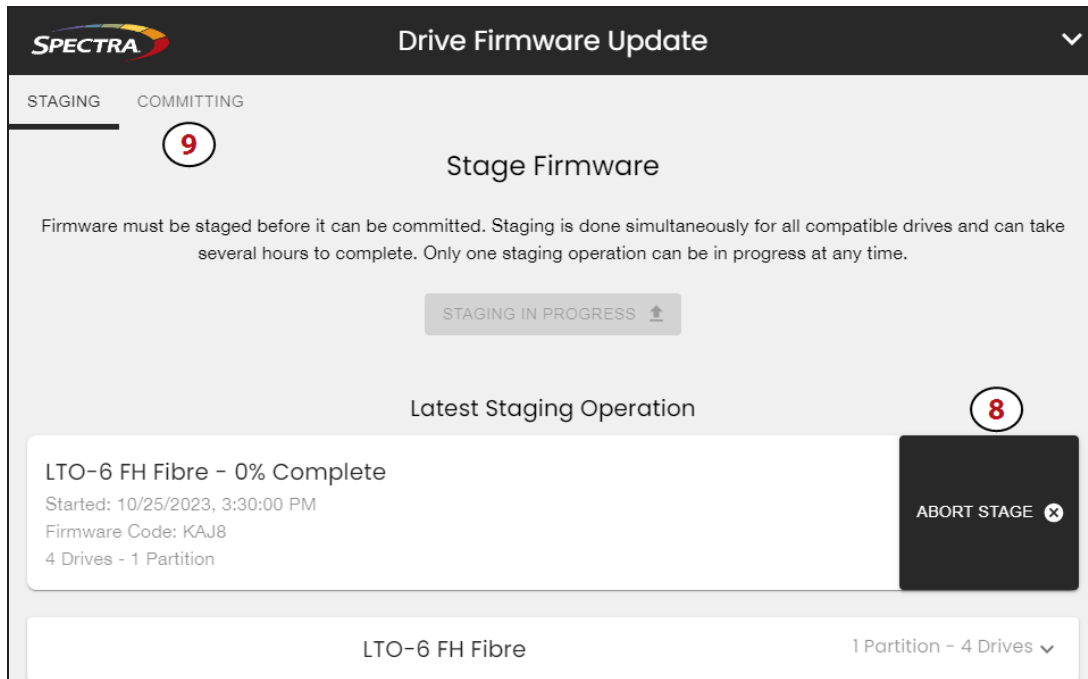


Figure 78 The LumOS Drive Firmware Update Staging screen.

8. If desired, click **Abort Stage** to cancel the operation.
9. After staging is complete, discontinue all backup operations and remove any cartridges from the drives.



CAUTION

Attempting to update the firmware while the library is busy or when the drives contain tapes may result in the update failing, failed backup jobs, or permanent damage to the drives. If you did not already do so, stop all backup operations and remove all tapes from the drives you are updating. If the library has SlotIQ enabled, run the Advanced Diagnostic **Unload Drives** followed by **Resolve SlotIQ**.

Once you have discontinued backups and emptied all drives, click **Committing** to view the Firmware Commit screen.

10. Select the desired **Drive Type** or **Partition**.

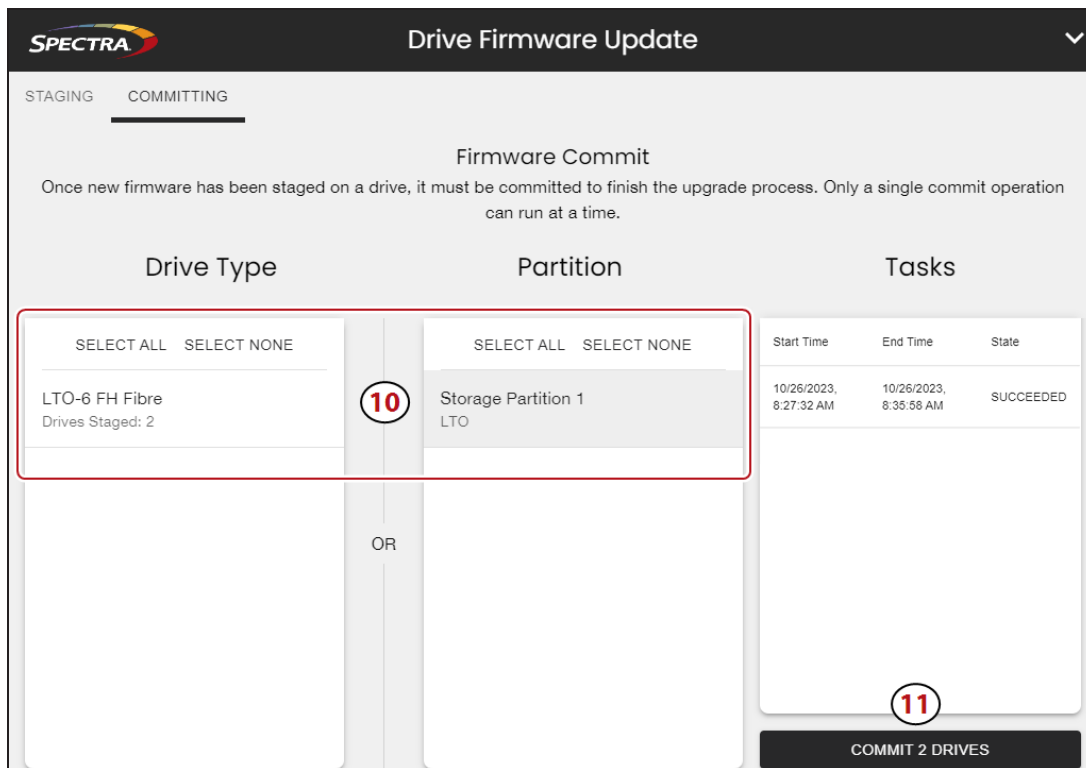


Figure 79 The LumOS Drive Firmware Update Firmware Commit screen.

11. Click **Commit Drives** to finish the upgrade process.

Note: Only a single commit operation can run at a time.

Updating Drive Firmware Using ITDT

Spectra Logic recommends using the LumOS interface to update drive firmware. If necessary, you can also update your LTO tape drive firmware with the IBM Tape Diagnostic Tool (ITDT).

Note: If your operating system is not supported by ITDT, or you cannot use ITDT in your environment, contact Spectra Logic Technical Support.

Download and Install ITDT

Download ITDT and its related documentation directly from IBM's Fix Central website.

Use the following steps to download and install ITDT on a computer that is connected to the same SAS or Fibre Channel arbitrated loop or fabric as the drives in the library.

1. Log into IBM's website (ibm.com/support/fixcentral), using your individual IBM ID.
2. Select the **Select product tab**.
3. Select the following options:
 - **Product Group** = System Storage
 - **Select from System Storage** = Tape systems
 - **Select from Tape Systems** = Tape drivers and software
 - **Select from Tape drivers and software** = IBM Tape Diagnostic Tool (ITDT)
 - **Platform** = Select your operation system from the drop-down list and click **Continue**.
4. On the next page, select the version of ITDT that you want to download. If desired, you can select multiple versions.

Note: If you are unsure which version to select, click **Show Fix Details** to see additional information.
5. Click Continue. If you have not logged into the website yet, it will prompt you to do so now.
6. Choose one of the following methods to download the selected ITDT installation files:
 - Download using your browser (HTTP)
 - Download using bulk FTP
 - Download using Download Director
7. Refer to the ITDT documentation for information about using ITDT. Contact Spectra Logic Technical Support if you need assistance (see [Technical Support on page 164](#)).

Download the Drive Firmware

1. After installing ITDT, launch the program so that it creates the **Input** and **Output** folders required during the firmware update process.
2. Log into your account on the Spectra Logic Technical Support portal at support.spectralogic.com.
3. Select **Downloads > Tape Drive Firmware**.
4. On the Tape Drive Firmware page, locate the appropriate drive firmware with respect to drive type (LTO), generation (for example, LTO-5), interface type (for example, SAS or Fibre Channel), and form factor (full-height or half-height).
5. Click the firmware version name in the column labeled **Current Firmware Version**.

IMPORTANT

The link in the column labeled **Package File (For Staging)** is for using Drive Firmware Update feature in the LumOS user interface. Do not select this file if you are updating drive firmware using ITDT.

6. Use your web browser to save the file to the ITDT **Input** folder on the computer where ITDT is installed.

Discontinue Background Operations

You cannot update drive firmware if the library is actively running any background operations, including Media Auto Discovery, PreScan, and PostScan.

If you do not want to wait for a Media Auto Discovery, PreScan, or PostScan operation to complete, you can stop the Media Auto Discovery or PreScan operation, or pause the PostScan operation. For other background operations, you must wait for the process to complete.

Discontinue Backups and Empty the Drives

Before beginning the drive firmware update process, discontinue all backup operations and remove any cartridges from the drives.

**CAUTION**

Attempting to update the firmware while the library is busy or when the drives contain tapes may result in the update failing, failed backup jobs, or permanent damage to the drives. If you did not already do so, stop all backup operations and remove all tapes from the drives you are updating. If the library has SlotIQ enabled, run the Advanced Diagnostic **Unload Drives** followed by **Resolve SlotIQ**.

1. If possible, use your storage management software to move any cartridges that are currently in drives back to their storage locations.
2. If you cannot use your storage management software, then move the cartridges as described in [Move Media on page 111](#).

Update Drives Using ITDT

1. Follow the instructions in the ITDT documentation to update the drive firmware.
2. Reset the updated drives to restore their configuration settings.
3. After the update is complete, use your storage management software to restart any backup processes.

MANAGING BACKUPS

Overview

Keeping valid backup copies of your library's configuration ensures that you can easily restore the library in the event of a disaster. Library backups are extremely useful if problems require you to replace the LCM by allowing you to restore the library settings, including partitions, instead of having to manually re-enter all of the information.

User Privilege Requirements

Only a user with superuser or administrator privileges can create a manual backup of the library configuration. See [Understanding User Groups and Security on page 55](#) for information about the three types of user groups and what types of privileges each has.

Create and Download Backup

The LumOS user interface allows you to create and download backups on your Cube or local machine. Log in and navigate to **Tools > Backup Restore**.

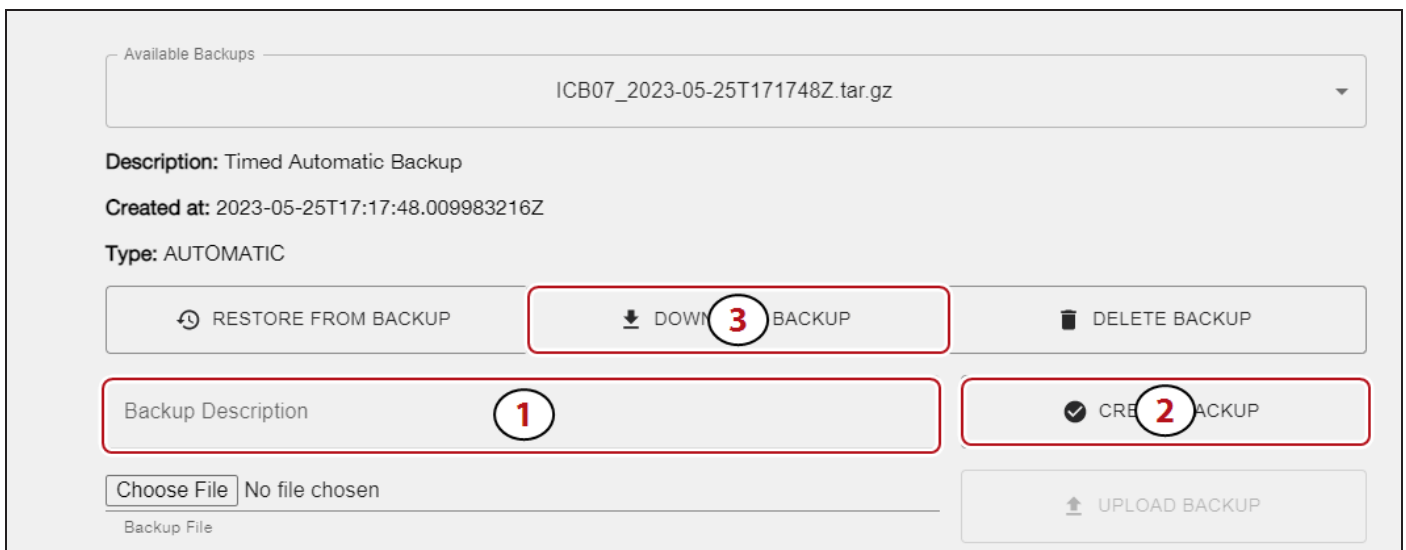


Figure 80 The LumOS Backup Restore screen.

Use the numbers in the figure above to help you with the following steps:

1. To create a new backup, enter information into the **Backup Description** field.
2. Click **Create Backup** to create the backup.
3. Click **Download Backup**.

Upload and Restore Backup

If you have valid backups of the library's configuration and the MLM database saved on a USB device or sent as an email attachment, you can use them to restore the library in the event of a disaster.

User Privilege Requirements

Only a user with superuser or administrator privileges can restore the library configuration and the MLM and DLM databases. To restore encryption keys, the user must also be logged in as an encryption user.

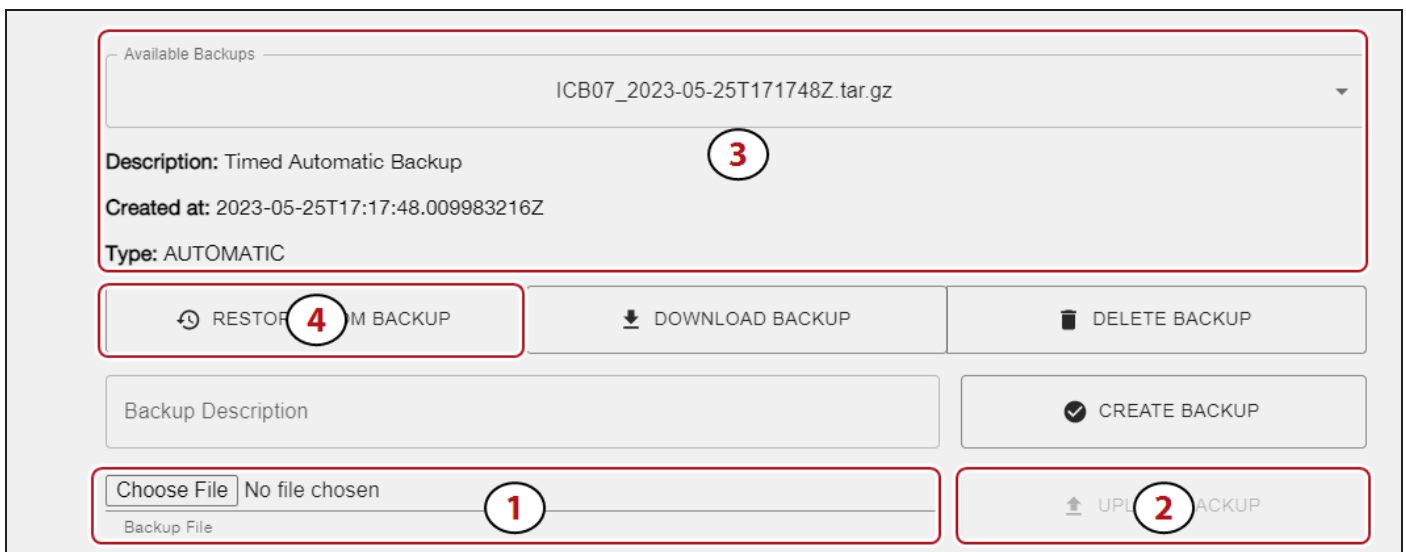


Figure 81 The LumOS Backup Restore screen.

Use the numbers in the figure above to help you with the following steps:

1. If necessary, click **Choose File** and select the desired file.
2. Click **Upload Backup** to upload the chosen file.
3. Using the **Available Backup** drop-down menu, select the desired backup.
4. Click **Restore From Backup**.

Note: You can also delete the selected backup by clicking **Delete Backup**.

ALERTS

The Alerts features allows the library to automatically notify the configured primary subscriber when specific events occur. The library uses the primary subscriber SMTP address to email Spectra Logic support. The email contains the primary subscriber contact information.

Note: AutoSupport Log (ASL) information is only for troubleshooting purposes. This log information is separate from the data path and contains no customer data.

User Privilege Requirements

All users can view system messages and view performance metrics. Only a user with superuser or administrator privileges can configure the AutoSupport features.

AutoSupport Logs

An AutoSupport Log file contains the following types of information:

- Library message logs
- Library Control Module (LCM) logs
- LCM configuration
- The physical configuration of the library
- A simplified report of the MLM and DLM databases
- EC data from all components
- LumOS version
- Contact information for data center staff

The library generates a critical alert when any of the following issues occur.

Event	A critical alert is generated when...
Motion Restart	Whenever motion restarts. Each motion restart is treated as a separate event and results in generation of an alert.
Side Panel Removed	If a library side panel is opened or removed three times within 30 minutes. Only one alert is generated for each 30-minute time period.
Power Supply Failure	When a power supply fails. Each power supply is evaluated separately. Only one alert per power supply is generated for each 24-hour time period, even if the power supply fails and then resumes operation repeatedly. If two power supplies fail during the same 24-hour time period, two separate alerts are generated, one per failed power supply.

Event	A critical alert is generated when...
<p>Drive Failure</p>	<p>When the library detects a drive failure that results in the percentage of failed drives in a partition meeting or exceeding the specified threshold.</p> <p>The following drive problems can generate a drive failure event:</p> <ul style="list-style-type: none"> • Failure of the drive software or hardware. • Loss of communication between the library and the drive. • Removal of a drive from the library without using the Drive Remove or Drive Replace operation.

Overview

This section describes enabling email alerts for drive failure notifications using the LumOS user interface. Log into the LumOS user interface and select **Tools > Alerts**.

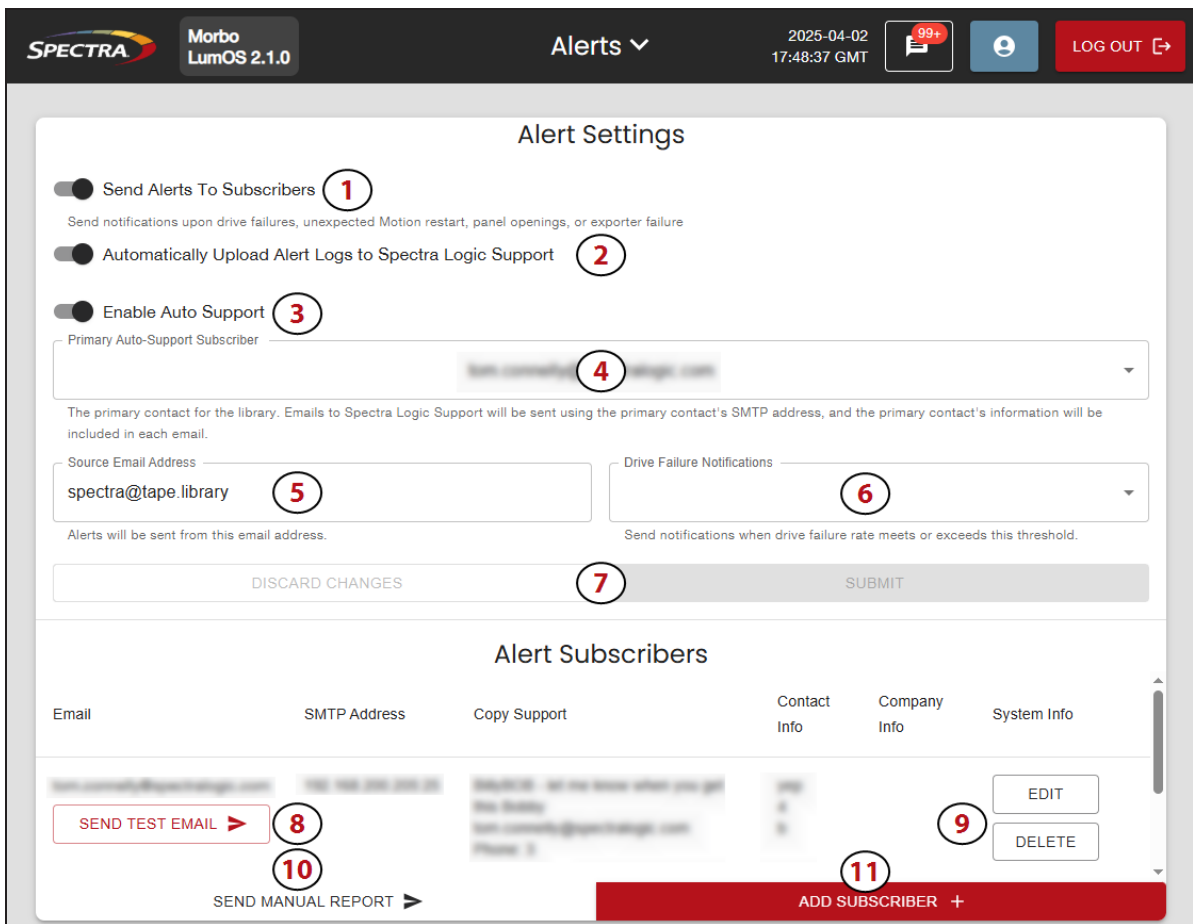


Figure 82 The LumOS Alerts screen.

Configuring Alerts

The following section describes the steps to enable and configure alerts. Use [Figure 82](#) to help you complete the steps below.

1. Toggle **Send Alerts To Subscribers** if desired.
2. Toggle **Automatically Upload Usage and Diagnostic Data to Spectra Logic Support** if desired. If you enable this option, whenever the library generates an alert, logs are automatically sent to Spectra Logic Technical Support.

Note: To send diagnostic data automatically, your firewall must be configured to allow traffic to the following domains:

- <https://www.filestackapi.com>
- <https://loki.spectralogic.com>

3. Toggle **Enable Auto Support** if desired.
4. With auto-support enabled, use the drop-down menu to select a **Primary Auto-Support Subscriber**.
5. Enter a **Source Email Address** to send auto alerts.
Note: `spectra@tape.library` is a placeholder address that must be overwritten with a valid email address.
6. Use the **Drive Failure Notifications** drop-down menu to select a Drive Health threshold to send an alert. The Drive Health threshold is defined as the percentage of drives from all partitions reporting failures.
7. Click **Submit Changes** to apply your selected alert settings.
8. Click **Send Test Email** to send a test email to the configured alert subscriber.
9. Click **Edit** or **Delete** to edit or delete the configured alert subscriber.
10. Click **Send Manual Report** to manually generate and send an alert report.

11. Click **Add Subscriber** to add a new alert subscriber.

Adding or Editing Alert Subscribers

The screenshot shows a mobile application window titled "Add a Subscriber" with a close button (X) in the top right corner. The form contains the following elements:

- Email Address ***: A text input field with a red circle containing the number "1" to its right. Below it is the text "Required".
- SMTP Address**: A text input field with a red circle containing the number "2" to its right. Below it is the text "Required".
- Copy Events to Spectra Support**: A toggle switch that is currently turned on, with a red circle containing the number "3" to its right.
- Subscriber Contact Information**: A section header above a red-bordered box containing:
 - First Name**: Text input field with "Required" below it.
 - Last Name**: Text input field with "Required" below it.
 - Email Address ***: Text input field with a red circle containing the number "4" to its right and "Required" below it.
 - Phone Number**: Text input field with "Required" below it.
 - Alternate Phone**: Text input field.
- SUBMIT**: A button in the bottom right corner.

Figure 83 The LumOS Add Subscriber screen.

The following section describes the steps to add alert subscribers or to edit an existing alert subscriber. Click **Add A Subscriber +** to begin adding a new alert subscriber, or click **Edit** next to an existing alert subscriber then use [Figure 83](#) to help you complete the steps below.

1. Enter an **Email Address**.
2. Enter a **SMTP Address**.

Notes:

- The library currently only supports port 25.

- SMTP servers are required to support TLS and to access the email alert system.

3. Toggle **Copy Events to Spectra Support** if desired to include Spectra Support on event alerts.
4. Enter the required **Subscriber Contact Information**. Optionally, enter information in the **Alternate Phone** field.

The screenshot shows a mobile application interface for adding a subscriber. The form is titled "Add a Subscriber" and has a close button (X) in the top right corner. It is organized into two main sections: "Company Information" and "System Info".

Company Information Section:

- Name:** A text input field containing "Example Company".
- Required:** A label indicating that the Name field is required.
- Address:** A text input field containing "999 Example St". A red circle with the number 5 is overlaid on this field.
- Required:** A label indicating that the Address field is required.
- Location:** An empty text input field.

System Info Section:

- Operating System:** An empty text input field.
- Backup Software:** A text input field containing "Backup Software". A red circle with the number 6 is overlaid on this field.
- Notes:** An empty text input field.

At the bottom right of the form, there is a red button labeled "SUBMIT" with a red circle containing the number 7 overlaid on it.

Figure 84 The LumOS Add Subscriber screen.

5. Enter the required **Company Information**. Optionally, enter information in the **Location** field.
6. If desired, enter information in the **System Info** fields.
7. When all required fields are complete, click **Submit**.

LOG GATHERING

The LumOS user interface allows you to gather logs from the Cube. To gather a log, log in to the library and navigate to **Tools > Log Gather**.

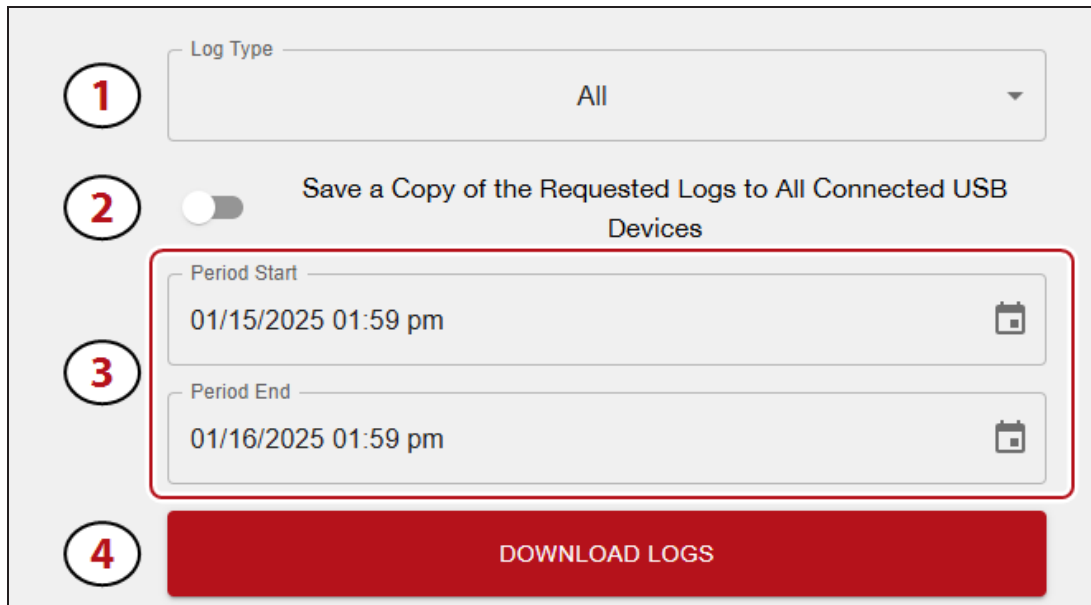


Figure 85 The LumOS Log Gather screen.

Gathering Logs


To gather logs:

1. Select the desired **Log Type** from the drop-down menu to gather. Supported log types include:
 - All
 - API Responses
 - CAN
 - Dip E
 - Drive
 - Loglib
 - LumOS
 - Motion
 - MySQL
 - OS
2. If desired, toggle the slider to save a copy of the log file(s) to a USB drive connected to the library.
3. Click the calendar icon to select the **Period Start** and **Period End** range.
4. Click **Initiate Log Gather**.

ROBOTICS

The LumOS user interface allows you to monitor the health of the robots inside the Cube. To view the status of the robots, log in to the library and navigate to **Status > Robotics**.

Robot Details

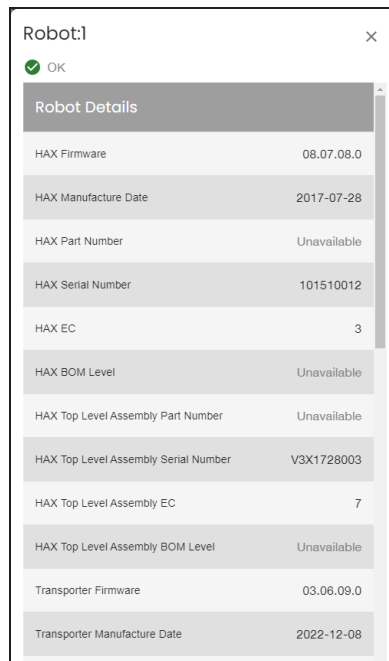

Robot:1	
OK	
Robot Details	
HAX Firmware	08.07.08.0
HAX Manufacture Date	2017-07-28
HAX Part Number	Unavailable
HAX Serial Number	101510012
HAX EC	3
HAX BOM Level	Unavailable
HAX Top Level Assembly Part Number	Unavailable
HAX Top Level Assembly Serial Number	V3X1728003
HAX Top Level Assembly EC	7
HAX Top Level Assembly BOM Level	Unavailable
Transporter Firmware	03.06.08.0
Transporter Manufacture Date	2022-12-08

Figure 86 The LumOS Robot Details screen

To view robot details, click **Details** under the robot desired. The **Robot Details** screen displays the following information for HAX, Transporter, and VAX components:

- Firmware version
- Manufacture Date
- Part Number
- Serial Number
- EC
- BOM Level
- Top Level Assembly Part Number
- Top Level Assembly Serial Number
- Top Level Assembly EC
- Top Level Assembly BOM Level

DRIVE TEST

The Drive Test features allows users to perform a write/read test on drives using a Spectra Diagnostic Cartridges (SDC). To navigate to the Drive Test screen, use the top toolbar and select **Tools > Drive Test**.

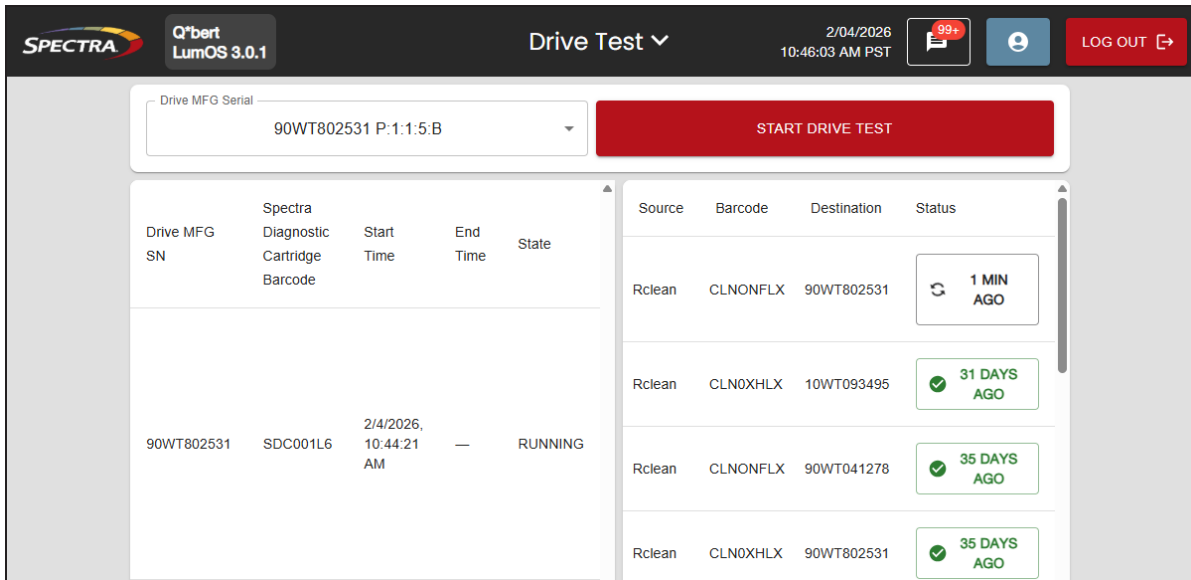


Figure 87 The LumOS Drive Test screen.

Requirements

Before running a drive test, you must satisfy the following requirements.

1. The drive must be in a partition.
2. The cleaning partition associated with the drive partition must contain a cleaning cartridge in good condition.
3. The cleaning partition associated with the drive partition must contain a Spectra Diagnostic Cartridge (SDC) of the same generation as the drive being tested. For example, testing a LTO-8 drive requires the cleaning partition contain a L8 SDC tape.

Note: SDCs are available for purchase from Spectra Logic. One SDC is valid for 110 uses.

Performing a Drive Test

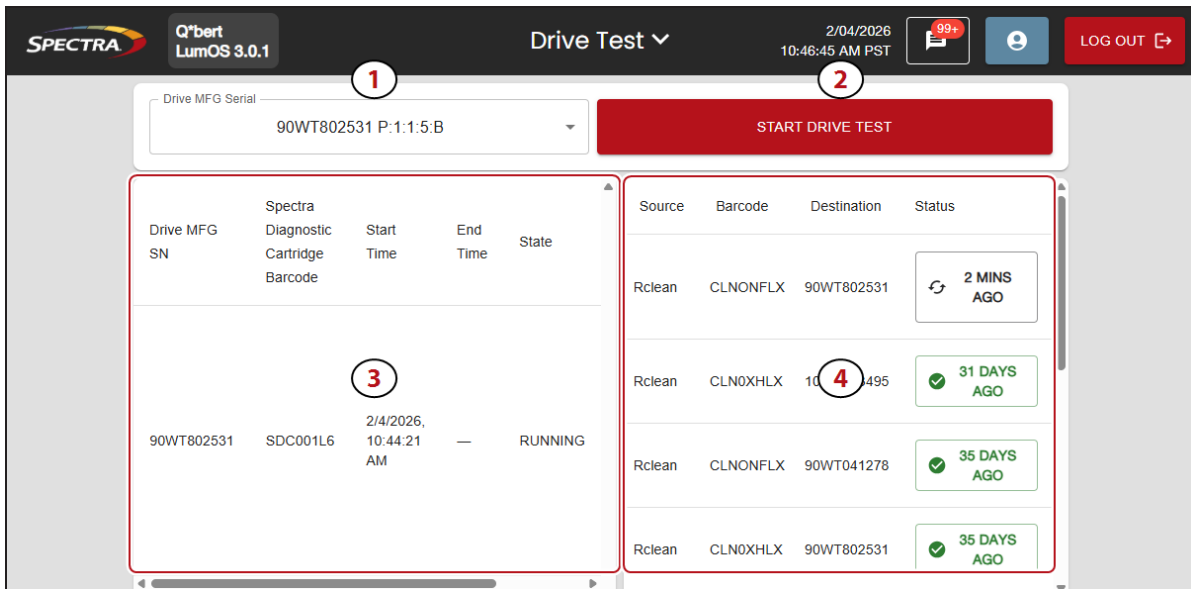


Figure 88 The LumOS Drive Test screen.

The following section describes the steps to perform a drive test. Use Figure 88 to help you complete the steps below.

1. Use the **Drive MFG Serial** drop-down menu to select the drive to test. All drives are listed by their manufacturing serial number.
2. Click **Start Drive Test** to begin the test.
3. The left window displays the status of any active drive tests.
4. The right window displays the history and results of previous drive tests.

DIAGNOSTICS & UTILITIES

The LumOS user interface allows you to run library diagnostics remotely. To run a diagnostic, log in and navigate to **Tools > Diagnostics & Utilities**. The table below provides a summary of each available diagnostic.

Note: After updating to LumOS version 2.1, users will be unable to view diagnostic history for previously run diagnostics. You can retrieve prior diagnostic results using the following API command: `GET /api/tasks?taskType=DIAGNOSTIC`

Diagnostic	Description
Column Calibration Test	Diagnoses issues with the VAX column calibration.
Delete All Partitions	Deletes all library partitions, assigns all magazines to the free pool, and reboots the library.
HPT Self Test	Diagnoses issues with the High Performance Transporter.
Move to Chambers	Diagnoses issues with chamber access by moving magazines to and from the specified chamber. Users input the chamber to test.
Move to Drives	Diagnoses issues with robotics drive access by moving magazines to and from the specified drive. Users input the drive to test.
Power Cycle Library	Power cycle the library. The library will safely power cycle 45 seconds after starting the diagnostic.
Reset Inventory	Resets the library inventory and begins a scan to reacquire the inventory. The library must complete the scan and rebuild the inventory before further operation. This diagnostic takes more time the larger the library is.
Resolve SlotIQ	Completes all outstanding virtual moves.
Robotics Positioning Test	Diagnoses issues with robotics positioning.
Security Audit	Verifies all TeraPack magazine and tape barcodes and locations. This diagnostic takes more time for each tape drive in the library.
Unload Drives	Unloads all drives in the library or in a specified partition.

Column Calibration Test

The **Column Calibration Test** diagnostic tests for VAX column calibration issues. Use the figure below to help you with the diagnostic.

Column Calibration Test

Diagnose column calibration issues.

Parameters

Robot

Robot:1

Run History

Start Time	End Time	State	Log
6/6/2023, 1:37:48 PM	6/6/2023, 1:38:18 PM	SUCCEEDED	Column calibration diagnostic results for robot 1 Back side calibration: top: 26, bottom: 67 Front side calibration: top: 86, bottom: 46 Column tilt : -41 Top of column is tilted : right Column tilt warning threshold (mils): +/-100 Column tilt failure threshold (mils): +/-200 Alignment is within range Diagnostic succeeded (elapsed time: 29.563 seconds)

START DIAGNOSTIC

Figure 89 The LumOS Column Calibration Diagnostic screen.

1. From the diagnostics list, select **Column Calibration Test** (not pictured).
2. Use the **Parameters** drop-down menu to select the robot to test.
3. Click **Start Diagnostic** to run a column calibration test on the selected robot.

Delete All Partitions

The **Delete All Partitions** diagnostic deletes all library partitions and assigns all magazines to the free pool before rebooting the library.

Use the figure below to help you with the diagnostic.

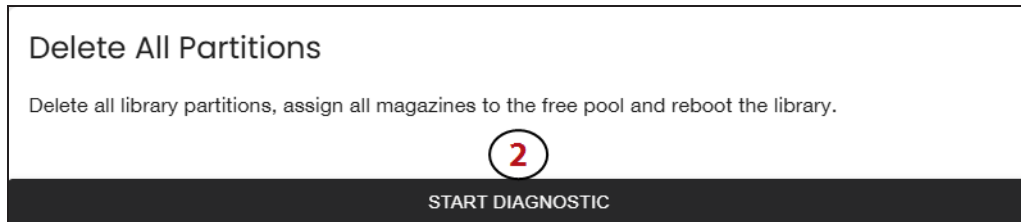


Figure 90 The LumOS Power Cycle Library screen.

1. From the diagnostics list, select **Delete All Partitions** (not pictured).
2. Click **Start Diagnostic**.

HPT Self Test

The **HPT Self Test** diagnostic tests for issues with the High Performance Transporter. Use the figure below to help you with the diagnostic.

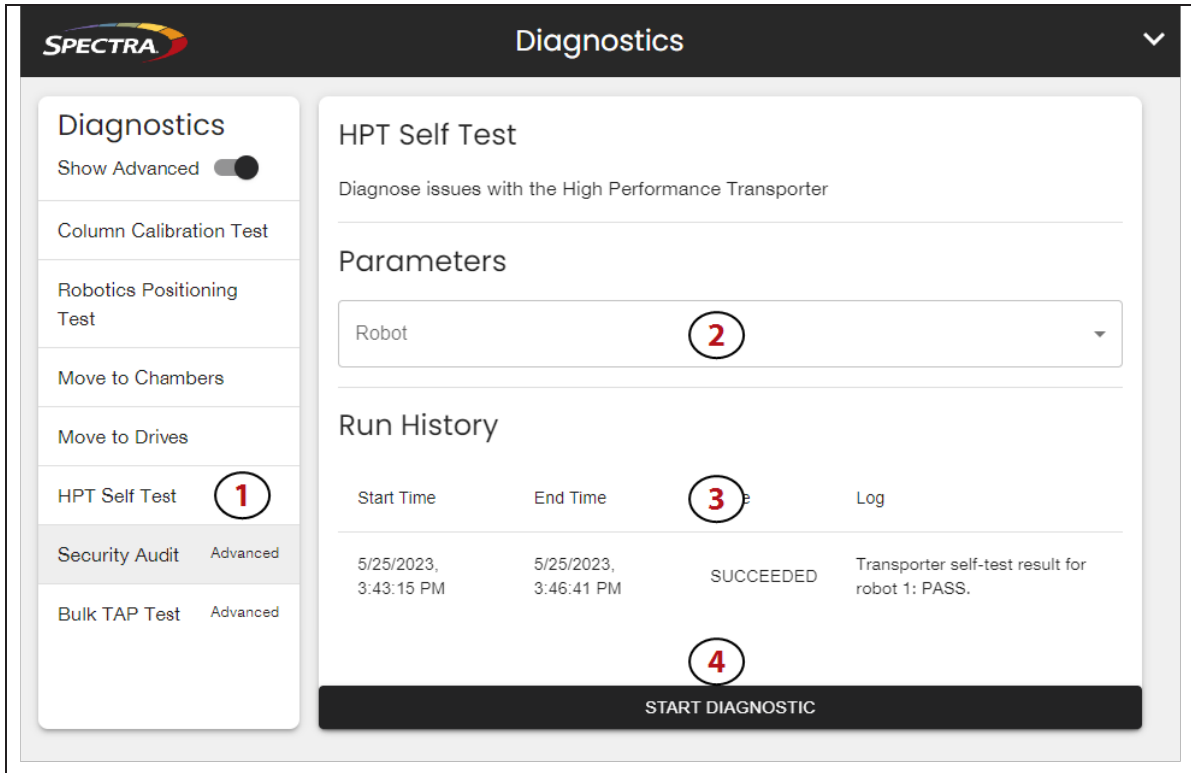


Figure 91 The LumOS HPT Self Test screen.

1. From the diagnostics list select **HPT Self Test**.
2. Using the **Parameters** drop-down menu select the robot to test.
3. Use the **Run History** panel to review previous HPT self test results.
4. Click **Start Diagnostic** to run a HPT self test.

Move to Chambers

The **Move to Chambers** diagnostic moves magazines to and from specified chambers to confirm access to magazines in the specified chambers. Use the figure below to help you with the diagnostic.

Diagnostics
Show Advanced

Column Calibration Test

Robotics Positioning Test

Move to Chambers 1

Move to Drives

HPT Self Test

Security Audit Advanced

Bulk TAP Test Advanced

Unload Drives Advanced

Resolve SlotIQ Advanced

Move To Chambers

Moves magazines to and from the chamber(s) specified by Location.
Location is specified in frame:side:bay:chamber format, with wildcards allowed.
Running this validates fault-free access to a magazine in each chamber tested.

Parameters

 2
Robot: Robot:1 Frame: 1 Side: B Bay: 1 Chamber: 1

Figure 92 The LumOS Move to Chambers Diagnostic screen.

1. From the diagnostics list, select **Move to Chambers**.
2. Use the **Parameters** drop-down menu to select the robot to test. Enter information for **Side**, **Bay**, and **Chamber** if desired. If you leave a parameter blank, the test runs for all valid values of each parameter.

Note: Side only accepts **L** (left) and **R** (right) as parameters.

3. Use the **Run History** panel to review previous move to chambers test results.
4. Click **Start Diagnostic** to run a move to chambers test using the specified parameters.

Move to Drives

The **Move to Drives** diagnostic moves tape cartridges to and from specified drives to confirm the robotics can access the drives. Use the figure below to help you with the diagnostic.

SPECTRA Diagnostics

Diagnostics
Show Advanced

- Column Calibration Test
- Robotics Positioning Test
- Move to Chambers
- Move to Drives** ①
- HPT Self Test
- Security Audit Advanced
- Bulk TAP Test Advanced
- Unload Drives Advanced
- Resolve SlotIQ Advanced

Move To Drives Diagnostic
Moves magazines to and from the drives specified in the list using the specified robot.

Parameters

Robot:1

<input type="checkbox"/>	Drive Name	Media Type
<input checked="" type="checkbox"/>	Drive:1:3:3	LTO
<input type="checkbox"/>	Drive:1:4:4	LTO

 ②

Run History ③

Start Time	End Time	State	Log	Cancel
6/19/2023, 10:33:54 AM	6/19/2023, 10:35:19 AM	SUCCEEDED	started. 2023-06-19T17:33:54Z Starting Test -- Mover=Robot:1 Drive=Drive:1:3:3 2023-06-19T17:35:19Z Test completed. 2023-06-19T17:35:19Z Test completed. 2023-06-19T17:35:19Z Move to drives diagnostic - robot(s) selected: left/only Left/only robot details: Drive 1:3:3: success Diagnostic succeeded (elapsed time: 84.908 seconds). 2023-06-19T17:35:19Z Move	<input type="button" value="x"/>

 ④

START A MOVE TO DRIVES DIAGNOSTIC

Figure 93 The LumOS Move to Drives Diagnostic screen.

1. From the diagnostics list select **Move to Drives**.
2. Use the **Parameters** menu to select the drives to test.
3. Use the **Run History** panel to review previous move to drives test results.
4. Click **Start Diagnostic** to run the test on the selected drive(s).

Power Cycle Library

The Power Cycle Library diagnostic gracefully shuts down the library robotics and then cycles library power after a 45 second delay.

Use the figure below to help you with the diagnostic.

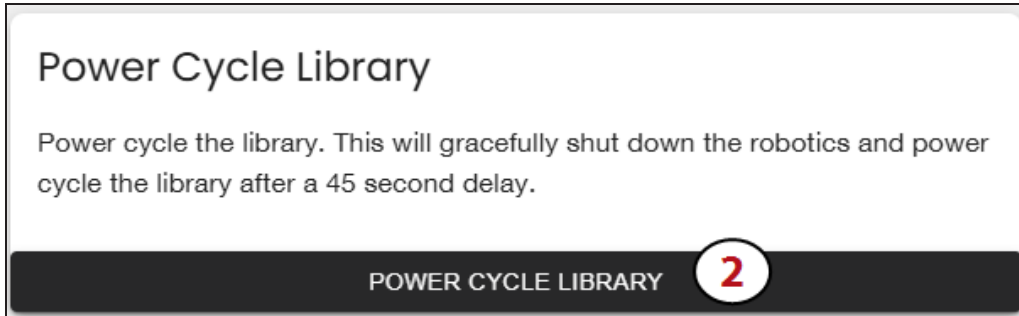


Figure 94 The LumOS Power Cycle Library screen.

1. From the diagnostics list, select **Power Cycle Library** (not pictured).
2. Click **Power Cycle Library**.

Reset Inventory

The Reset Inventory diagnostic allows users to reset the library inventory. After you reset the library inventory, the library scans all tape cartridges in each TeraPack magazine to establish a new inventory. This can take a long time on large libraries.

Use the figure below to help you with the diagnostic.

Note: Reset Inventory is an advanced diagnostic. Advanced diagnostics can significantly impact normal library operation. Spectra Logic recommends contacting Spectra Logic Technical Support before resetting the library inventory.

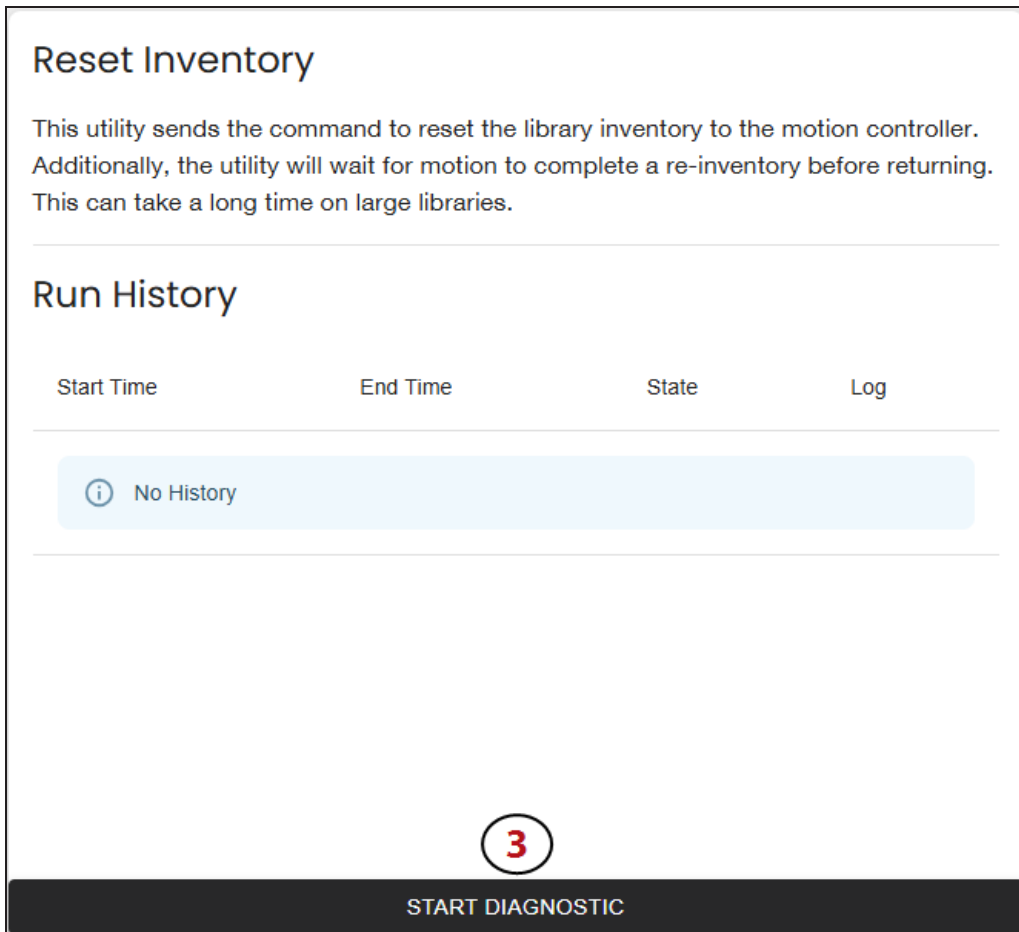


Figure 95 The LumOS Reset Inventory screen.

1. From the diagnostics list, select **Reset Inventory** (not pictured).
2. Click **Start Diagnostic**.

Resolve SlotIQ

The Resolve SlotIQ diagnostic completes all outstanding virtual moves. Use the figure below to help you with the diagnostic.

Note: Resolve SlotIQ is an advanced diagnostic. Advanced diagnostics can significantly impact normal library operation.

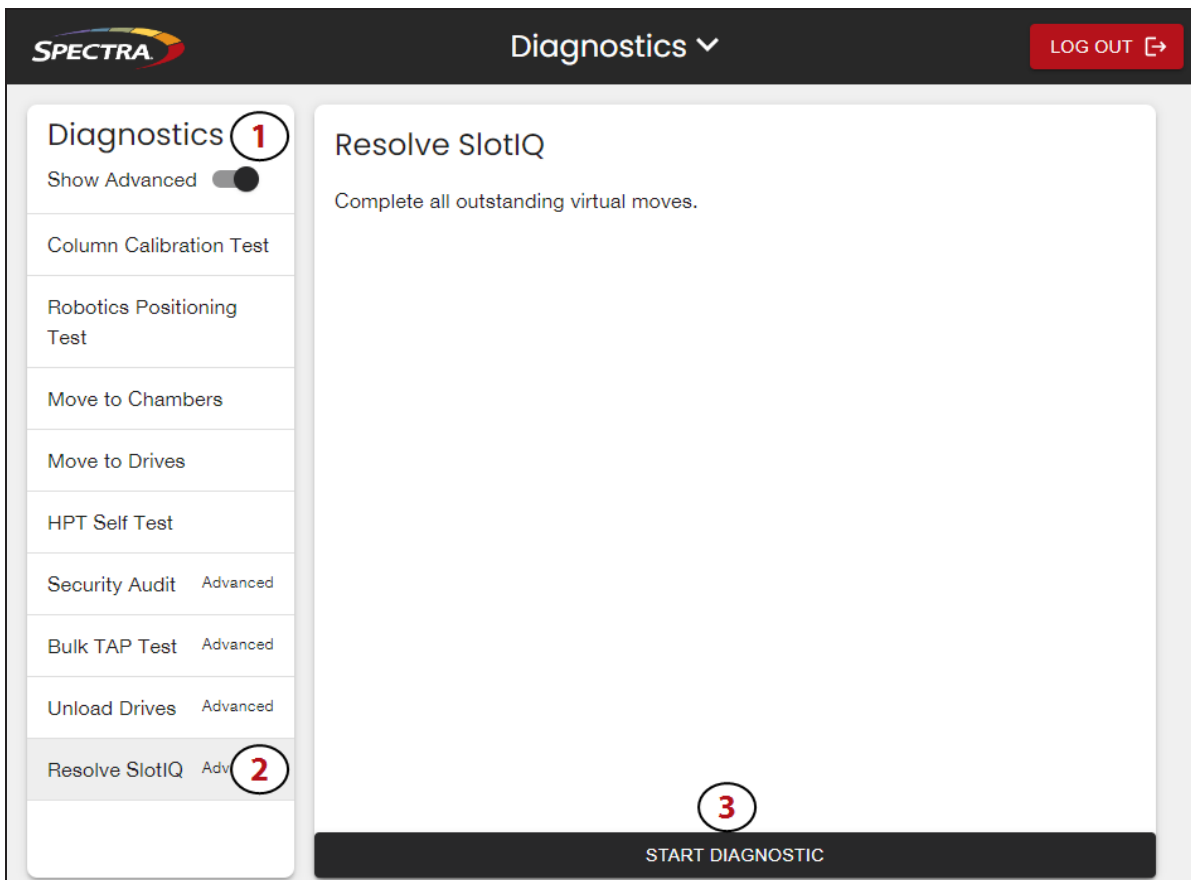


Figure 96 The LumOS Resolve SlotIQ screen.

1. From the diagnostics list, select **Resolve SlotIQ**.
2. Click **Start Diagnostic**.

Robotics Positioning Test

The **Robotics Positioning Test** diagnostic tests for robot positioning issues. Use the figure below to help you with the diagnostic.

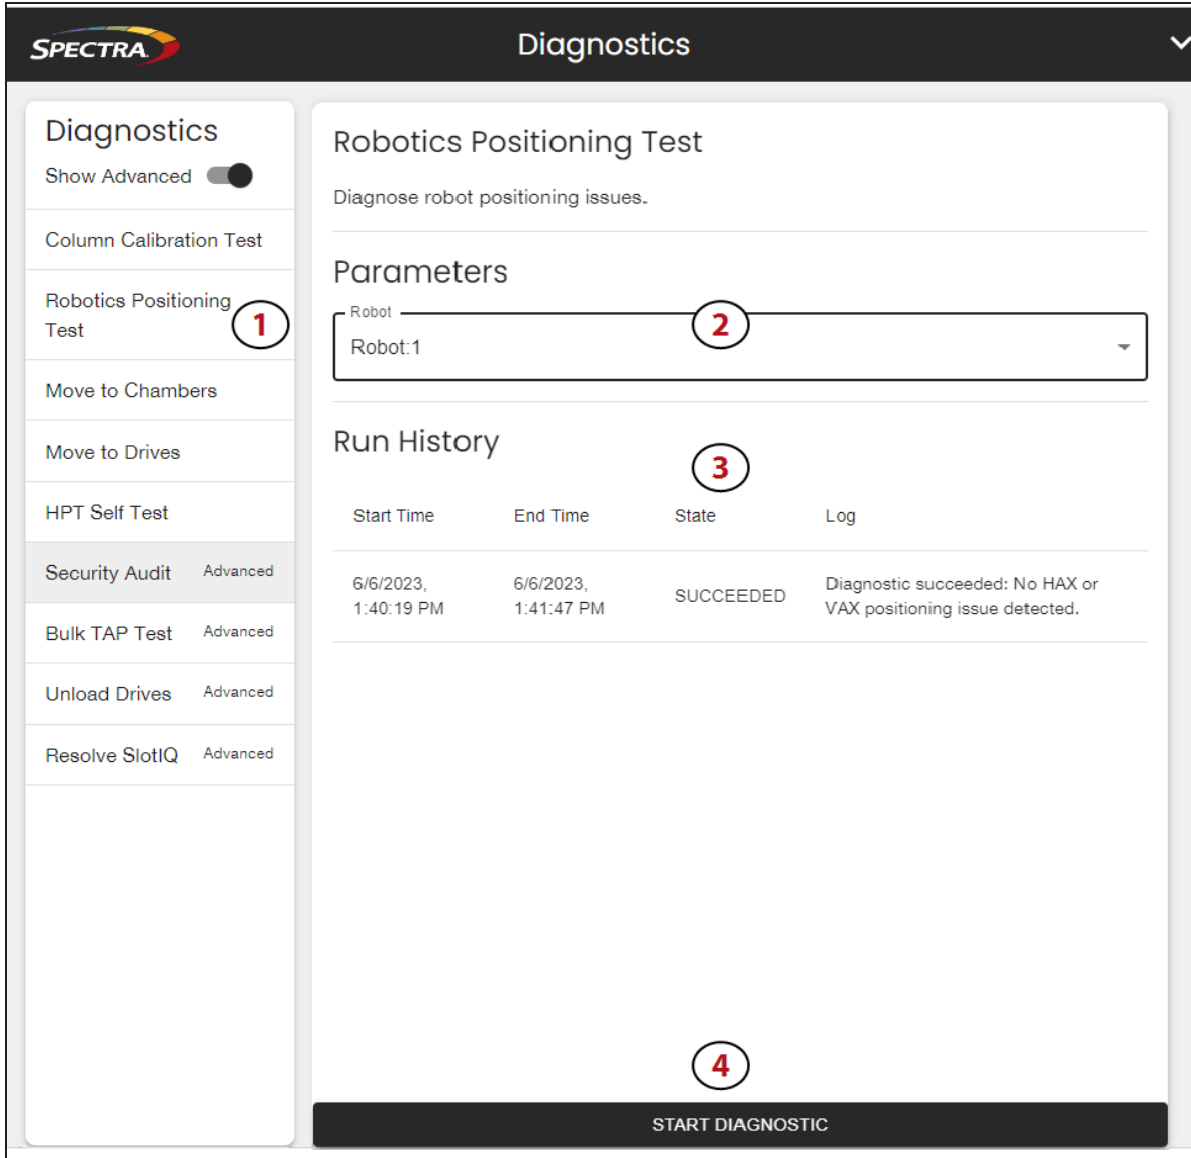


Figure 97 The LumOS Robotics Positioning Diagnostic screen.

1. From the diagnostics list, select **Robotics Positioning Test**.
2. Use the **Parameters** drop-down menu to select the robot to test.
3. Use the **Run History** panel to review previous robotics positioning test results.
4. Click **Start Diagnostic** to run a robotics positioning test on the selected robot.

Security Audit

The **Security Audit** diagnostic verifies the barcode and position of each TeraPack magazine and tape cartridge in the library. Use the figure below to help you with the diagnostic.



IMPORTANT

The Security Audit diagnostic takes longer the more magazines and tape cartridges are present in the library.

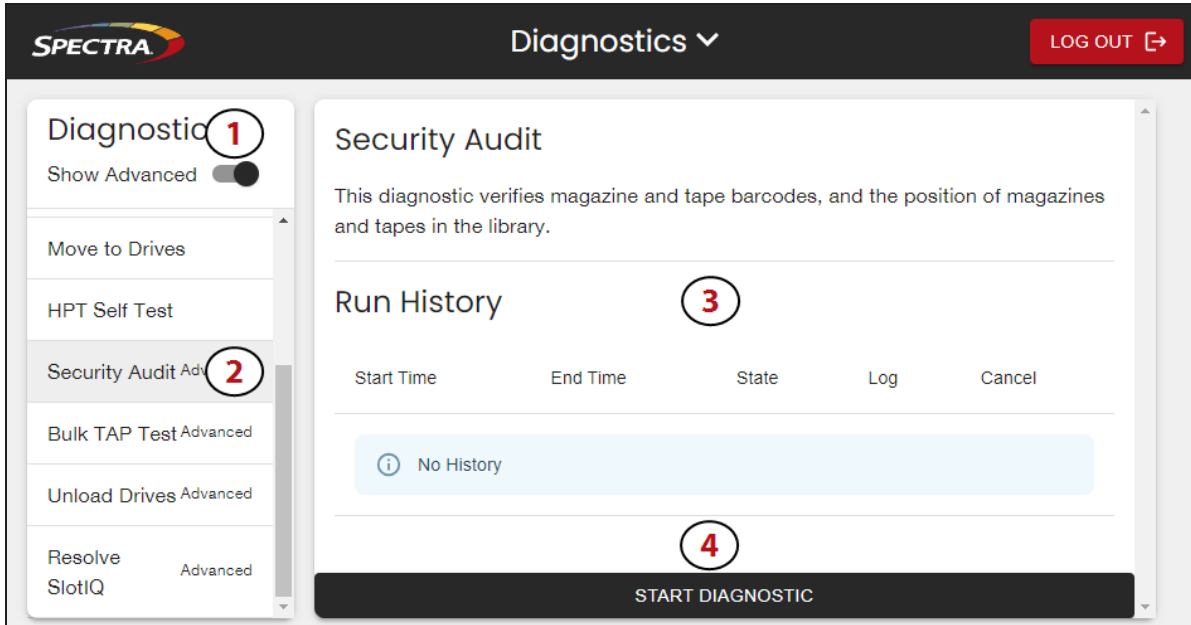


Figure 98 The LumOS Security Audit Diagnostic screen.

1. From the diagnostics list, select **Security Audit**.
2. Use the **Run History** panel to review previous security audit results.
3. Click **Start Diagnostic** to begin the security audit. The duration of this diagnostic depends on the number of TeraPack magazines installed in the library.

Unload Drives

The Unload Drives diagnostic allows users to unload all drives in the library or in a specific partition. Use the figure below to help you with the diagnostic.

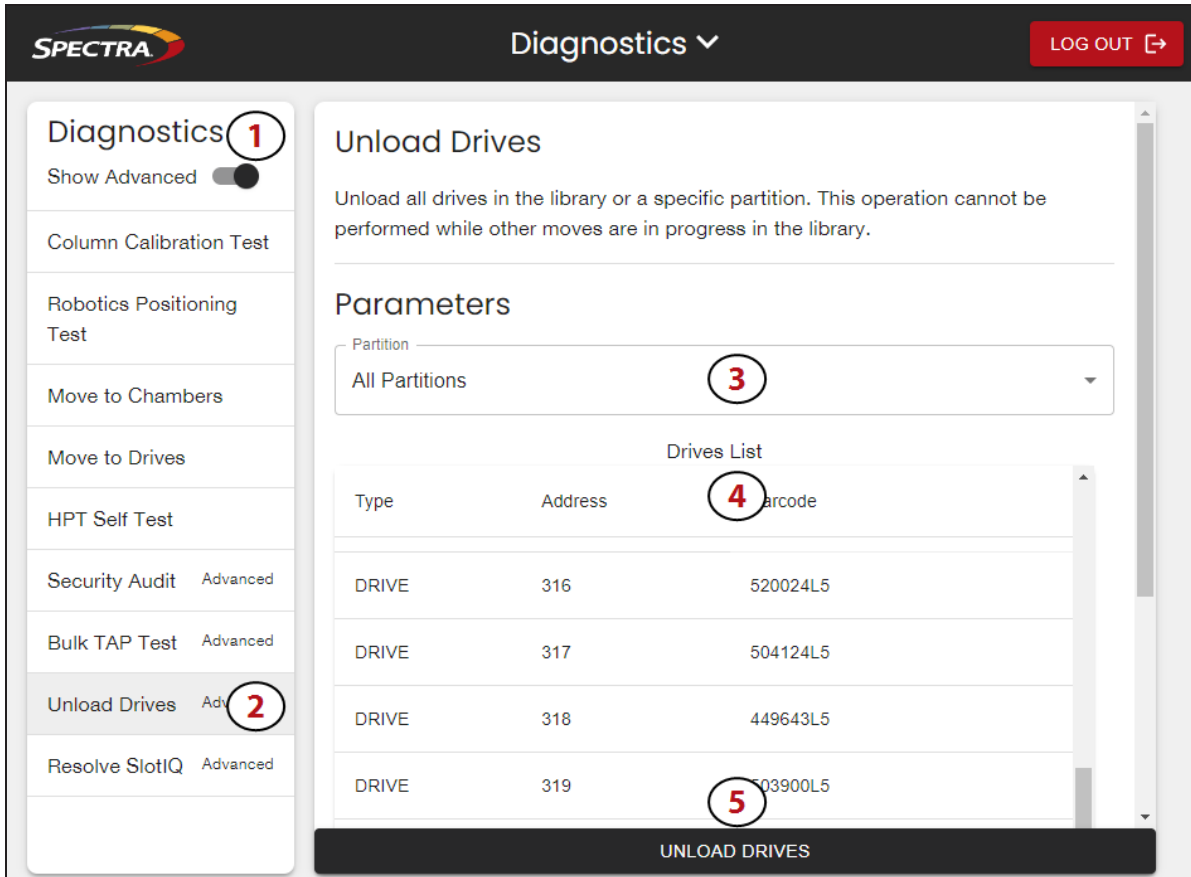


Figure 99 The LumOS Unload Drives screen.

1. From the diagnostics list, select **Unload Drives**.
2. Use the **Parameters** drop-down menu to select the desired partition, or select **All Partitions**.
3. Use the **Drives List** panel to review all selected drives.
4. Click **Unload Drives**.



CHAPTER 10 - TECHNICAL SUPPORT

Spectra Logic Technical Support provides a worldwide service and maintenance structure, refined over many years to provide timely, professional service.

IMPORTANT A valid LumOS software Support key is required in order to obtain technical support.

Accessing the Technical Support Portal	165
Create an Account	165
Log Into the Portal	166
Opening a Support Ticket	167
Search for Help Online	167
Submit an Incident Online	170
Submit an Incident by Phone	172
Returns	173

ACCESSING THE TECHNICAL SUPPORT PORTAL

The Spectra Logic Technical Support portal provides access to the Knowledge Base, the current version of LumOS software for the library, drive firmware, drive device drivers, and additional service and support tools. You can also open or update a support incident and upload ASL files.

Create an Account

Access to *User Guides* and compatibility matrices does not require you to create an account. You must create a user account and log in to access *Release Notes* or repair documents, to download the latest version of LumOS software, or to open a support incident.

Note: If you have multiple Spectra Logic products, the serial numbers for all products will be associated with your account. If you do not see the serial numbers for all of your products when you log in, contact Technical Support (see [Contacting Spectra Logic on page 9](#)).

1. Access the Technical Support portal at support.spectralogic.com.
2. On the home page, click **Register Now**.


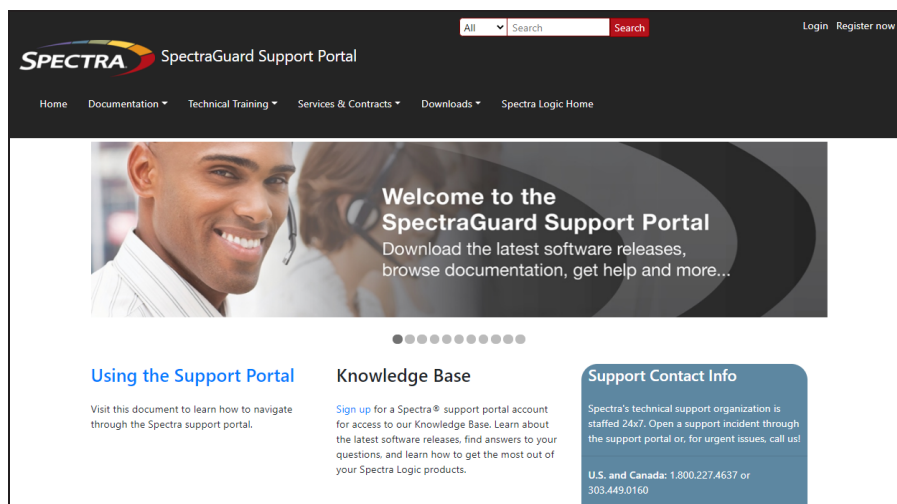


Figure 100 The Spectra Logic Technical Support portal home page.

3. Enter your registration information. Your account is automatically associated with the serial numbers of all Spectra Logic products owned by your site.

- If you have an invitation, follow the link and enter the invitation code.

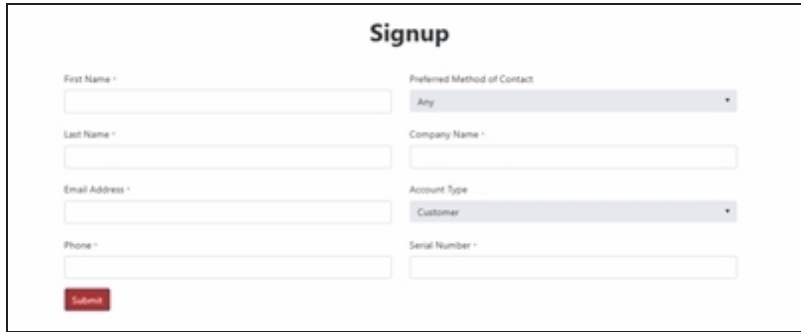

The screenshot shows a 'Signup' form with the following fields and options:

- First Name - [Text Input]
- Last Name - [Text Input]
- Email Address - [Text Input]
- Phone - [Text Input]
- Preferred Method of Contact - [Dropdown Menu: Any]
- Company Name - [Text Input]
- Account Type - [Dropdown Menu: Customer]
- Serial Number - [Text Input]
- Submit - [Red Button]

Figure 101 The Sign-up screen.

- If you do not have an invitation, enter the requested information to create your account. When you are finished, click **Submit**.

When the account is approved, you receive an email with an initial password. Use your email address and the password provided in the email to log in to your account. After you log in, you can change your password if desired.

Log Into the Portal

Use your email address and password to log into the Technical Support Portal.

OPENING A SUPPORT TICKET

You can open a support incident using the Spectra Logic Technical Support portal or telephone.

Search for Help Online

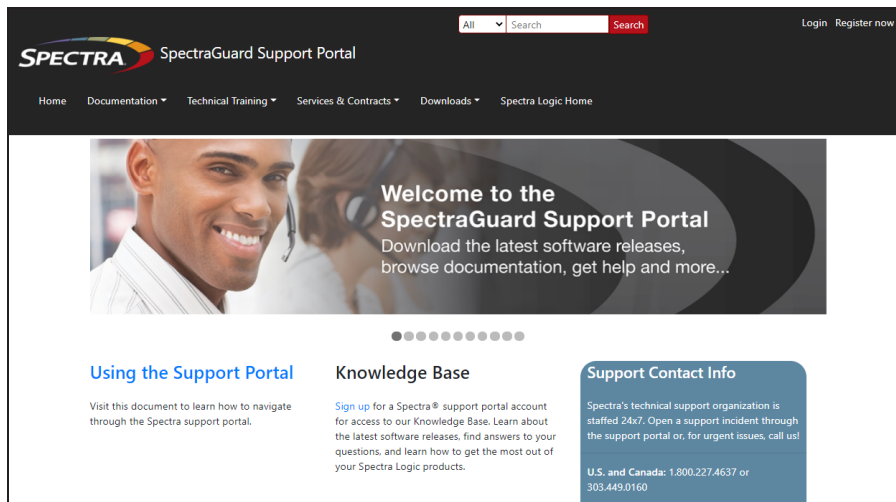


Figure 102 The Spectra Logic Technical Support portal home page.

1. Make notes about the problem, including what happened just before the problem occurred.
2. Gather the following information:
 - Your Spectra Logic customer number
 - Company name, contact name, phone number, and email address
 - The library serial number on the **Configuration>Settings** screen.
 - Type of host system being used
 - Type and version of host operating system being used
 - Type and version of host storage management software being used
3. If necessary, log in to the Support Portal by clicking **Login**, enter your **email address** and **password**, and click **Log in**.

Note: See [Accessing the Technical Support Portal](#) on page 165 if you have not previously created an account on the Technical Support portal.

4. From any page, select **Incident>Incidents & Inventory**.

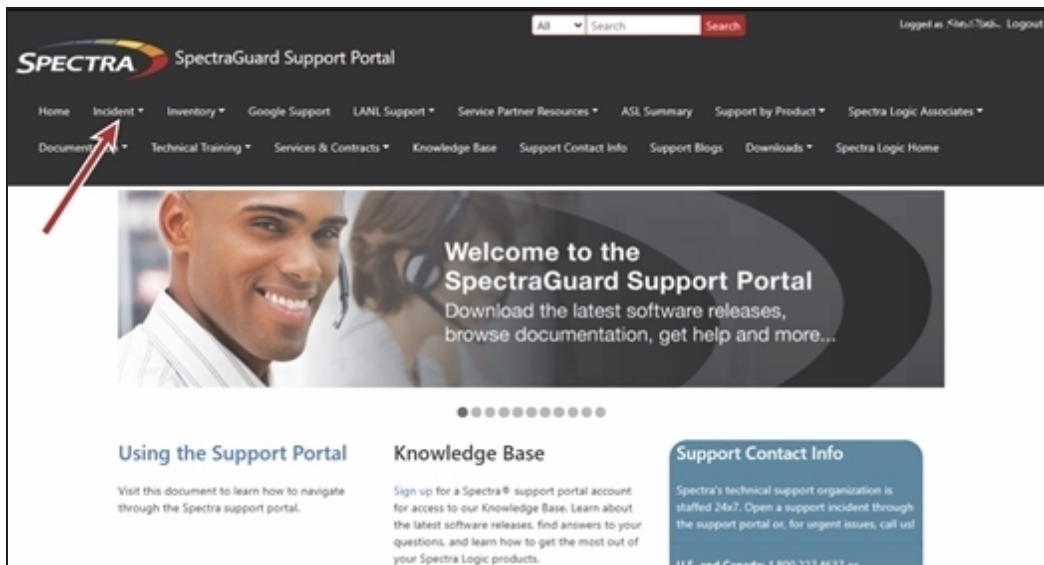


Figure 103 Select **Incidents>Incidents & Inventory**.

5. Select **Open or View Incidents**.

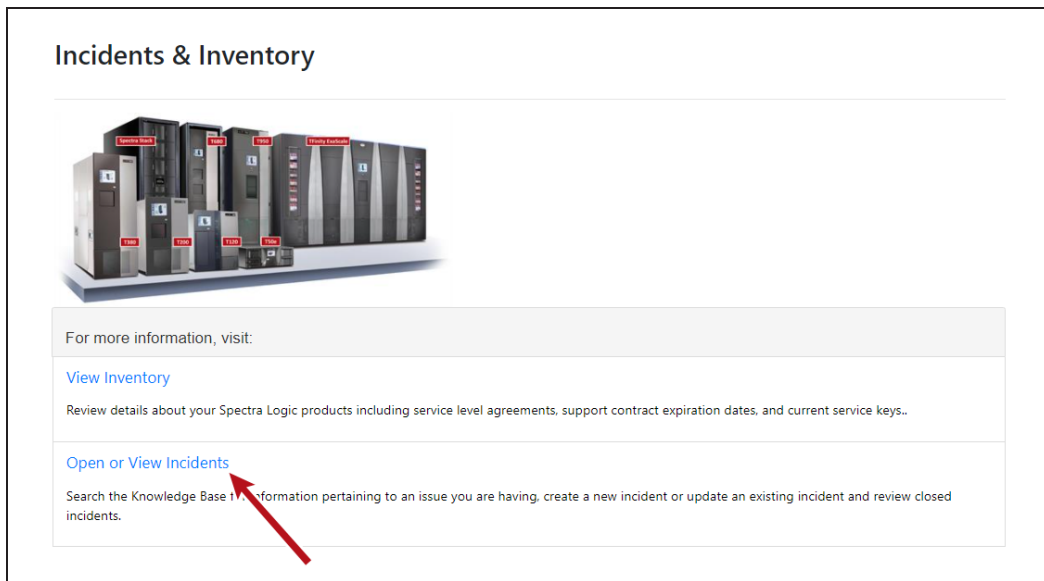


Figure 104 Select **Open or View Incidents**.

6. In the Search dialog box, enter a term or phrase about your problem (1) and click **Search** (2).

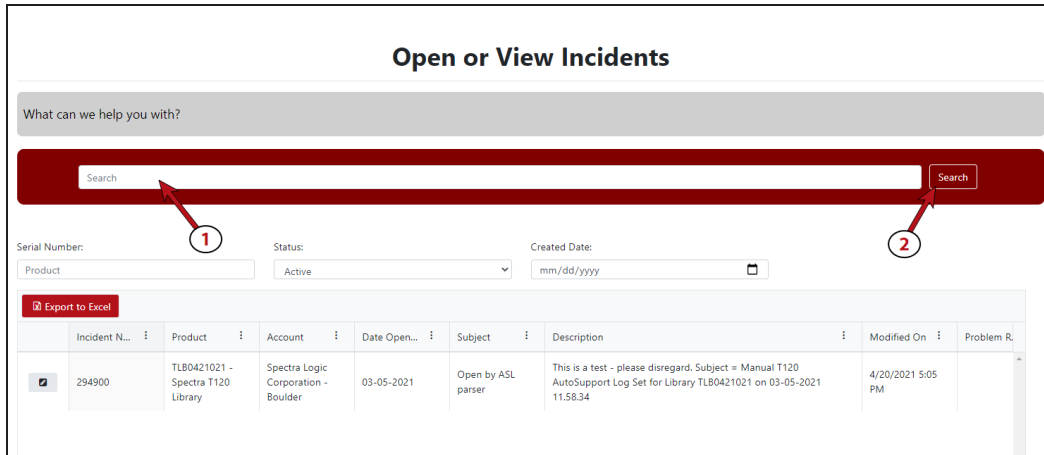


Figure 105 Enter a search phrase and click **Search**.

7. If the search does not provide an answer, click **Open a New Incident**.

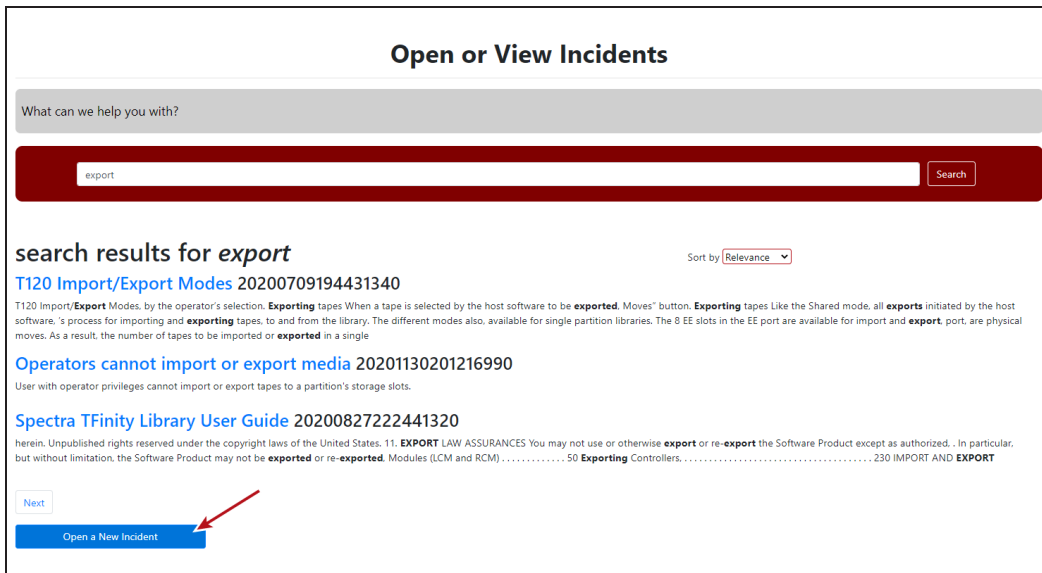


Figure 106 Click **Open a New Incident**.

8. On the Create Incident page, enter the requested information providing as much detail as possible. When you are finished, click **Submit**.

Create Incident

Severity *

Problem Description *

Email addresses to include in correspondence

Customer *

Product *

Select files...

DELIVERY Address For Shipping Parts

Confirm The Ship To Address

Submit

Figure 107 Enter information about your incident and click **Submit**.

Submit an Incident Online

1. Make notes about the problem, including what happened just before the problem occurred.
2. Gather the following information:
 - Your Spectra Logic customer number
 - Company name, contact name, phone number, and email address
 - The library serial number on the **Configuration>Settings** screen.
 - Type of host system being used
 - Type and version of host operating system being used
 - Type and version of host storage management software being used
3. If necessary, log in to the Support Portal by clicking **Login**, enter your **email address** and **password**, and click **Log in**.

Note: See [Accessing the Technical Support Portal](#) on page 165 if you have not previously created an account on the Technical Support portal.

4. From any page, select **Inventory>My Inventory**.

5. Locate the row of the product for which you want to submit an incident and click **Create Incident**.

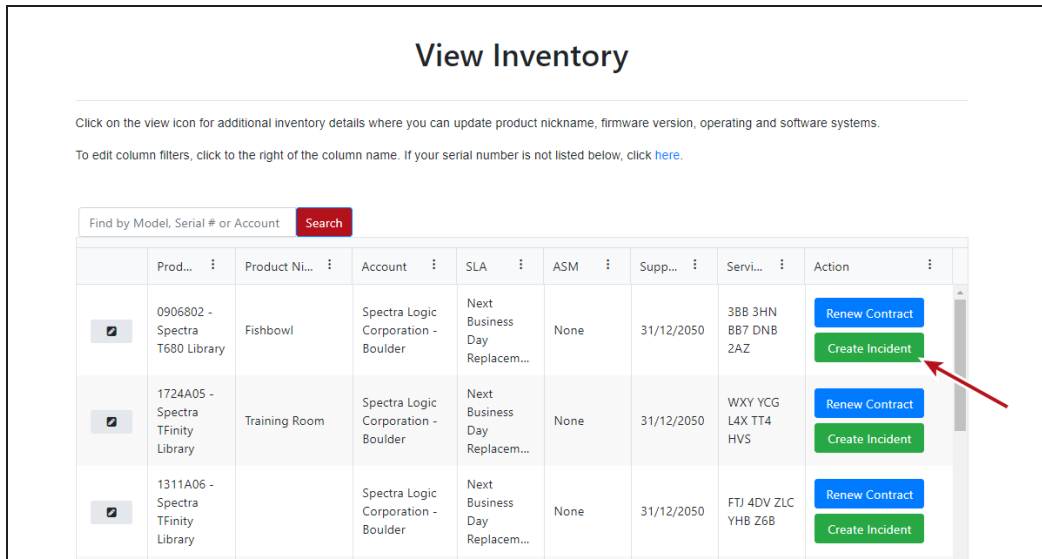


Figure 108 Click **Create Incident**.

6. On the Create Incident page, enter the requested information providing as much detail as possible. When you are finished, click **Submit**.

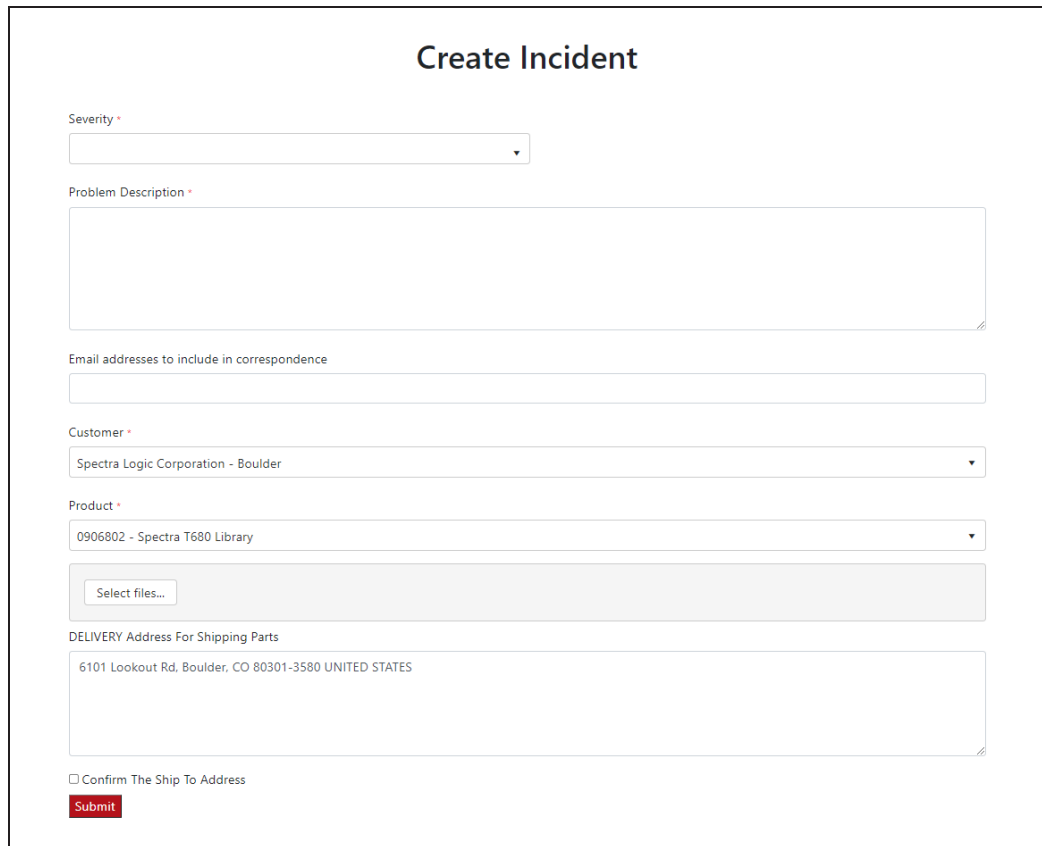


Figure 109 Enter information about your incident and click **Submit**.

Submit an Incident by Phone

Contact Spectra Logic Technical Support by phone using the information below.

Spectra Logic Technical Support	
Technical Support Portal: support.spectralogic.com	
United States and Canada Phone: Toll free US and Canada: 1.800.227.4637 International: 1.303.449.0160	Europe, Middle East, Africa Phone: 44 (0) 870.112.2185 Deutsch Sprechende Kunden Phone: 49 (0) 6028.9796.507
Additional international numbers available at support.spectralogic.com/home If you have a Spectra Logic Portal account, please log in for country-specific numbers at support.spectralogic.com/support-contact-info	

RETURNS

Your Technical Support representative may ask you to return a problem component to Spectra Logic for analysis and servicing. After you complete a replacement procedure, return the defective part using ALL of the packaging that the replacement part arrived in (including any anti-static bags or foam inserts).

CAUTION

Severe damage can occur if the component is not packaged correctly. You may be invoiced if it is damaged due to improper or insufficient packaging.

Use the return label and instructions that were included with the replacement part when preparing to ship the component you are returning. If you cannot locate these, contact Spectra Logic for another copy (see [Contacting Spectra Logic on page 9](#)). The return label and Return Merchandise Authorization (RMA) printed on it are used to associate the returned component with your account. To avoid being invoiced for failure to return the component, do not ship the component back to Spectra Logic without the RMA return label.

APPENDIX A - BEST PRACTICES

This appendix reviews best practices for using Media Lifecycle Management, protecting library configuration data, and working with media.

MLM Best Practices	175
Implementation Guidelines	175
Usage Policy Guidelines	176
Using Cartridges	177
Labeling Cartridges	177
Handling Cartridges	178
Storing Cartridges	179
Using Cartridges in the Library	180
Cartridge Rotation	181

MLM BEST PRACTICES

To effectively use MLM and ensure MLM and DLM data protection, plan a strategy based on your data center needs and develop policies and procedures to support that strategy. Having sound management policies and procedures for media rotation and management is essential for consistent, effective implementation.

Implementation Guidelines

Consider the following best practice guidelines as you prepare to implement MLM in your environment.

Guideline	Description
Identify the people responsible for backing up data	The people who perform data backup at your site are typically the ones who will be responsible for implementing and following MLM backup procedures.
Identify the users who will have responsibilities that involve MLM	It may be wise to have more than a single user familiar with policies, depending on the size of your organization, so that if one person is not available, another can take over.
Be consistent with partition names	Using consistent naming simplifies identifying a specific partition. Spectra's suggested naming practice is to list the location, followed by the library name, followed by the storage management software. For example, Dallas Cube NetBackup.
On an organizational level, determine the level of management your media requires	The level of media management depends on the requirements for your environment. For example, you may choose to use Spectra's guidelines for retirement for all media, or you may choose to retire tapes that hold financial or legal data sooner than recommended.

Usage Policy Guidelines

Consider the following guidelines when establishing your Media Lifecycle Management policies.

Guideline	Description
<p>Choose a retirement guideline</p>	<p>When implementing MLM, decide at the beginning on the criteria to be used when determining when to retire a cartridge.</p> <p>Spectra suggests using the Media Lifecycle Management health icon for each tape to assess the overall health of individual tapes.</p>
<p>Only use MLM-enabled media and cleaning cartridges in MLM-compatible libraries and drives</p>	<p>For the most accurate tracking, do not import your MLM-enabled media into non-Spectra Logic libraries or drive generations earlier than LTO-4. The cartridge MAM will not be updated with information about usage in those locations. As a result, the information about usage in those locations will not be recorded in the MLM database when the cartridge is returned to your library.</p>
<p>Use only Spectra Certified Media with MLM support (both data and cleaning cartridges) in the library</p>	<p>To ensure the best possible performance, use Spectra Certified Media. Check the Spectra Logic website for the most up-to-date media availability. Do not use any media that has not been approved by Spectra Logic for use in the library.</p> <p>The library uses information in the MLM database to monitor the health of the media in the library. For MLM-enabled media, the detailed health reports let you determine whether a particular data cartridge is past its useful threshold or determine whether a particular cartridge is experiencing high errors rates or retries. For MLM-enabled cleaning cartridges, you are notified when a cartridge is approaching the end of its useful life.</p> <p>Although MLM tracks the general health of media that is not MLM-enabled, detailed health information is not available for this media.</p>

USING CARTRIDGES

The following sections describe best practices for using cartridges and for managing your media inventory. All library user groups have privileges that allow them to use the library's user interface to perform the cartridge handling and media management operations described in this appendix. Because handling cartridges requires physical interaction with the library, much of the information in this appendix is not applicable when you are accessing the library using the LumOS web interface.

Note: See *MLM Best Practices* on page 175 for additional guidance when using Spectra Certified Media with MLM support.

Labeling Cartridges

If you are not using pre-labeled Spectra Certified Media (both data and cleaning cartridges), be sure to label all cartridges with the appropriate barcode labels. Position each label in the indented area on the cartridge, as illustrated in [Figure 110](#). See [Barcode Label Specifications](#) for detailed information about preparing and using barcode labels.

CAUTION Do not place labels on any surface of the cartridge except the area shown in [Figure 110](#). A loose label can become dislodged and damage the drive.

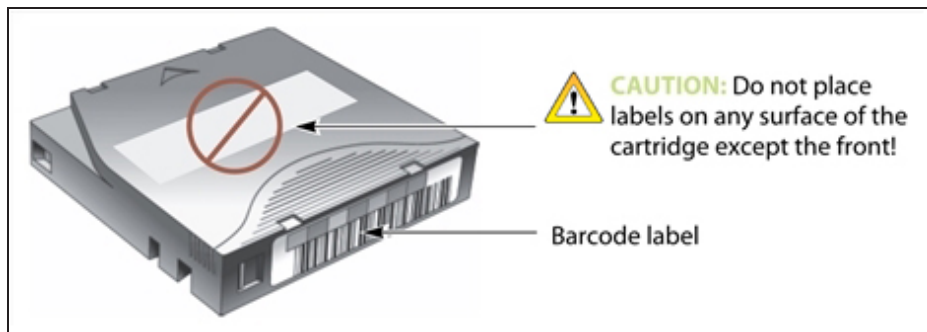


Figure 110 Properly barcode label all cartridges (LTO cartridge shown).

Handling Cartridges

Incorrect handling or an incorrect environment can damage the LTO cartridge or the magnetic tape inside it. To avoid damage to your cartridges and to ensure the continued high reliability of your drives, use the following guidelines:

- Do not drop the cartridge. If the cartridge drops, slide the cartridge door back and ensure that the leader pin is properly seated in the pin-retaining spring clips. Inspect the rear of the cartridge (the part that you load into the tape drive first) and ensure that there are no gaps in the seam of the cartridge case.
- Do not open any part of the cartridge other than the cartridge door. Do not open any other part of the cartridge case. The upper and lower parts of the case are held together with screws; separating them destroys the usefulness of the cartridge.
- Do not handle tape that is outside of the cartridge. Handling the tape can damage the tape's surface or edges, which may interfere with read or write reliability. Pulling on tape that is outside of the cartridge can damage the tape and the brake mechanism in the cartridge.
- If tape is outside of the cartridge, slide the cartridge door back and turn the hub to gently spool the tape back into the cartridge. Test the tape by using your storage management software to write to the tape, and then run a PostScan.
- Before you use a cartridge, let it acclimate for at least 24 hours to the normal operating environment.
- Ensure that all surfaces of a cartridge are dry before inserting it into a magazine.
- Do not stack more than six cartridges.
- Do not expose the tape cartridge to moisture or direct sunlight.
- Do not degauss a tape cartridge that you intend to use/reuse. Degaussing makes the tape unusable.
- Do not expose recorded or blank tape cartridges to stray magnetic fields (such as terminals, motors, video equipment, X-ray equipment, or high-current cables or power supplies). Such exposure can cause the loss of recorded data or make the blank cartridge unusable.
- Maintain the environmental conditions specified in [Tape Media Specifications](#).

Storing Cartridges

While in use, cartridges are stored in TeraPack magazines inside the library. When the cartridges are *outside* of the library, Spectra Logic recommends storing them in magazines with dust covers.



Figure 111 TeraPack magazines with barcode labeled cartridges and plastic dust cover (LTO magazines shown).

Storing and handling cartridges in magazines helps to eliminate errors resulting from mishandling individual cartridges, which is the leading cause of cartridge damage. An optional clear plastic dust cover snaps onto the magazine to protect the cartridges.

Whenever you remove cartridges from your library, be sure to store them properly to maximize archival life and ensure data integrity. Follow these guidelines for proper cartridge storage:

- Store cartridges in a suitable environment (see [Tape Media Specifications](#)).
- Keep the storage location as free of airborne particulates as possible. To eliminate obvious sources of particulates, do not permit anyone to smoke, eat, or drink near the storage area, and do not store cartridges near a copier or printer that may emit toner and paper dust.
- Store cartridges with the write-protect switch in the protected position (see [Preparing Cartridges for Use](#)).
- Store cartridges as soon as possible after you remove them from the library. Immediate storage helps avoid many of the conditions that can damage tapes, such as temperature and humidity fluctuations, particulate contamination, and excessive handling.
- If you plan to ship a TeraPack magazine, make sure that you have a proper shipping container and that you use adequate packing material. The TeraPack carrying cases available from Spectra Logic are designed for safely transporting TeraPack magazines off site and are compatible with Iron Mountain.

Using Cartridges in the Library

This section describes the best practices for using cartridges in the library.

- Use only cartridges from approved vendors in the library. See [Media and Media Accessories](#) for more information about Spectra Certified Media.
- Make sure that the entry/exit pool contains one or more empty TeraPack magazines. This is particularly important when your storage management software ejects tape cartridges from a partition.

If the entry/exit pool does not have any empty slots available for the ejected media, then the storage management software must wait until empty slots become available. The simplest way to avoid this delay is to import one or more empty TeraPack magazines after you export media from the library.

Alternatively, always make sure that you import full TeraPack magazines into the library, then use your storage management software to move (import) all of the new media into the storage pool for the partition. After all of the media is moved to the storage pool, you will end up with one or more empty magazines in the entry/exit pool.

- Make the entry/exit pool large enough to accommodate all of the cartridges typically imported or exported during a single operation. For example, if you run a nightly backup that uses 48 cartridges which are then exported each morning, create an entry/exit pool of 50 LTO slots (5 chambers).
- After your library has been in use for a period of time, and at least one set of cartridges has completed a round trip (exported from the library, stored off site, then re-imported), the following rule of thumb applies: if you remove a TeraPack magazine from the entry/exit pool, replace it with either an empty magazine to accommodate future eject operations or a full magazine whose cartridges are then imported into the storage pool using your storage management software.
- During an import or export operation, do not leave the library unattended for more than a few minutes. If you do, the import or export operation times out so that the library can continue automated backup tasks. To continue, restart the operation when you are ready.
- Enable Auto Drive Clean and configure a cleaning partition to clean drives whenever required to help ensure optimal performance. If you do not use the Auto Drive Clean feature, periodically check the Drives screen to determine whether the drives require cleaning (see [Cleaning a Drive](#)).
- Confirm the quality of your media and verify data integrity by occasionally running restores using different drives.
- Confirm the quality of both media and drives by running periodic disaster recovery drills. These drills test the overall ability to recover all of your data using your backups.

Cartridge Rotation

During normal backup operations, tapes are rotated into and out of the library. This section provides a simple example of the library's media life cycle functionality to manage tape rotation. Using a backup plan similar to the one described in the following example for a period of time establishes a media rotation schedule for the library. The example assumes the following:

- The library has a total of 17 licensed chambers and uses LTO media.
 - 2 chambers are assigned to the entry/exit pool (20 slots, or 2 TeraPack magazines).
 - 15 chambers are assigned to the storage pool (150 slots, or 15 TeraPack magazines).
- The library contains 15 full TeraPack magazines and two empty TeraPack magazines.
- Two magazines containing 20 cartridges worth of backup data are sent off site every Friday.
- After the data has aged two weeks, the media is returned to the library and re-used.
- The site adheres to the following best practices:
 - Whenever a TeraPack magazine is exported, another magazine (either full or empty) is imported.
 - The library has enough empty TeraPack magazines to fill the entry/exit pool.

This example shows that, by Week 3, the backup plan results in a full media rotation in which the operator has done the following:

1. Removed and stored two full TeraPack magazines of media. Full magazines were exported from the entry/exit pool and removed through the TAP, resulting in an empty entry/exit pool.
2. Imported two full TeraPack magazines into the entry/exit pool through the TAP and then used the storage management software to move the media in the entry/exit pool into the storage pool.


 
Moving the media to the storage pool leaves two empty magazines in the entry/exit pools, ready to accept media as the storage management software identifies media as ready to be ejected from the library.

The following sections describe and illustrate the rotation process .

Initial Installation of Cartridges


 

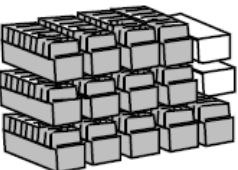

The library is configured with a single partition and has a total of 17 licensed chambers assigned to either the entry/exit pool or storage pool. When the library is initially installed, chambers are filled with TeraPack magazines as described in the following illustration.

Note: The figures in this section are a general representation provided for clarity and may not reflect the actual distribution of magazines in the library.
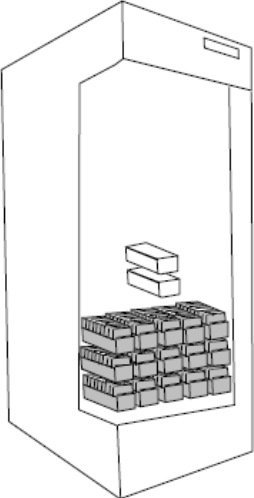
<p>Library:</p> <ul style="list-style-type: none"> ▪ Entry/Exit pool: 2 chambers contain empty TeraPack magazines. ▪ Storage pool: 15 chambers contain full TeraPack magazines. 	<p>Data center: 4 empty TeraPack magazines available.</p> 
--	--


End of Week 1

The storage management software ejects cartridges from the storage pool. The library moves the cartridges to empty magazine slots in the entry/exit pool, making them ready to be removed from the library and stored off site.
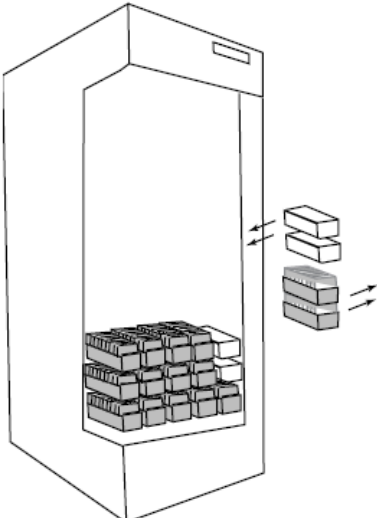
<p>Operator tasks:</p> <ul style="list-style-type: none"> ▪ Export 2 full TeraPack magazines from the entry/exit pool. ▪ Import 2 empty TeraPack magazines into the entry/exit pool. 	<p>Results of operator tasks:</p> <p>Off-site storage: 2 full TeraPack magazines.</p>  <p>Entry/Exit pool: 2 chambers, each contains an empty TeraPack magazine.</p>  <p>Storage pool:</p> <ul style="list-style-type: none"> ▪ 13 chambers contain full TeraPack magazines. ▪ 2 chambers contain empty TeraPack magazines.  <p>Data Center: 2 empty TeraPack magazines.</p> 
---	--

End of Week 2

The storage management software ejects cartridges from the storage pool. The library moves the cartridges to empty magazine slots in the entry/exit pool, making them ready to be removed from the library and stored off site.

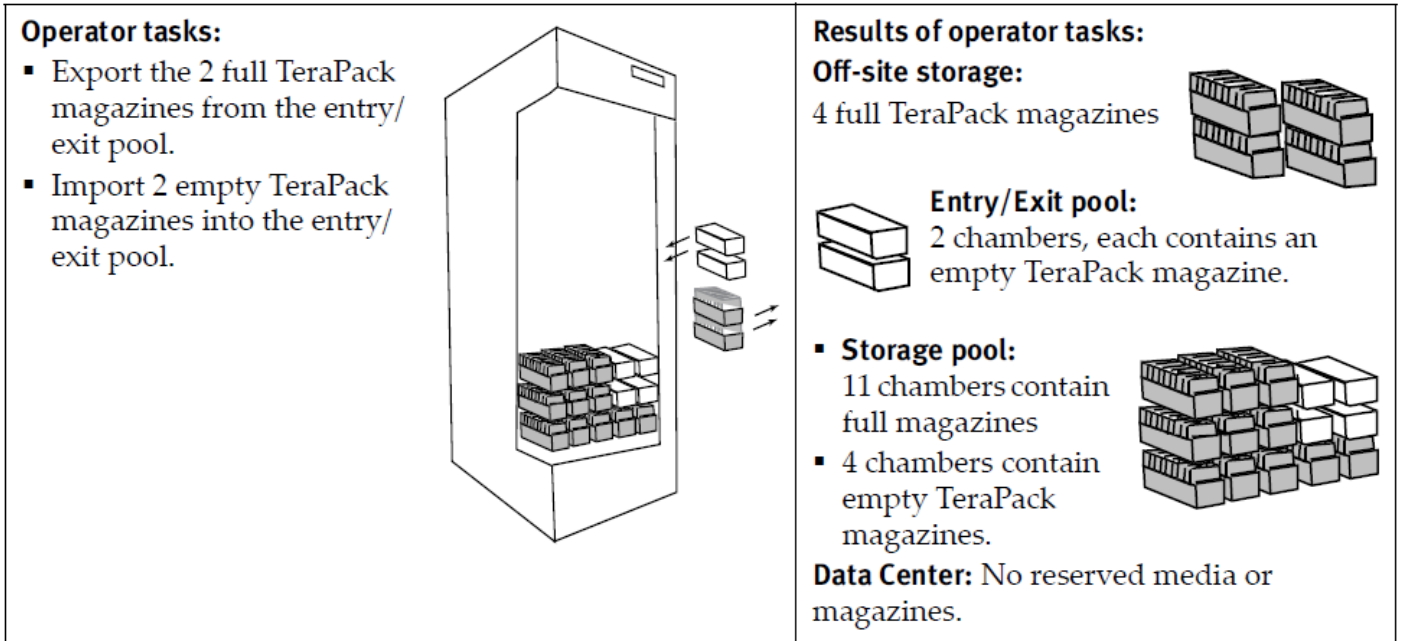


End of Week 3

The storage management software ejects cartridges from the storage pool. The library moves the cartridges to empty magazine slots in the entry/exit pool, making them ready to be removed from the library and stored off site. The two full magazines stored off site in Week 1 are ready for re-use. After importing the full magazines into the entry/exit pool, the storage management software is used to move the cartridges to the storage pool, leaving two empty magazines in the entry/exit pool.

Operator tasks:


- Export the 2 full TeraPack magazines from the entry/exit pool.
- Import 2 full TeraPack magazines into the entry/exit pool.
- Use storage management software to move cartridges to the storage pool.

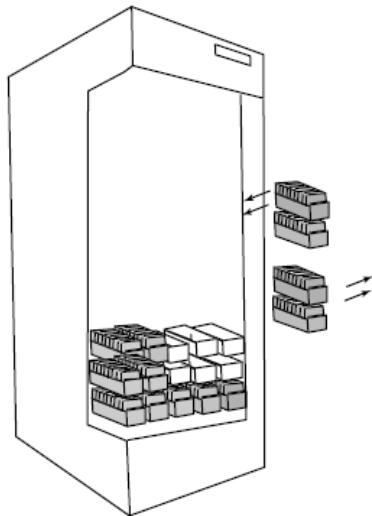

Results of operator tasks:

Off-site storage:

4 full TeraPack magazines

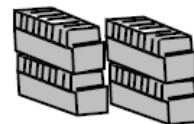

Entry/Exit pool:

2 chambers, each contains an empty TeraPack magazine.



▪ **Storage pool:**

11 chambers contain full magazines

- 4 chambers contain empty magazines



Data Center: No reserved media or magazines.

APPENDIX B - TROUBLESHOOTING DRIVES

The following sections provide information about troubleshooting drive problems.

Identify the Problem

1. When you encounter problems with drive operation while using the library's user interface, begin troubleshooting by checking the following:

Check...	To...
System messages	Review any system messages that have been posted by the library and take any action described in the message(s).
Error sense codes	Look up the definition of an error sense code referenced in a system message using the Spectra Tape Libraries SCSI Developer Guide .
Drive documentation	Find detailed troubleshooting information for the drive. See Additional Publications on page 15 for information about obtaining drive documentation.
Technical Support Portal	<p>Find information about the most current version of the LumOS software and additional service and support tools. You can access the Technical Support portal at support.spectrallogic.com.</p> <p>Note: Accessing many of the tools available on the Technical Support portal requires creating a user account. See Accessing the Technical Support Portal on page 165 for instructions.</p> <ul style="list-style-type: none"> • Check the options under the Documentation and Knowledge Base menus for additional troubleshooting information. • Check the Services & Contracts menu to view information about the warranty and service options available for your library as well as the Spectra Certified Media warranty.

2. Display the Drive Details screen for the drive you suspect is having problems and review the information about the drive. Use the following table and information to determine how to proceed.

Detail Field	Description
Post Status	Indicates whether the drive successfully completed its power-on self-tests (POST).

Detail Field	Description
	When an LTO drive is power-cycled or reset, it automatically runs self-diagnostic tests (POST), which check the drive's memory and sensors, performs motor and servo tests, and tests the data channels to make sure that the drive is function within normal parameters.
Cleaning Status	Indicates whether the drive requires cleaning.
Display Character or Display Message	Corresponds to the single-character display (SDC) on a LTO drive.
Cartridge Status	Indicates whether a cartridge is currently loaded in the drive, tape motion, and other information related to reading and writing data.

3. If you have successfully operated the storage management software and library in the past but are not experiencing problems reading and writing data, check the following:

Check this...	If...
Write-protect switch setting	You are having trouble writing data to a cartridge. Make sure that the cartridge is write-enabled.
Cartridge age	A tape cartridge has been in use for a long time or if it has been used frequently, try using a new cartridge.
Drive cleaning	The drive indicates that a cleaning is required. Note: If the storage partition associated with a cleaning partition and the cleaning partition contains a usable cleaning cartridge, drives are automatically cleaned whenever necessary.

4. If you experience problems accessing the drives in the library from the storage management software on the host, check the following:

Check...	To...
Interface connections	Make sure that the SAS or Fibre Channel connections to the drives are secure.

Check...	To...
	<p>IMPORTANT After you power on the library and the Fibre Channel arbitrated loop or fabric completes its initialization, avoid disconnecting the Fibre Channel devices from the network. If you need to disconnect a drive from the network, use the utility provided with your switch or hub to bypass the affected ports before breaking the connection. The bypass sets the port to a non-participating state on the network. After you reconnect the drive to the library, use the utility to return the port to a participating state.</p>
<p>Software instillation</p>	<p>Make sure that your host application is installed and configured correctly (refer to your software documentation). Pay special attention to steps that describe how to configure the software for use with the drive(s).</p>
<p>Drive addressing</p>	<p>Make sure that the drive address configured in the host application is the same one you specified when you configured the partition containing the drive.</p>
<p>Host and software requirements</p>	<p>Determine whether a device driver is required. Some operation environments require you to install device drivers before the application software can correctly communicate with the drives. When you update the drive firmware, you may also need to update the device driver for the drive.</p>

Interpret the Detailed Drive Information

The Drive Details screen includes information about the drive and drive sled firmware versions, the location-based Spectra serial number, and the manufacturer's serial number. It also shows additional detailed status information, including the state of the status LED and the single-character display (SCD) for an LTO drive. See [Drive Details on page 107](#) for information about accessing this screen.

The following sections describe how to use information on the Drive Details screen to help troubleshoot drive problems.

Responding to the Drive Cleaning Notification

Whenever a tape is loaded or unloaded, the read/write heads are physically cleaned by a brush located within the drive. However, after reading and writing a large amount of data (the exact amount varies by drive type and generation) or if the read or write errors occur, the drive requests to be cleaned with a cleaning cartridge. The request is made by sending a Tape Alert message to the host, and displaying a **C** on the SCD for an LTO drive. The notification is also posted to the library's Drive Details screen and the DLM drive health icon for the drive changes to yellow.

Interpreting the Status LED Information

The Drive Details screen shows the state of the drive's LED. The LED states are the same for all generations of drives. Refer to the tape drive documentation about interpreting the LED.

Interpreting the SCD Codes

Overview

The Drive Details screen displays the state of the single-character display (SCD) on LTO drive.

Permanent Errors

If the drive detects a permanent error and displays a SCD error code other than zero (0), it automatically performs a drive dump. If you force a drive dump, the existing drive dump will be overwritten and data will be lost. You might also lose the dump data if you turn off power to the drive.

Multiple Errors

The SCD is blank during normal operation. If multiple errors occur, the code with the highest priority (lowest number) displays first. Once corrected, the code with the next highest priority displays, until none remain.

Note: The drive may need to be reset in order to clear the error code.

LTO SCD Codes

The following table shows the SCD codes for LTO drives supported by the library.

Note: The single-character display does not use the characters B, D, G, I, O, and Z to prevent misinterpretation as the characters 8, 0, 6, 2, and 1.

Code	Cause and Solution
0	<p>No error occurred.</p> <p>No action is required. The power was cycled or diagnostics have finished with no errors.</p>
1	<p>Cooling problem.</p> <p>The recommended operating temperature was exceeded. Perform one or more of the following:</p>

Code	Cause and Solution
	<ul style="list-style-type: none"> • Make sure that the cooling fan is rotating and is quiet. • Remove any blockage that prevents air from flowing freely through the drive. • Make sure that the operating temperature and airflow is within the specified range (refer to the tape drive documentation for these specifications). <p>If the operation temperature is within the specified range and the problem persists, contact Spectra Logic Technical Support.</p> <p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p>
2	<p>Power problem.</p> <p>The externally supplied power is approaching the specified voltage limits (the drive is still operation) or is outside the specified voltage limits (the drive is not operating).</p> <p>If the problem is only exhibited by one drive in a library:</p> <ul style="list-style-type: none"> • Make sure that the library's power connector is properly sealed. • If the problem persists, contact Spectra Logic Technical Support. <p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p> <p>If the problem is exhibited by multiple drives in the library:</p> <p>The power through the library needs to be checked. Contact Spectra Logic Technical Support for assistance.</p>
3	<p>Firmware problem.</p> <p>IMPORTANT Do not force a dump; one already exists.</p> <p>The drive determined that a firmware error occurred. Perform the following:</p> <ol style="list-style-type: none"> 1. Reset the drive, then retry the operation that produced the error. 2. If the problem persists, contact Spectra Logic Technical Support. <p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p>
4	<p>Firmware or drive problem.</p> <p>IMPORTANT Do not force a dump; one already exists.</p> <p>A firmware or drive hardware failure occurred. Perform the following:</p> <ol style="list-style-type: none"> 1. Reset the drive, then retry the operation that produced the error. 2. If the problem persists, contact Spectra Logic Technical Support.

Code	Cause and Solution
	<p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p>
5	<p>Drive problem.</p> <p>IMPORTANT Do not force a dump; one already exists.</p> <p>The drive determined that a tape path or read/write error occurred. To prevent damage to the drive or tape cartridge, the drive does not allow you to insert a cartridge if the current cartridge was successfully ejected. Perform the following:</p> <ol style="list-style-type: none"> 1. Reset the drive, then retry the operation that produced the error. 2. If the problem persists, contact Spectra Logic Technical Support. <p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p>
6	<p>Drive or media error.</p> <p>See Media Lifecycle Management on page 99 for information about using MLM to determine the health of the cartridge. See Drive Lifecycle Management on page 103 for information about using DLM to determine the health of the drive.</p> <p>The drive determined that an error occurred, but it cannot isolate the cause. Ensure the tape cartridge is the correct media type:</p> <ul style="list-style-type: none"> • See LTO Read/Write Compatibility on page 214 for information about which media is compatible with each LTO drive generation. • Drive will not accept an expired cleaning cartridge. • Drive will not accept a WORM cartridge when running diagnostic tests in Maintenance Mode. • Drive will not write over existing data sets on a WORM cartridge. Ensure you are appending data sets on WORM media rather than attempting to write over existing data sets. <p>Confirm that the cartridge is the correct media type. If it is, determine whether the problem is associated with writing or reading data to a single cartridge or multiple cartridges.</p> <p>Problems Writing Data on a Cartridge with a Known Volume Serial Number</p> <p>Retry the operation with a different cartridge.</p> <ul style="list-style-type: none"> • If the operation succeeds, the original cartridge was defective. If possible, copy data from the defective cartridge and set the original cartridge aside. If additional tests confirm that the cartridge was the cause of the error, you can discard it. • If the operation fails and another drive is available, insert the original cartridge into the other drive and retry the operation.

Code	Cause and Solution
	<ul style="list-style-type: none"> • If the operation fails, discard the defective cartridge. • If the operation succeeds, use the Drive Test page to test the original drive. (See Drive Test on page 149). • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, the error was temporary. <ul style="list-style-type: none"> • If the operation fails and another drive is not available, use the Drive Test page to test the drive. <ul style="list-style-type: none"> • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, retry the operation to determine whether the error was temporary. If the operation fails again, discard the cartridge. <p>Problems Reading Data on a Cartridge with a Known Volume Serial Number</p> <p>Perform one of the following procedures:</p> <ul style="list-style-type: none"> • If another drive is available, insert the cartridge into the other drive and retry the operation. <ul style="list-style-type: none"> • If the operation fails, discard the defective cartridge. • If the operation succeeds, use the Drive Test page to test the original drive. (See Drive Test on page 149). • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, the error was temporary. • If the operation fails and another drive is not available, use the Drive Test page to test the drive. <ul style="list-style-type: none"> • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, retry the operation to determine whether the error was temporary. If the operation fails again, discard the cartridge. <p>Problems with One or More Cartridges with Unknown Volume Serial Numbers</p> <p>If the problem occurs with multiple tape cartridges or if you do not know the tape cartridge's volume serial number, use the Drive Test page to test the drive (see Drive Test on page 149).</p> <ul style="list-style-type: none"> • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, the problem is not related to the drive.
7	High probability of media error.

Code	Cause and Solution
	<p>An error occurred because of a faulty tape cartridge.</p> <ul style="list-style-type: none"> • Ensure the tape cartridge is the correct media type: <ul style="list-style-type: none"> • See LTO Read/Write Compatibility on page 214 for information about which media is compatible with each LTO drive generation. • Drive will not accept an expired cleaning cartridge. • Drive will not accept a WORM cartridge when running diagnostic tests in Maintenance Mode. • Drive will not write over existing data sets on a WORM cartridge. Ensure you are appending data sets on WORM media rather than attempting to write over existing data sets. • If another drive is available, insert the cartridge into the other drive and retry the operation. <ul style="list-style-type: none"> • If the operation fails, discard the defective cartridge. • If the operation succeeds, use the Drive Test page to test the original drive (see Drive Test on page 149). • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the diagnostics succeed, the error was temporary. • If another drive is not available, use the Drive Test page to test the drive. <ul style="list-style-type: none"> • If the drive fails the Drive Test, contact Spectra Logic Technical Support. • If the drive passes the Drive Test, retry the operation to determine whether the error was temporary. If the operation fails again, discard the cartridge. <p>Note: The error code clears when you reset or power cycle the drive or when you place it in maintenance mode.</p>
8	<p>SCSI interface or Fibre Channel failure.</p> <p>A failure occurred in the drive hardware or the SCSI bus. The error code clears after 10 seconds if the error does not recur. If the error persists, contact Spectra Logic Technical Support.</p>
9	<p>RS-422 error.</p> <p>The drive determined that a drive interface or library interface failure occurred. The error code clears after 10 seconds if the error does not recur. If the error persists, contact Spectra Logic Technical Support.</p>
A	<p>Degraded operation.</p> <p>The drive determined that a problem occurred that degraded the operation of the drive, but it did not restrict continued use.</p>

Code	Cause and Solution
	<p>The drive is usable, though the single-character display (SCD) continues to indicate an error and the status light flashes amber. the error code may clear when you power cycle the drive.</p> <ol style="list-style-type: none"> 1. Reset the drive to clear the error code. 2. Confirm the drive is using the current firmware version (see Drive Firmware Update on page 131) and update the firmware if necessary. 3. Use the Drive Test page to test the drive (see Drive Test on page 149). 4. If the problem persists, contact Spectra Logic Technical Support.
C	<p>Cleaning indicator.</p> <p>The drive needs to be cleaned, or is in the process of loading the cleaning cartridge or being cleaned. The error code clears when you clean the drive and unload the cleaning cartridge.</p>
d	<p>Two drives on the Fibre Channel loop have the same Arbitrated Loop Physical Address.</p>
E	<p>The Fibre Channel port connection is off-line.</p>
e	<p>The drive detected a configuration error during an encryption operation.</p> <ol style="list-style-type: none"> 1. Retry the encryption operation with the suspected cartridge in another encryption enabled drive. 2. Replace the cartridge if you see the same problem in multiple drives.
F	<p>Drive Fiber Cable error.</p> <p>The Fibre Channel drive does not detect light or a related diagnostic failed to detect light through the fiber optic connection to the drive.</p> <ul style="list-style-type: none"> • Verify the fiber cables and connections between the drive and the host are the correct type and are working properly. Verify all equipment and devices are powered ON. • Verify the configuration settings for the drive are set correctly and are compatible with the topology of the network. • Verify that the host fiber adapter and port are working properly and are compatible with the topology of the network. • Verify that the Fibre Channel switch ports are working properly and are compatible with the topology of the network. • Verify that the fiber cable is connected to Port A (0) of the drive. • Verify that Port A (0) on the Fibre Channel drive is working properly by using ITDT to run the "Function Code 6: Run Host Interface Wrap Test."
J	<p>Incompatible Media.</p>

Code	Cause and Solution
	The drive determined that incompatible media has been loaded into the drive.
u	Firmware update is in progress.
b, c, H, h, n, o	<p>Reserved or not actively in use, or no error or message assigned.</p> <p>There may be a problem with the SCD. Reset the drive and determine whether all segments on the SCD are lit.</p> <ul style="list-style-type: none">• If they are lit, confirm that the drive is using the current firmware version (see Drive Firmware Update on page 131) and update the firmware if necessary.• If the problem persists, contact Spectra Logic Technical Support.
...	The message display has lost communication with the drive. This message appears on Line 2 of the message display. Three dots may occasionally display during normal processing.

APPENDIX C - SPECIFICATIONS

This appendix provides specifications for the Cube, as well as the drives and media used in the library:

Library Specifications	196
Data Storage Capacity	196
Size and Weight	197
Service Access Requirements	199
Shipping Size and Weight	199
Power Specifications	200
Environmental Specifications	203
Shock and Vibration Specifications	205
Interface Specifications	206
Component Interface Connectors	206
Network Interface Cable Requirements	206
Universal Serial Bus (USB) Support	208
NDMP Support	208
Tape Drive and Media Specifications	209
LTO Tape Drive Specifications	209
Drive-Based Encryption Highlights	213
Tape Media Specifications	213
Barcode Label Specifications	216
Interoperability and Software Compatibility	220

Note: The specifications in this chapter are subject to change without notice.

LIBRARY SPECIFICATIONS

The following sections provide detailed specifications for the library including data storage capacity, library size and weight, space requirements, power specifications, environmental specifications, and shock and vibration specifications.

Data Storage Capacity

The Cube provides flexible storage capacity that expands from a minimum of one storage chamber up to the maximum storage capacity of the library. The capacity specifications in this section assume that only one type of drive is installed in the library. When using mixed drives and media, the library's capacity depends on the number of drives and slots, and the type(s) of drives and media used.

Drive Type	Slots	Native Capacity	Compressed Capacity
LTO-6	1670	4,175 TB	10,437 TB
LTO-7	1670	10,020 TB	25,050 TB
LTO-7 Type M	1670	15,030 TB	37,575 TB
LTO-8	1670	20,040 TB	50,100 TB
LTO-9	1670	30,060 TB	75,150 TB
LTO-10	1670	50,100 TB	125,250 TB

Size and Weight

The following table shows the size and weight specifications for the library frame and other components.

- Notes:**
- All dimensions and weights are approximate.
 - To calculate the approximate weight of a loaded library, use the weight of the library frame and then add the weight for each drive, power supply, library module, and the weight of each TeraPack magazine full of cartridges.
 - When calculating space requirements, include the service access requirements described in [Service Access Requirements on page 199](#).

Parameter	Specification
Height ^a	79.4 in. (201.7 cm)
Width	35.9 in. (91.2 cm)
Depth	45.4 in. (115.3 cm)
Weight ^b	885 lb (401.4 kg)
Each drive (in drive sled)	<ul style="list-style-type: none"> • LTO-6: 11.0 lbs (5.0 kg) approximately. • LTO-7: 11.0 lbs (5.0 kg) approximately. • LTO-8: 11.0 lbs (5.0 kg) approximately. • LTO-9: 11.0 lbs (5.0 kg) approximately. • LTO-10: 11.0 lbs (5.0 kg) approximately. • Contact Spectra Logic Professional Support for exact numbers.
Each TeraPack magazine	With ten LTO cartridges: 5.1 lb (2.3 kg)
Each Module (LCM, Power Management Module, Ethernet Switch)	<ul style="list-style-type: none"> • LCM: 7.3 lbs (3.3 kg) • Ethernet Switch: 5.2 lbs (2.4 kg) • Power Management Module: 4.5 lbs (2 kg)
Each power supply	7.9 lbs (3.6 kg) estimated. Contact Spectra Logic for an exact weight.
Top Rack	Height <ul style="list-style-type: none"> • 44.3 in (112.5 cm) Width

^aThe height of the library can be adjusted to allow for leveling on uneven floors.

^bWeight with no drives or media installed.

Parameter	Specification
	<ul style="list-style-type: none"><li data-bbox="500 268 743 302">• 35.8 in (90.9 cm) Depth <ul style="list-style-type: none"><li data-bbox="500 365 732 399">• 7.2 in (18.3 cm) Unloaded Weight <ul style="list-style-type: none"><li data-bbox="500 462 727 495">• 40 lbs (18.1 kg)

Service Access Requirements

Side Access Requirement

There is no side access requirement and other equipment can be located directly on both sides of the Cube library.

Minimum Front and Back Access Requirements

A minimum of 2 feet (0.6 m) of clearance at the front and back of the library frame is required for airflow and service and operator access.

The library depth is 3.8 feet (1.2 m). The depth for the library frame plus the 2 feet (0.6 m) of required access space front and back is 7.8 feet (2.4 m).



IMPORTANT

A minimum of 2 feet (0.6 m) of clearance at the front and back of the library frame is required for airflow and accessibility.

Recommended Front and Back Access Requirements

Spectra Logic recommends providing 3 feet (0.9 m) of clearance at the front and back of the library frame.

The library depth is 3.8 feet (1.2 m). The depth for the library frame plus the 3 feet (0.9 m) of recommended access space front and back is 9.8 feet (3.0 m).

Shipping Size and Weight

The following table provides the approximate dimensions and weights of the pallet and boxes used to ship the library.

	Height	Width	Depth	Weight
Crated Frame ^a	7.2 ft (2.2 m)	4.3 ft (1.3 m)	3.5 ft (1 m)	1177 lbs (534 kg)

^a Each frame is shipped in a separate crate. The accessory box might ship with the main frame.

	Height	Width	Depth	Weight
Component Pallet a, b	1 ft (0.3 m)	4.3 ft (1.3 m)	3.5 ft (1 m)	120 lbs (54 kg)
Ramp	0.6 ft (0.18 m)	6.6 ft (2 m)	3.4 ft (1 m)	70 lbs (31 kg)

Power Specifications

This section describes the power specifications for the library.

Input Power Requirements

The library frame includes two or three AC power modules in a redundant power configuration. With drive quantity 0 - X there are two power supplies and with drives x - 30 there are three power supplies.

For additional protection, connect the input on each power module to a separate branch circuit, which allows for failover in the event of a power failure in one of the circuits.

Power Cord Specifications

The power cords included with the library are considered part of the library and are not intended for use with any other equipment. See [Supply-End Connector Types on page 202](#) for the different types of cords available from Spectra Logic.

- Notes:**
- The supply-end connector is considered the disconnect for the unit. Make sure that the socket-outlet for the AC connection is in an accessible location near the library.
 - The power cord must meet the specifications for the country where the library is installed.

a Assumes multiple components are shipped together on a single pallet. Components may also be shipped individually.

b The size and weight of the component pallet depends on the number and type of components shipped. To calculate the approximate weight of all the components, add 12 lb (5.4 kg) for each drive, 5 lb (2.3 kg) for each TeraPack magazine full of media, and 4 lb (1.8 kg) for each power supply.

North America and Korea 200–240 VAC Power Cord

The criteria for a 200-volt to 240-volt AC power cord in North America and Korea are as follows:

Parameter	Specification
Power cordage	SJT type, three-conductor, 14 AWG minimum ^a
Power input connectors	<ul style="list-style-type: none"> • Male: Connector must be of the proper type, rating, and safety approval (see Supply-End Connector Types on the next page). • Female: IEC 60320 C19

International 200–240 VAC Power Cord



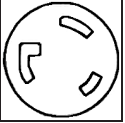



The criteria for an international 200-volt to 240-volt AC power cord are as follows:

Parameter	Specification
Power cordage	Flexible, HAR (harmonized) type H05VV-F, three conductor, cord with minimum conductor size of 1.7 square millimeters (0.0026350 square inches).
Power input connectors	<ul style="list-style-type: none"> • Male: Connector must be of the proper type, rating, and safety approval for the intended country (see Supply-End Connector Types on the next page). • Female: IEC 60320 C19

^a Power cord must comply with local electrical code.

Supply-End Connector Types

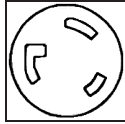The supply-end connector on the cord depends on the country where the library will be installed. The following table shows the supply-end connector types used in each country.

Part Number	Country of Use	Plug Style	Length	Appearance	
9594	North America, Korea	NEMA L6-20P	14.8 ft (4.5 m)		
7029	North America, Korea	NEMA L6-30P	14.8 ft (4.5 m)		
6807	Japan	NEMA L6-20P	13.9 ft (4.24 m)		
8665	United Kingdom, Continental Europe	IEC 60309	15 ft (4.6 m)		

Power Consumption and Cooling Requirements

The power and cooling requirements for the library depend on the number and type of drives installed. The following table provides the maximum power consumption and heat load for the base library frame and for each additional component added to the base library frame. Use this information to calculate the total maximum power consumption and heat load values, which can be used to build a power budget for the library.

All values are measured at the AC input and include power supply efficiency. The values are averages of observed hardware. In general, the lighter the load on the power supplies, the less efficient they are. The power supply efficiency in turn affects the power draw of all components.

Component	Power Consumption (watts)	Heat Load, Continuous (BTU/hour)
Library frame ^a	478	1630
LCM	40	136
Ethernet Switch	25	85
LTO-10 Fibre Channel or SAS Full-Height	• Read/write: 40	Read/write: 136
LTO-10 Fibre Channel or SAS Half-Height	• Read/write: 40	Read/write: 136
LTO-9 Fibre Channel or SAS Full-Height	• Read/write: 35	Read/write: 119
LTO-9 Fibre Channel or SAS Half-Height	• Read/write: 35	Read/write: 119
LTO-8 Fibre Channel Full-Height	• Read/write: 40 • Idle: 15 ^b	Read/write: 136
LTO-8 Fibre Channel or SAS Half-Height	• Read/write: 43 • Idle: 14 ^b	Read/write: 146
LTO-7 Fibre Channel Full-Height	• Read/write: 31 • Idle: 20 ^b	Read/write: 106
LTO-7 Fibre Channel or SAS Half-Height	• Read/write: 31 • Idle: 20 ^c	Read/write: 106
LTO-6 Fibre Channel Full Height	• Read/write: 28 • Idle: 8 ^b	Read/write: 95

Environmental Specifications

This section describes environmental specifications for the library. Do not place the library on a carpeted floor or anywhere else that poses risk for static discharge that could damage the library and its drives.

^a No drives or components installed. Includes internal fans, robotics, and electronic boards.

^b No cartridge loaded.

CAUTION The library must be installed on a level, hard-surfaced floor such as cement or tile. Never install it on carpeted flooring.

The library is equipped with internal fans. The fans keep the library’s internal temperature within specifications as long as the data center environment is within specifications.

CAUTION When the library is moved from a cold environment to a warm environment, it should not be powered on for at least 24 hours. This adjustment period prevents condensation damage.

The following tables list the general environmental specifications for the library.

Allowable Operating Environmental Specification ^a	
Ambient temperature	60° F to 90° F (16° C to 32° C)
Humidity	20% to 80% (non-condensing) 71.6° F (22° C) dew point maximum
Maximum humidity change rate	5% per hour with no condensation
Maximum temperature change rate	9° F per hour (5° C per hour), (non-condensing)
Altitude	Sea level to 10,000 ft (3,048 m)

Recommended Operating Environmental Specification ^b	
Ambient temperature	60° F to 77° F (16° C to 25° C)
Humidity	20% to 50% (non-condensing) 71.6° F (22° C) dew point maximum
Maximum humidity change rate	5% per hour with no condensation
Maximum temperature change rate	9° F per hour (5° C per hour), (non-condensing)
Altitude	Sea level to 10,000 ft (3,048 m)

^aThe temperature and humidity must be allowed to stabilize in the specified ambient environment for 24 hours.

^bThe temperature and humidity must be allowed to stabilize in the specified ambient environment for 24 hours.

Storing ^a and Shipping (Non-Operating) Environment Specification	
Humidity	10% to 95% (non-condensing)
Temperature	-40° F to 149° F (-40° C to 65° C)
Altitude	Sea level to 40,000 ft (12,192 m)

Shock and Vibration Specifications

The library will operate normally after experiencing shock loads as specified in the following table. The operating shock levels indicate how much shock the library can withstand while the enclosed drives are reading and writing data. The non-operating and storage shock levels indicate how much shock the library can withstand when it is not operating. After experiencing this amount of shock, the library will operate normally.

Specification	Operating	Storing and Shipping (Non-Operating Environment) ^b
Shock	2 g pk ½ sine wave for 10 msec (3 axes, 2 shocks per axis, minimum)	2 g pk ½ sine wave for 10 msec (3 axes, 2 shocks per axis, minimum)
Vibration (Swept Sine)	5 Hz – 500 Hz – 5 Hz 5 – 22 Hz, 0.01-inch DA displacement 22 – 500 Hz, 0.25G pk @ ½ octave (minimum three axes)	5 Hz – 500 Hz – 5 Hz 5 – 31 Hz, 0.02-inch DA displacement 31 – 500 Hz, 1G pk @ ½ octave (minimum three axes)
Vibration (Random)	0.5 Grms, 0 – 3000 Hz (single axis)	1 – 200 Hz @ 1.156 Grms. Bottom face only for 60 minutes.

^aThe library is in its original packaging. The packaging is designed to protect the library from condensation caused by extreme temperature variations of 27° F (15° C) or more. When the library is moved from a cold storage environment to a warm operating environment, it must be acclimated in its packaging for at least 24 hours before opening to prevent serious condensation damage from occurring.

^b Specifications are for the library in its original packaging.

INTERFACE SPECIFICATIONS

This section provides information about the interfaces used to connect the library and tape drives to the host systems. It also provides information about the Ethernet interface used to access the library's LumOS web interface.

Direct-attached tape drives have a native Fibre Channel or SAS interface; direct-attached SCSI drives are not supported.

For information about how IBM drives support SAS communications, refer to the tape drive documentation, available from IBM at ibm.com/support/knowledgecenter/.

Component Interface Connectors

Component	Physical Interface
Drive, direct-attached Fibre Channel	Two dual port multimode optical LC connectors ^a
Drive, direct-attached SAS - LTO-6 through LTO-8	Two SFF-8088 connectors
Drive, direct-attached SAS - LTO-9 and LTO-10	Two SFF-8644 connectors

Network Interface Cable Requirements

The type of cables required to connect the library and its drives to the network depend on the type of interface being used.

Library Access

Provide a Category 5 (10/100/1000 Base-T connection) data-grade Ethernet cable that is compliant with EIA/TIA 568 from an active Ethernet network to be connected to an Ethernet port on the LCM (each Ethernet port is a pin-through-hole RJ-45 shielded connector) to support remote access to the library's LumOS user interface and to allow the library to automatically email notifications to users.

CAUTION Some port scanning software can interfere with remote library sessions.

^a Only one port at a time can be used to connect the drive to a Fibre Channel network. If desired, the two ports can be used to create a failover configuration.

Tape Drive Access

- **Fibre Channel**

Provide one optical fiber cable from the arbitrated loop or switched fabric, to a Fibre Channel port on each drive, to provide the hosts with access to the partitions. Depending on the wavelength, the cables must comply with the following specifications in the Fibre Channel standard (FC-PI-2):

- **50-micron**—400-M5-SN-I classification
- **62.5 micron**—400-M6-SN-I classification (not supported for LTO-6 or later generation drives)

Use the following table to determine the maximum length for an M5 cable.

Data Rate / Link Speed	M5 (OM2) cable	M5E (OM3) cable	M5F (OM4) cable
1 Gbps	1640 ft (500 m)	Not Specified	Not Specified
2 Gbps	984 ft (300 m)	Not Specified	Not Specified
4 Gbps	492 ft (150 m)	1247 ft (380 m)	1312 ft (400 m)
8 Gbps	164 ft (50 m)	492 ft (150 m)	623 ft (190 m)

- **Serial Attached SCSI (SAS)**

SAS tape drives support the point-to-point Serial Attached SCSI protocol.

- **LTO-7 and LTO-8** - Connecting these drives to the host network requires an SFF-8088 SAS cable rated for 6 Gb/second that does not exceed 13 feet (4 m).
- **LTO-9 and LTO-10** - Connecting these drives to the host network requires an SFF-8644 SAS cable rated for 12 Gb/second that does not exceed 13 feet (4 m).

Universal Serial Bus (USB) Support

Spectra Logic supports using the USB ports on the LCM for the following:

- USB storage devices
- Keyboards
- Pointer devices (for example, a computer mouse)
- External Drives (HD, CD, DVD, and Flash) with a USB interface



IMPORTANT The library only recognizes FAT-formatted, not NTFS-formatted, USB devices.

NDMP Support

Spectra Logic tape libraries are compatible with local, remote, and three-way NDMP (Network Data Management Protocol) topologies, where the tape library is connected to the NDMP data mover host over Fibre Channel.

TAPE DRIVE AND MEDIA SPECIFICATIONS

This section provides the basic specifications for the tape drives and media supported by the library.

- Notes:**
- The specifications in this section are provided for convenience only. Refer to the tape drive documentation for the most current specifications (see [LTO Ultrium Tape Drives on page 16](#)).
 - The specifications in this section are subject to change without notice.

LTO Tape Drive Specifications

This section provides specifications for the LTO drives supported by the library. See [Tape Media Specifications on page 213](#) for information about the media used in the library.

Note: LTO drives and media are also referred to as Ultrium or LTO Ultrium drives and media.

LTO-10 Drive

When connecting to a Fibre Channel network, LTO-10 Fibre Channel drives will attempt to connect at 32 Gb/second, but will auto-negotiate down depending on the requirements of the port to which the drive is connected.

LTO-10 SAS drives attempt to connect at 12 Gb/second, but auto-negotiate down to 6 Gb/second or 3 Gb/second, depending on the requirements of the port to which the drive is connected.

Parameter	Specification
Maximum sustained transfer rate ^a , ^b	400 MB/second, native 1000 MB/second, compressed SAS 1200 MB/second, compressed Fibre
Speed matching range	157 MB/second to 407 MB/second
Average space record time	45 seconds
Encryption capability	AES 256-GCM

a Assuming a 2.5:1 compression ratio. Compression throughput depends on the type of data.

b This is a per-drive value. Total sustained transfer rate for the library depends on the number of drives installed in the library.

Parameter	Specification
WORM capability	Yes
MTBF	250,000 hours at 100% duty cycle
Uncorrected error rate, calculated	1×10^{-19} bits
Power consumption	Read/write: 39.8 watts typical Idle: 27.5 watts (empty drive)

LTO-9 Drive

When connecting to a Fibre Channel network, LTO-9 Fibre Channel drives will attempt to connect at 8 Gb/second, but will auto-negotiate down to 4 Gb/second, or 2 Gb/second, depending on the requirements of the port to which the drive is connected.

LTO-9 SAS drives attempt to connect at 12 Gb/second, but auto-negotiate down to 6 Gb/second or 3 Gb/second, depending on the requirements of the port to which the drive is connected.

Parameter	Specification
Maximum sustained transfer rate ^a ^b	400 MB/second, native 900 MB/second, compressed SAS 700 MB/second, compressed Fibre
Speed matching range	177 MB/second to 400 MB/second
Average space record time	TBD
Encryption capability	AES 256-GCM
WORM capability	Yes
MTBF	250,000 hours at 100% duty cycle
Uncorrected error rate, calculated	1×10^{-20} bits
Power consumption	Read/write: 34 watts typical Idle: TBD

^a Assuming a 2.5:1 compression ratio. Compression throughput depends on the type of data.

^b This is a per-drive value. Total sustained transfer rate for the library depends on the number of drives installed in the library.

LTO-8 Drive

When connecting to a Fibre Channel network, LTO-8 Fibre Channel drives will attempt to connect at 8 Gb/second, but will auto-negotiate down to 4 Gb/second, or 2 Gb/second, depending on the requirements of the port to which the drive is connected.

LTO-8 SAS drives attempt to connect at 6 Gb/second, but auto-negotiate down to 3 Gb/second or 1.5 Gb/second, depending on the requirements of the port to which the drive is connected.

Parameter	Specification
Maximum sustained transfer rate ^a ^b	360 MB/second, native 750 MB/second, compressed
Speed matching range	112 MB/second to 360 MB/second
Average space record time	59 seconds
Encryption capability	AES 256-GCM
WORM capability	Yes
MTBF	250,000 hours at 100% duty cycle
Uncorrected error rate, calculated	1×10^{-19} bits
Power consumption	Read/write: 40 watts typical Idle: 15 watts

LTO-7 Drive

When connecting to a Fibre Channel network, LTO-7 Fibre Channel drives will attempt to connect at 8 Gb/second, but will auto-negotiate down to 4 Gb/second, or 2 Gb/second, depending on the requirements of the port to which the drive is connected.

LTO-7 SAS drives attempt to connect at 6 Gb/second, but auto-negotiate down to 3 Gb/second or 1.5 Gb/second, depending on the requirements of the port to which the drive is connected

^a Assuming a 2.5:1 compression ratio. Compression throughput depends on the type of data.

^b This is a per-drive value. Total sustained transfer rate for the library depends on the number of drives installed in the library.

Parameter	Specification
Maximum sustained transfer rate ^a , ^b	300 MB/second, native 750 MB/second, compressed
Speed matching range	100 MB/second to 300 MB/second
Average space record time	56 seconds
Encryption capability	AES 256-GCM
WORM capability	Yes
MTBF	250,000 hours at 100% duty cycle
Uncorrected error rate, calculated	1×10^{-19} bits
Power consumption	Read/write: 31 watts typical Idle: 20 watts

LTO-6 Drive

When connecting to a Fibre Channel network, LTO-6 Fibre Channel drives will attempt to connect at 8 Gb/second, but will auto-negotiate down to 4 Gb/second, 2 Gb/second, or 1 Gb/second, depending on the requirements of the port to which the drive is connected.

Parameter	Specification
Maximum sustained transfer rate ^c , ^d	160 MB/second, native ^e 400 MB/second, compressed
Speed matching range	40 MB/second to 160 MB/second
Average space record time	77 seconds
Encryption capability	AES 256-bit
WORM capability	Yes

^a Assuming a 2.5:1 compression ratio. Compression throughput depends on the type of data.

^b This is a per-drive value. Total sustained transfer rate for the library depends on the number of drives installed in the library.

^c Assuming a 2.5:1 compression ratio. Compression throughput depends on the type of data.

^d This is a per-drive value. Total sustained transfer rate for the library depends on the number of drives installed in the library.

^e A 1 Gb interface speed will not stream an LTO-6 drive at 160 MB/second.

Parameter	Specification
MTBF	250,000 hours at 100% duty cycle
Uncorrected error rate	1 x 10 ⁻¹⁷ bits
Power consumption	Read/write: 28 watts typical Idle: 8 watts

Drive-Based Encryption Highlights

Key

AES-256 data encryption with a secret 256-bit encryption key is used to encrypt and decrypt data. The key is not retrievable from the encryption core and is automatically erased during the unload process; software is required to extract the key, keep it secure, and provide management tools to track, store, use, and delete keys as appropriate.

Note: Spectra SKLM key management is not compatible with BlueScale Encryption key management, because they cannot share encryption keys. Data encrypted using Spectra SKLM key management cannot be decrypted using BlueScale Encryption key management, and vice versa.

For more information about encryption, see the [Spectra Tape Libraries Encryption User Guide](#).

Tape Media Specifications

This section provides specifications for the tape media supported by the library.

Environmental Requirements

The following table lists the specifications for storage temperature and other environmental requirements for tape media. Do not allow the temperature and humidity in the storage environment to fluctuate.

Specification	Recommended Operating	LTO-9 and LTO-10 Allowable Operating ^a	LTO-8 and Lower Allowable Operating ^a	Shipping ^b
Temperature	59° F to 77° F (15° C to 25° C)	59° F to 95° F (15° C to 35° C)	50° F to 113° F (10° C to 45° C)	-9° F to 120° F (-23° C to 49° C)

^a The upper limit applies to the media, not the library. Be sure there is adequate air flow around the library at all times.

^b When media is moved from a cold shipping/storage environment to a warm operating environment, it must be acclimated in its packaging for at least 24 hours before opening to prevent condensation damage from occurring.

Specification	Recommended Operating	LTO-9 and LTO-10 Allowable Operating ^a	LTO-8 and Lower Allowable Operating ^a	Shipping ^b
Relative humidity	20% to 50%	10% to 80%	10% to 80%	5% to 80%
Max dew point	72° F (22° C)	71.6° F (22° C)	79° F (26° C)	79° F (26° C)
Maximum humidity rate change	5% / hour with no condensation	5% / hour with no condensation	5% / hour with no condensation	
Maximum Altitude	10,000 ft 3048 m	10,000 ft 3048 m	10,000 ft 3048 m	40,000 ft 12192 m

LTO Media Specifications

The following table shows the capacities of the different generations of LTO Ultrium data cartridges.

LTO Media Generation	Native Capacity (Compressed Capacity) ^c
LTO-6 and LTO-6 WORM	2.5 TB (6.25 TB)
LTO-7 and LTO-7 WORM	6 TB (15 TB)
LTO-7 Type M	9 TB (22.5 TB)
LTO-8 and LTO-8 WORM	12 TB (30 TB)
LTO-9 and LTO-9 WORM	18 TB (45 TB)
LTO-10 and LTO-10 WORM	30 TB (75 TB)

LTO Read/Write Compatibility

The following table shows the media read/write compatibility for each LTO drive generation supported by the library.

^a The upper limit applies to the media, not the library. Be sure there is adequate air flow around the library at all times.

^b When media is moved from a cold shipping/storage environment to a warm operating environment, it must be acclimated in its packaging for at least 24 hours before opening to prevent condensation damage from occurring.

^c Assuming a 2.5:1 compression ratio. The compressed capacity depends on the type of data.

Drive Gen	LTO-4 Media	LTO-5 Media	LTO-6 Media	LTO-7 Media	M8 Media	LTO-8 Media	LTO-9 Media	LTO-10 Media
LTO-6	<i>Read only</i>	Read/write	Read/write	Not supported	Not supported	Not supported	Not supported	Not supported
LTO-7	Not supported	<i>Read only</i>	Read/write	Read/write	Not supported	Not supported	Not supported	Not supported
LTO-8	Not supported	Not supported	Not supported	Read/write	Read/write	Read/write	Not supported	Not supported
LTO-9	Not supported	Not supported	Not supported	Not supported	Not supported	Read/write	Read/write	Not supported
LTO-10	Not supported	Not supported	Not supported	Not supported	Not supported	Not supported	Not supported	Read/write

WORM Media

Certain records retention and data security applications require a Write Once, Read Many (WORM) method for storing data on tape. LTO-6 and later generation drives enable WORM support when a WORM tape cartridge is loaded into the drive.

WORM Media Requirements

Because standard read/write media are incompatible with the WORM feature, a specially formatted WORM tape cartridge is required. Each WORM cartridge has a unique, worldwide cartridge identifier (WWCID), which comprises the unique CM chip serial number and the unique tape media serial number.

Data Security on WORM Media

Certain built-in security measures help ensure that the data written on a WORM cartridge does not become compromised, for example:

- The format of a WORM tape cartridge is unlike that of standard read/write media. This unique format prevents a drive that lacks WORM-capable firmware from writing on a WORM tape cartridge.

- When the drive senses a WORM cartridge, the firmware prohibits the changing or altering of user data already written on the tape. The firmware keeps track of the last appendable point on the tape.

Cleaning Cartridges

Cleaning cartridges are valid for 50 uses. Do not rewind and reuse the material in a cleaning cartridge. Reusing the material may redistribute contaminants previously removed from the tape path. If all of the cleaning material has been used, discard the cartridge and use a new cleaning cartridge.

Barcode Label Specifications

Symbology

The barcode labeling scheme used on Spectra Logic certified media uses the barcode symbology of USS-39. You can obtain a complete description and definition of this symbology from the *Automatic Identification Manufacturers (AIM) specification*, the *Uniform Symbol Specification (USS-39)*, and the *ANSI MH10.8M-1993 ANSI Barcode* specification.

Application and Orientation

The barcode label must be applied to the cartridge so that it fits within the label recess on the edge of the cartridge without curling up on the sides or ends. The label must be oriented so that the barcode characters are along the edge closest to the hub side of the cartridge.

Printed Characters

The label can have human-readable alphanumeric characters printed along the top or bottom edge of the label provided there is no conflict or interference with the automation code. This text must include the barcode data, but can also include additional text. The format and colors of the human readable characters is up to the customer and label vendor. For location restrictions, see [Detailed Specifications for LTO Cartridge Barcodes on page 218](#) .

Note: When using barcode labels with alphanumeric characters along the bottom edge, the label must be positioned so that barcode is at least 13.72 mm below the top edge of the cartridge to ensure that the barcode reader can read the label.

Barcode Data

The library supports barcode data strings consisting of from 1 to 16 characters, including an optional checksum character. Quiet zones precede and follow the start and stop characters.

The barcode data string on standard Spectra Logic barcode labels consists of a start character, eight alphanumeric characters, a checksum character, and the stop character. Quiet zones precede and follow the start and stop characters.

- The first six (6) characters following the start character can be any combination of upper case A-Z or 0-9 (for example, ABC123) to identify the cartridge Volume Serial Number. The use of "CLN" and "DG{space}" at the beginning of the volume identifier is reserved.
 - The volume identifier "CLNvnn" is reserved for cleaning cartridges. When a drive requires cleaning, it requests a specific type of cleaning cartridge.
 - The "v" field is an alphanumeric field to identify cleaning cartridge applications, "U" for Universal Cleaning Cartridges or a drive unique identifier.
 - The "nn" alphanumeric field is used to track individual cleaning cartridge activity (that is, usage and life).
 - The volume identifier "DG{space}vnn" is reserved for diagnostic and service cartridges.
 - The last two (2) characters are the media identifier and indicate the cartridge Media Type (for example, "L" for LTO and "6" for an LTO-6 cartridge). In IBM LTO tape drives, the value of the media identifier on cleaning cartridges is ignored, although a valid value must be present.
 - The barcode string can be printed in either direction on the label and must begin and end with a valid start/stop character (*).
 - The label must be printed so that barcode data is positioned along the edge of the label that will be closest to the hub side of the cartridge.

The *AIM Uniform Symbol USS-39* specification provides detailed information about the format of the start character, the series of characters that make up the barcode data, the optional checksum character, and the stop character.

Detailed Specifications for LTO Cartridge Barcodes

Figure 112 shows the dimensional specifications for LTO labels with the alphanumeric characters above the barcode.

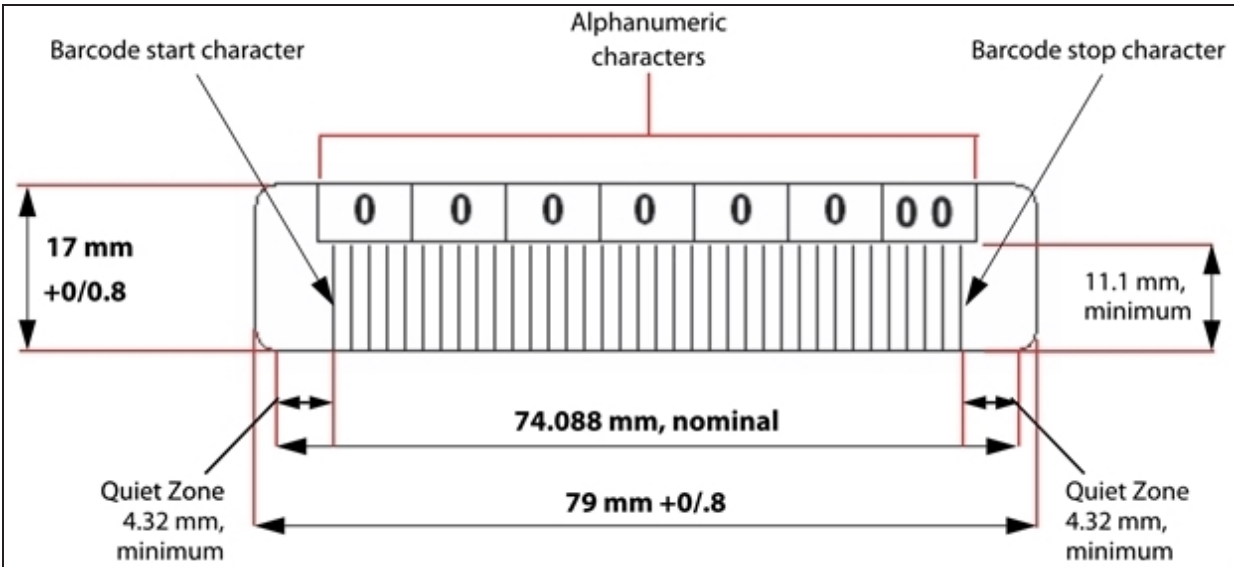


Figure 112 Barcode specifications for LTO media; alphanumeric characters on top.

Note: When using barcode labels with alphanumeric characters along the bottom edge, the label must be positioned so that barcode is at least 13.72 mm below the top edge of the cartridge to ensure that the barcode reader can read the label.

LTO Barcode Element Specifications

For the official IBM barcode label specification, see ibm.com/support/pages/node/651699. Unless otherwise specified, tolerances are X.XXX ± 0.127 mm, X.XXX ± 0.762 mm.

- Minimum symbol height is 11.1 mm, measured to the inside of the label's edge.
- The wide-to-narrow ratio is 2.75.
- The narrow element width is 0.432 mm +0.03 mm or -0.076 mm.
- The nominal width of the wide spaces and bars is 1.188 mm.
- The inter-character gap is 0.432 mm +0.03/-0.076 mm.
- The minimum quiet zone at the beginning and end of a printed barcode string is 4.32 mm (10 times the narrow element width).
- The total nominal barcode string length (including quiet zones) is 74.088 mm.
- The edge of the barcode is the edge of the printed area associated with the bar. The edge roughness is the transition encountered as a horizontal line is moved vertically from all black to all white. The edge roughness maximum is 0.038 mm.
- Variation between all bars, white and black, must be less than ±0.0381 mm.

LTO Physical Label Specifications

- Label stock must fit within the label recess on the face of the cartridge without curling up on the sides or ends (79 mm X 17 mm +0/-0.8).
- Minimum length sufficient for the quiet zones, start-stop, and data characters (nominal 74.088 mm).
- Minimum width no less than 1.5 mm narrower than the cartridge label recess width. Corners are cut with a 1.5 mm radius.
- Maximum label thickness, including the RFID tag, if present, together with any associated layers and adhesives cannot exceed 0.40 mm.
- The label and adhesive must have an environmental performance to match or exceed the environmental specifications of the cartridge to which it is applied.

INTEROPERABILITY AND SOFTWARE COMPATIBILITY

You can find complete interoperability listings, as well as a list of the types of software that have been tested and proven compatible with the library on the Spectra Logic website at spectralogic.com/compatibility.

APPENDIX D - REGULATORY & SAFETY STANDARDS

The Spectra Cube complies with the safety and regulatory agency standards listed below when installed by a Spectra Logic certified engineer or third-party provider.

Contact Spectra Logic for regulatory and safety standard information.

EU Declaration of Conformity	222
Emission Standards	223
Safety Standards and Compliance	224
Nemko Accreditation	225
Environmental Regulations	226
Conflict Minerals Policy	227

EU DECLARATION OF CONFORMITY



Document # 99100005 V1.1

DECLARATION OF CONFORMITY
According to ISO/IEC 17050-1:2004



Manufacturer's Name: Spectra Logic Corporation
Manufacturer's Address: 6285 Lookout Road, Boulder CO,80301

Declares under sole responsibility that the product as delivered by Spectra Logic.

Product Name: CUBE
Model Number: CUBE

Product options: This declaration covers all options of the above product(s)

Complies with the essentials of the following European Directives, and carries the CE marking accordingly:

Safety
Directive: 2014/35/EU IEC 62368-1:2018 (Third Edition)
EN 62479:2010

Electromagnetic Compatibility
Directive 2014/30/EU EN 55032:2015 + A11:2020
EN 55035:2017 + A11:2020 EN 61000 3-2:2014
EN 61000 3-3:2013

Restriction of the use of certain hazardous substances
IEC 63000 / EN 50581-2012 EN 62321
(EC)1907/2006 REACH 2015/863/EU RoHS
2012/19/EU WEEE

Mike Beaty

VP, Operations
March 2, 2026

6285 Lookout Road
Boulder, CO 80301

www.SpectraLogic.com
+1 303-449-6400 Worldwide
+1 800-833-1132 US/Canada

EMISSION STANDARDS

The Spectra Cube complies with the following domestic and international emission standards.

- Directive 2014/30/EU
- EN 55032:2015 + A11:2020
- EN 55035:2017 + A11:2020
- EN 61000 3-2:2014
- EN 61000 3-3:2013

FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to CFR 47, Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

Korean Notice

기종별	사용자안내문
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

SAFETY STANDARDS AND COMPLIANCE

Product Safety Standards

The Spectra Cube complies with the following domestic and international product safety standards.

- Directive: 2014/35/EU
- IEC 62368-1:2018 (Third Edition)
- EN 62479:2010

Laser Warning

IBM Tape Drives

A Class 1 laser assembly, in the optical transceiver, is mounted on each IBM tape drive Fibre Channel electronics card. This laser assembly is registered with the DHHS and is in compliance with IEC825.

These products contain components that comply with performance standards that are set by the U.S. Food and Drug administration. This means that these products belong to a class of laser products that do not emit hazardous laser radiation. This classification was accomplished by providing the necessary protective housings and scanning safeguards to ensure that laser radiation is inaccessible during operation or is within Class 1 limits. External safety agencies have reviewed these products and have obtained approvals to the latest standards as they apply to this product type.

Spectra Logic QIP Controllers

The optical transceiver is a Class 1 Laser Product as defined by the international standard IEC 60825-1:1993+A1:1997+A2:2001 and by USA regulations for Class 1 products per CDRH 21 CFR 1040.10 and 1040.11. Laser emissions from Class 1 laser products are not considered hazardous when operated according to product specifications. Operating the product with a power supply voltage exceeding 4.0 volts may compromise the reliability of the product, and could result in laser emissions exceeding Class 1 limits.

NEMKO ACCREDITATION

The safety issues of this information technology equipment type have been evaluated by a government-accredited European third-party organization, such as Nemko.

This Mass Storage Device has been evaluated and determined to comply with the Safety Requirements of the International Standard for Information Technology Equipment, IEC/EN 60950-1, Second Edition. The evaluation was conducted by Nemko. Nemko participates in the CB Scheme as a National Certification Body certified by the IECEE.


ENVIRONMENTAL REGULATIONS

The Spectra Cube complies with the following domestic and international environmental regulations and directives.

Waste of Electronic and Electrical Equipment (WEEE) Directive

Note: For information on recycling your Spectra library, please check the Spectra Logic website. European Union users should contact their local waste administration for WEEE collection instructions for this product.

The WEEE symbol on the back of this product indicates that this product meets the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment, known as the WEEE directive. This directive, only applicable in European Union countries, indicates that this product should not be disposed of with normal unsorted municipal waste.

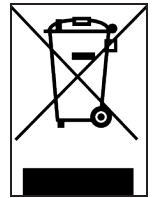

Within participating European Union countries, special collection, recycling, and disposal arrangement have been established for this product. At the end of life, the product user should dispose of this product using special WEEE collection systems. These special systems mitigate the potential affects on the environment and human health that can result from hazardous substances that may be contained in this product.

Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)

The RoHS marking indicates that this product is in compliance with European Council Directive 2011/65/EU RoHS, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



Measures for the Administration of the Control of Pollution by Electronic Information Products (China)

Recycling Your Library

For information on recycling your Spectra library, contact Spectra Logic Technical Support at: support.spectralogic.com/.

CONFLICT MINERALS POLICY

Spectra Logic is committed to complying with the OECD Due Diligence Guidance for Responsible Supply Chains of Minerals from Conflict-Affected and High-Risk Areas, as well as the applicable requirements of Section 1502 of the Dodd-Frank Act, which aims to prevent the use of minerals that directly or indirectly finance or benefit armed groups in the Democratic Republic of the Congo (DRC) or in adjoining countries (“conflict minerals”).

Affected suppliers to Spectra Logic will be required to commit to being or becoming “conflict-free” (which means that such supplier does not source conflict minerals) and sourcing, where possible, only from conflict-free smelters. Each affected supplier to Spectra Logic will be required to provide completed EICC-GeSI declarations evidencing such supplier's commitment to becoming conflict-free and documenting countries of origin for the tin, tantalum, tungsten, and gold that it purchases.

For more information on Spectra Logic's conflict minerals program contact conflictminerals@spectralogic.com.