


Spectra T200, T380, & T680 BlueScale Toolbar Option Map

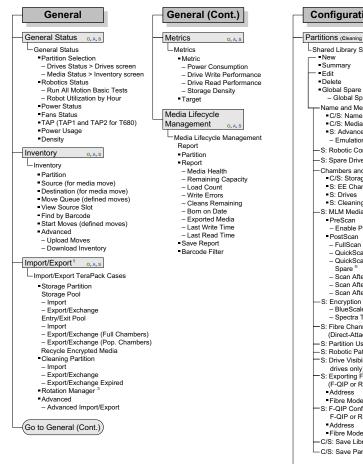


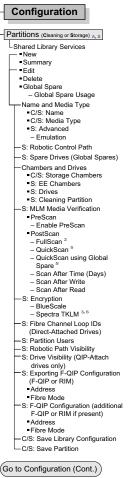

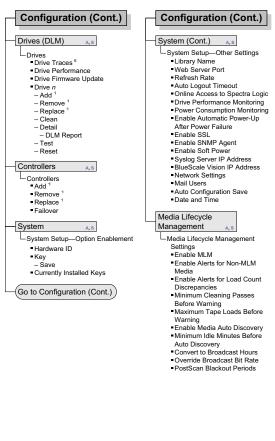





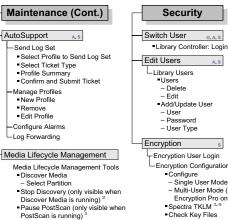

Manual PostScan

access only)

Delete MLM Records

Download MLM Database (remote

access only)

Download DLM Database (remote

-Encryption Configuration ■ Configure

— Single User Mode

— Multi-User Mode (BlueScale Encryption Pro only) Spectra TKLM 3,6 Check Key Files

■Import Key

- Moniker

Export Key

Library Name (remote access) 1) Available at the library's front panel touch screen only 2) Requires LTO-4 or later generation Fibre Channel drives 3) Only available with a purchased key. 4) Do not use any Advanced Utilities except those listed here unless instructed to do so by SpectraGuard® Support. 5) Requires LTO-5 or later generation Fibre Channel drives

Status Bar

threshold is reached)

System Messages Remote Support

System Status

HHM Notification (when maintenance

-BlueScale Vision Camera (when

-Library IP Address (local access)

Last Refresh (time and date)

BlueScale Software Version

Send AutoSupport Ticket > Send Log Set

6) Requires LTO-5 or later generation Fibre Channel or TS11x0 Technology Library user types: Superuser, Administrator, and Operator Feature Availability: This feature is available to this user type: S) Superuser - Controls all aspects of library use, configuration, and security. A) Administrator - Performs all actions except creating or editing library users and accessing encryption. O) Operator - Moves, imports, and exports media

This map is current for the BlueScale12.6.44 release. The BlueScale user interface changes as features are added or modified. Check support.spectralogic.com/documentation/user-guides/, or the Spectra T200, T380, & T680 Release Notes and Documentation Updates on the Technical Support Portal to see if you have the latest version of this document.

LIBRARY USER OVERVIEW

The library's BlueScale interface offers three types of user groups. The following table describes the types of privileges each user group has when operating the library.

User Type ^{a, b}	Responsibilities (See designation indicators in the map on page 1)	Default User Name
Superuser	Controls all aspects of library use, configuration, and security.	su
Administrator	Performs all operations except creating or editing library users and accessing encryption settings.	administrator
Operator	Performs daily operations (move, import, and export media).	operator

ADDITIONAL INFORMATION

Use the links in the following table to locate additional useful information.

Resource	Internet Address	Information	
Product Documentation ^a	support.spectralogic.com/documentation/	Related documentation in PDF format	
Technical Support Portal ^a	support.spectralogic.com	Provides access to the following resources: Knowledge Base articles and FAQs Support incident and service agreement management Library and tape drive firmware and drivers Professional Services requests Additional service and support tools	
Knowledge Base ^a	support.spectralogic.com/knowledge-base/	Helpful Knowledge Base articles and FAQs	
Compatibility	support.spectralogic.com/documentation/compatibility-matrices/	Compatibility matrices	
Options and Media	spectralogic.com/shop	Links for purchasing library accessories, such as Spectra Certified Media, barcode labels, media accessories, and air filters	
Contact	support.spectralogic.com/content/support-contact-info/	General Support contact information	
Warranty	support.spectralogic.com/services-and-contracts/master-services-agreement/	Warranty terms and conditions	

a. Requires a user account for full access. See the Mid-Range Tape Libraries: T200, T380, and T680 User Guide for detailed instructions.

TECHNICAL SUPPORT CONTACT INFORMATION

Spectra Logic Technical Support	Portal:	support.spectralogic.com	
	Location:	United States and Canada	Europe, Middle East, Africa
	Phone:	1.800.227.4637 (toll free US/Canada) or 1.303.449.0160	44 (0) 870.112.2150
	Location:	Mexico, Central and South America, Asia, Australia, and New Zealand	Deutsch Sprechende Kunden
	Phone:	1.303.449.0160	49 (0) 6028.9796.507 Email: spectralogic@stortrec.de

a. By default, passwords are not required.b. If encryption is enabled, there is an additional, separate encryption password for accessing the encryption features.